













# ASSEMBLY INSTRUCTION

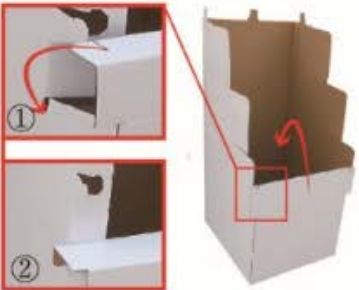


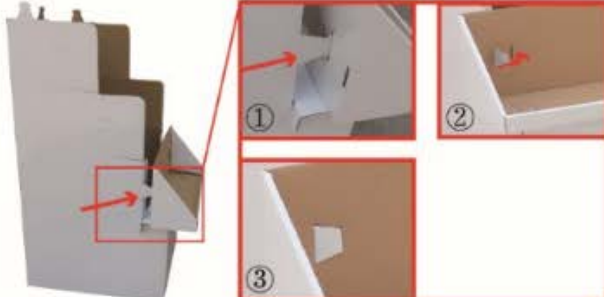


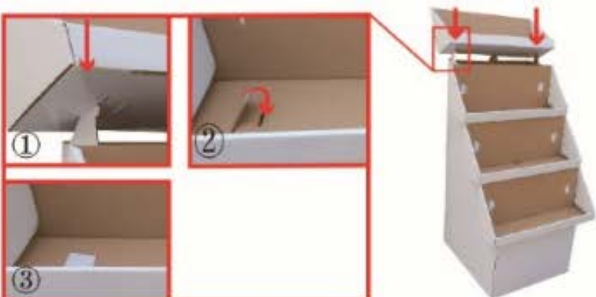
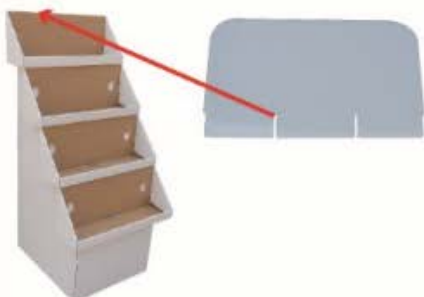

4TCBFDWT

<p>Accessories &amp; qtys;                  A. BASE: 1PCS                  B. SHELVES: 4PCS                  C. HAEDER: 1PCS</p>	<p>A</p> 	<p>B</p> 
	 <p>C</p>	

## STEPS

<p>1. FLAT SHELVES WITH REAR SIDE UP</p> 	<p>2. CLOSE SIDE TAPES</p> 	<p>3. CLOSE SIDE PANEL TOP AND FOLD IN</p> 
<p>4. CLOSE THE TOP HEIGHT</p> 	<p>5. SET UP THE TAP INTO TRAY BOTTOM SLOT</p> 	<p>6. READY FOR SHELF TRAY</p> 
<p>7. BASE FLAT</p> 	<p>8. FOLD IN 4 SIDES AT BASE BOTTOM</p> 	<p>9. LAY BASE ON FLOOR</p> 

## ASSEMBLY INSTRUCTION

<p>10. CLOSE THE FRONT TAP INTO THE SLOT LIKE IMAGE 2</p> 	<p>11. READY FOR BASE</p> 	<p>12. SET UP THE BOTTOM TRAY ON BASE</p> 
<p>13. CLOSE THE BASE TAP ONTO TRAY SLOT LIKE IMAGE 3</p> 		<p>14. THE SAME WAY TO SET UP 2 MIDDLE TRAYS</p> 
<p>15. READY TO SET UP TOP TRAY</p> 	<p>16. CLOSE THE TOP TRAP OF BOTTOM TO TOP TRAY SLOT</p> 	
<p>17. PUT THE HEADER SLOT ONTO TOP TRAY</p> 	<p>18. SET UP TOP HEADER</p> 	<p>OK</p> 