


Adjustable Round Chrome Clothing Rack (36" or 42")

CLR36RDN (36" Round)

CLR42RDN (42" Round)



Version 1.0

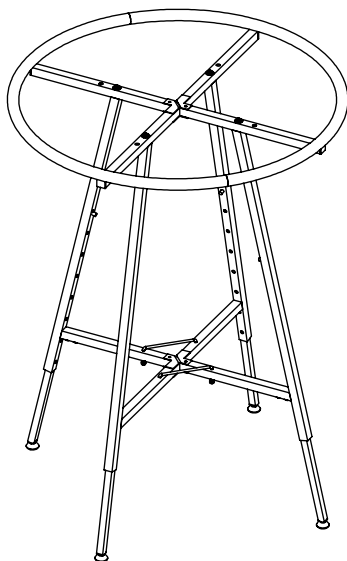

INCLUDED HARDWARE

4X 5/16"-18 x 1.5"
BUTTON HEAD
SCREW



12X 5/16" SPRING
LOCK WASHER



12X 5/16"
WASHER



8X 5/16"-18 x .5"
BUTTON HEAD
SCREW




LARGE ALLEN KEY



SMALL ALLEN KEY



2X HANG BAR
CONNECTOR TOP




2X HANG BAR
CONNECTOR BOTTOM



4X 1/4"-20 X 1.063"
SET SCREW


1a

UNFOLD THE LOWER X-BRACE. THIS
BRACE WILL BE SMALLER AND HAVE
SUPPORT WIRES ATTACHED.

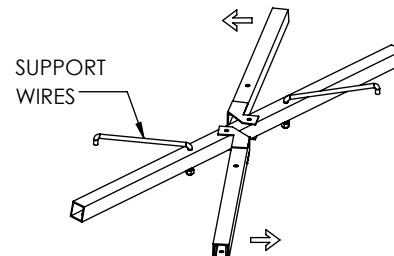


1b

PULL UP ON THE SUPPORT WIRES AND
INSERT THE END INTO THE HOLE ON THE
ADJACENT TUBE.

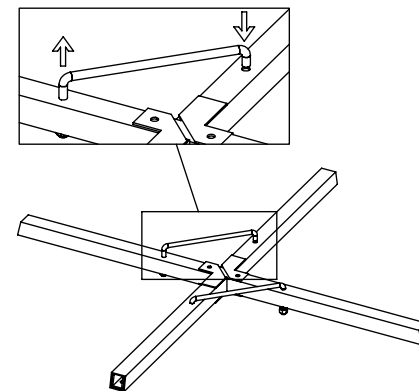


2a

ATTACH THE
LOWER LEGS TO
THE LOWER X-
BRACE WITH FLAT
WASHERS, LOCK
WASHERS, AND
THE SHORT BUTTON
HEAD SCREWS AS
SHOWN.

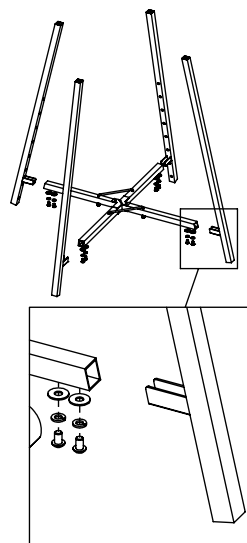


2b

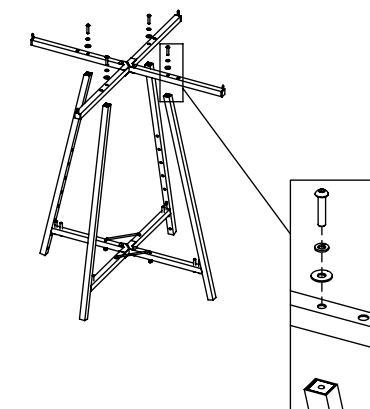


UNFOLD THE UPPER X-BRACE AND
SECURE TO THE LOWER LEGS WITH FLAT
WASHERS, LOCK WASHERS, AND THE
LONG BUTTON HEAD SCREWS AS
SHOWN.


3

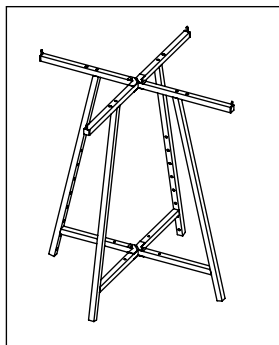

- FLIP OVER THE ASSEMBLY FROM THE PREVIOUS STEP. INSTALL THE ADJUSTABLE LEGS BY DEPRESSING THE PUSH BUTTONS AND INSERTING THEM INTO THE LOWER LEGS.
- SCREW THE LEVELERS ONTO THE ADJUSTABLE LEGS.
- THE COMPLETED FRAME CAN BE FLIPPED RIGHT SIDE UP.

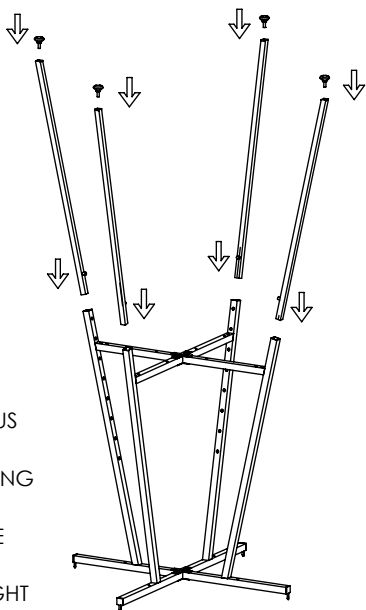


4

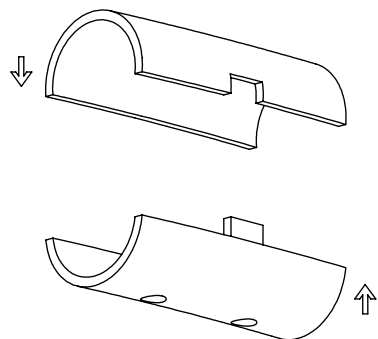


- TAKE A HANG BAR CONNECTOR TOP AND BOTTOM AND JOIN THEM TOGETHER SO THE TAB IS INSERTED INTO THE NOTCH.
- **NOTE: THEY ARE NOT MEANT TO LOCK TOGETHER.**

5

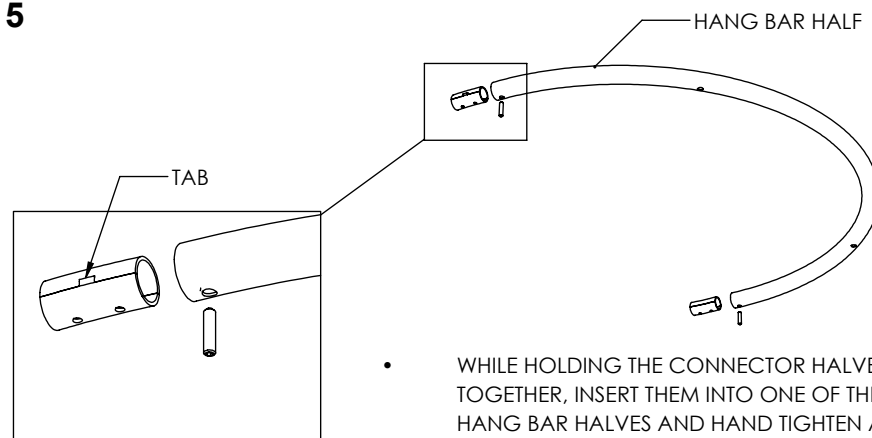


- WHILE HOLDING THE CONNECTOR HALVES TOGETHER, INSERT THEM INTO ONE OF THE HANG BAR HALVES AND HAND TIGHTEN A SET SCREW SO IT STAYS IN PLACE.
- REPEAT FOR THE OTHER CONNECTOR.
- **NOTE: THE CONNECTOR MUST BE INSERTED SO THE TAB IS FACING OUT. THIS WILL ENSURE THE CURVE OF THE CONNECTOR FOLLOWS THE CURVE OF THE HANG BAR.**

6

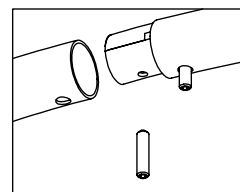

- SLEEVE THE REMAINING HANG BAR HALF ONTO THE EXPOSED CONNECTORS AND HAND TIGHTEN THE REMAINING SET SCREWS TO SECURE.
- ONCE ALL 4 SET SCREWS HAVE BEEN STARTED, TIGHTEN WITH THE SMALL ALLEN KEY UNTIL THE HANG BAR FEELS RIGID AND NO SET SCREW IS EXPOSED.

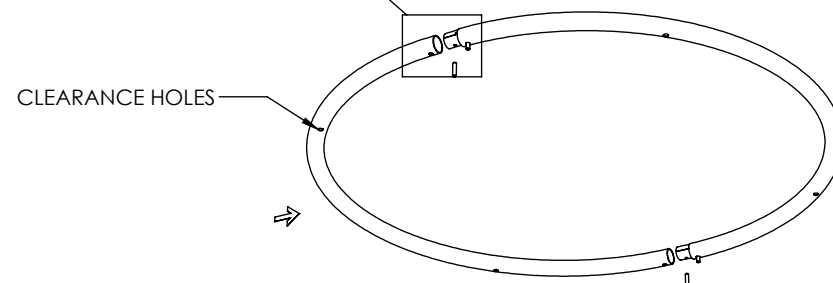

7

- INSTALL THE ASSEMBLED HANG BAR ONTO THE ASSEMBLED FRAME BY INSERTING THE THUMBNAILS ON THE UPPER X-BRACE INTO THE CLEARANCE HOLES.

