



DISPLAYS2GO

# iPad Mini Floor Stand with Rotating Acrylic Enclosure & Cord Management- White, Black/Clear

## Assembly Instructions

SKU: IPMSPCDBK, IPMSPAVSWC,  
IPMSPAVSWC, IPMSPCDBK

Scan the QR code  
to visit the product  
page.



# Components




| Part                     | Quantity |
|--------------------------|----------|
| <b>Rotating Bracket</b>  |          |
| Rotating Bracket         | 1        |
| M4x10 Screw              | 4        |
| M5x16 Screw              | 2        |
| Washer                   | 4        |
| Spacer (Large)           | 4        |
| Spacer (Small)           | 4        |
| Hex Wrench               | 1        |
| Wrench                   | 1        |
| <b>Floor Stand</b>       |          |
| Base                     | 1        |
| Pole                     | 1        |
| Pole Cover               | 1        |
| <b>Acrylic Enclosure</b> |          |
| Main Enclosure           | 1        |
| Enclosure Backer         | 1        |
| M5 Screw                 | 4        |
| M5 Lock Nut              | 4        |
| 10-32 Threaded Screw     | 4        |
| 3mm Hex Wrench           | 1        |
| 1/4" Foam Pad            | 4        |
| 3/16" Foam Pad           | 4        |

# Assembly

1. Twist the pole into the base.
2. Remove the plastic end caps from the bracket. Screw into the pole cover.
3. Adjust the tilt angle of the bracket with the wrench.
4. Replace plastic end caps.



5. Remove the Backer from the Main Enclosure, then attach the backer to the rotating bracket. Mate holes "A" or "B" with holes on the rotating bracket using M5 screws.
6. Place the iPad into the main enclosure. To hide the home button, rotate the iPad until the button is hidden by the plastic tab on the main enclosure.
- ① *Note:* Depending on the iPad model, you may need to ensure a tight fit by placing foam pads on each corner of the backer.
7. Attach the main enclosure to backer using the 10-32 threaded screws.
8. Feed the iPad charging cable through the cord management slots on the pole.

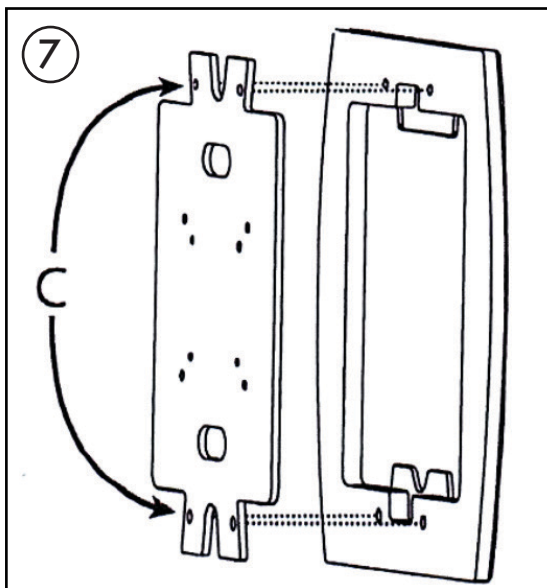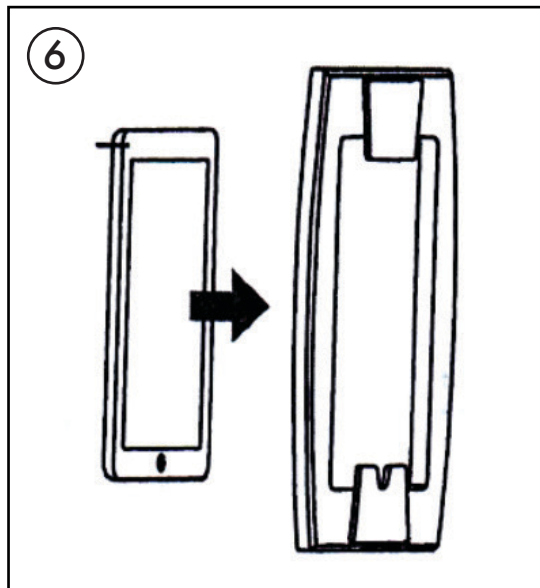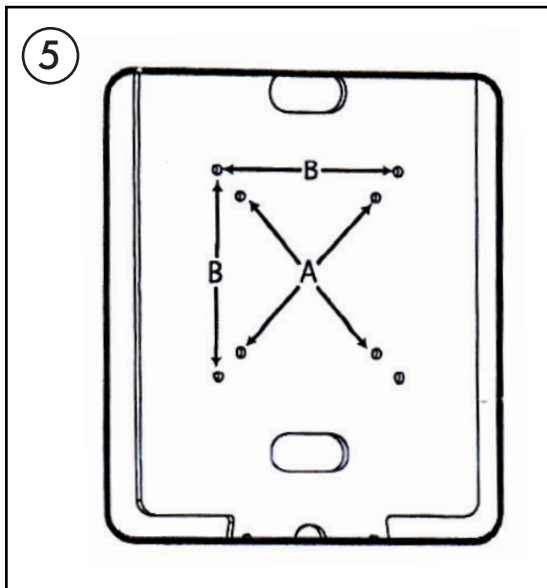

*Assembly is complete.*