




**DISPLAYS2GO**  
CONNECTING PEOPLE & BRANDS WITH THE WORLD

## Assembly Instructions

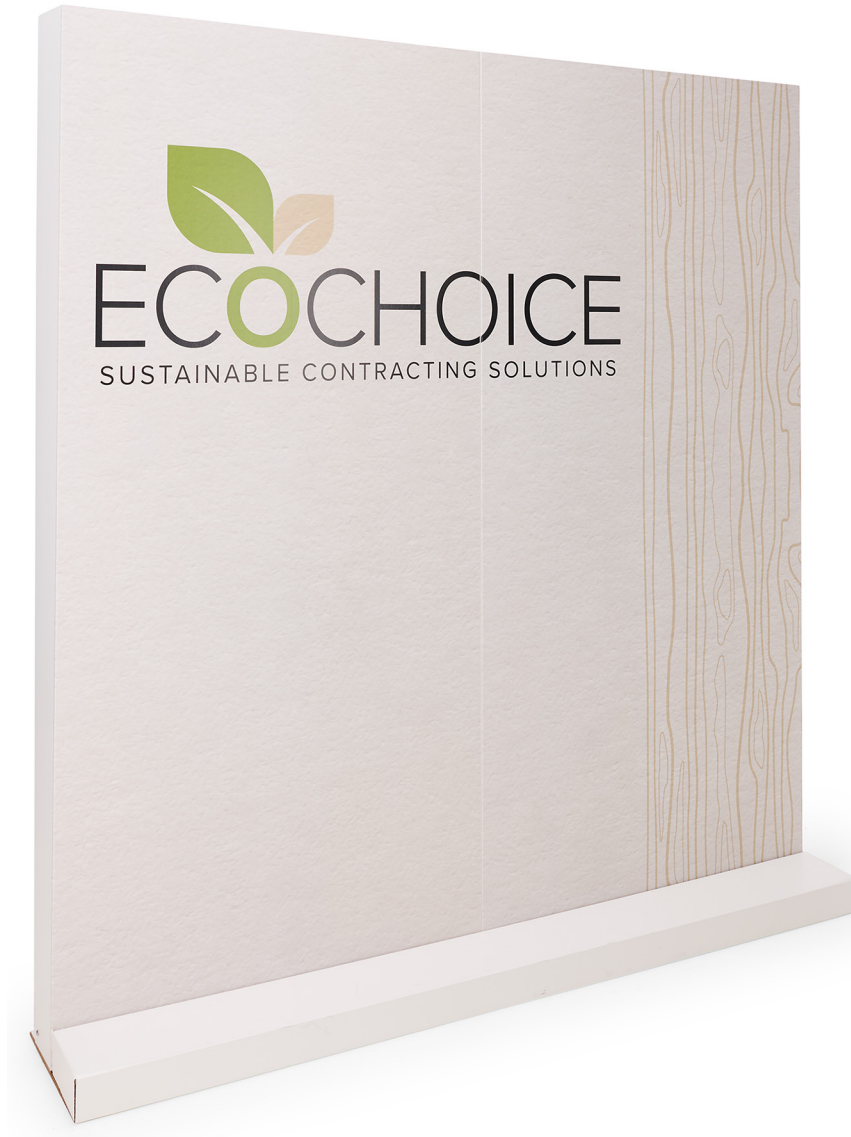

SKU: TSECOLB1

### BOOTH BACKWALL









GREENPRINT PRODUCTS

# PARTS LIST


PART	QUANTITY
A: Base .....	1
B: Backwall Panel (Left) .....	1
C: Backwall Panel (Right) .....	1
D. Screw 1.5in .....	8
E. Wing Nut.....	8
F. Allen Key .....	1

Scan QR code to  
visit product page

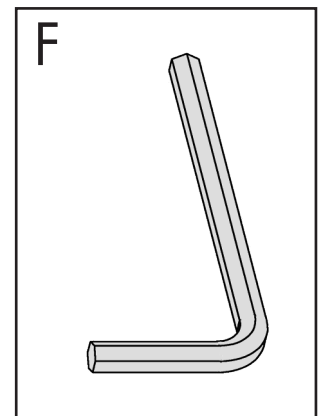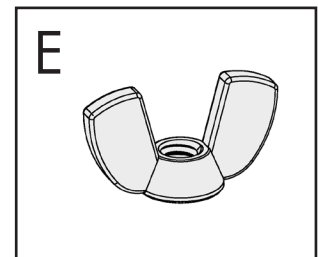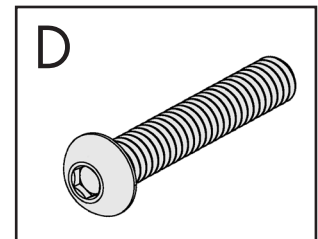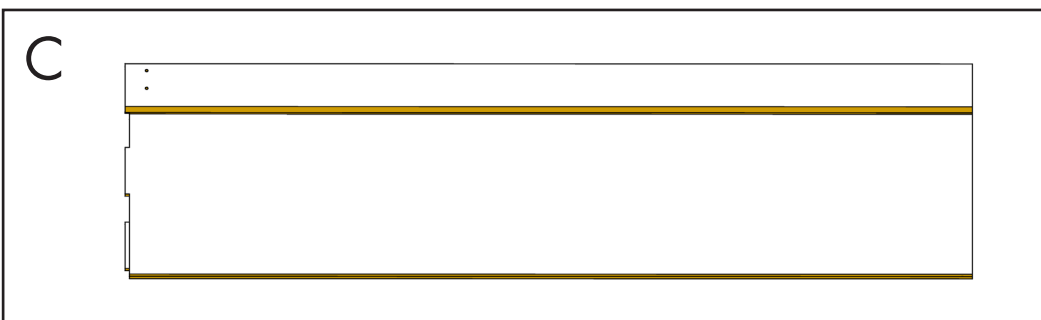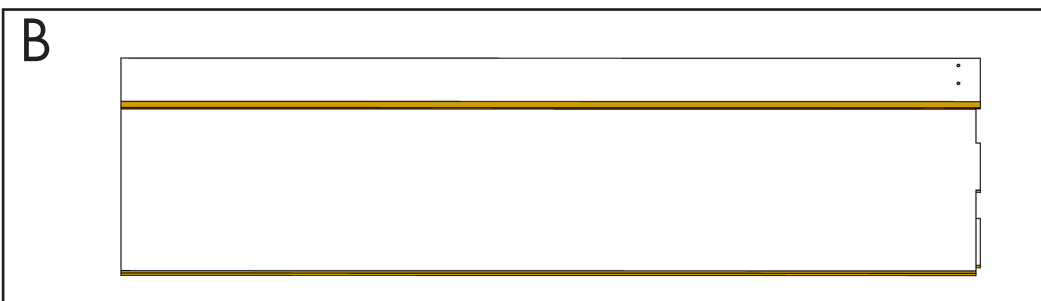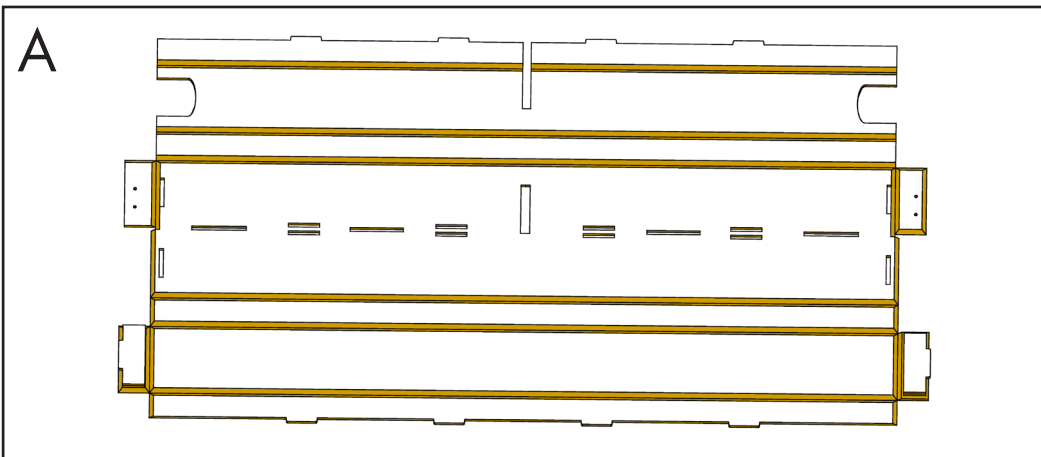

If you have any questions regarding our products, please visit us at [www.displays2go.com](http://www.displays2go.com) or contact Displays2go customer service at 844-221-3388.

1. Lay the base panel on a flat and clean ground. Fold up the front flap and insert tabs into the precuts in the middle of the base panel.

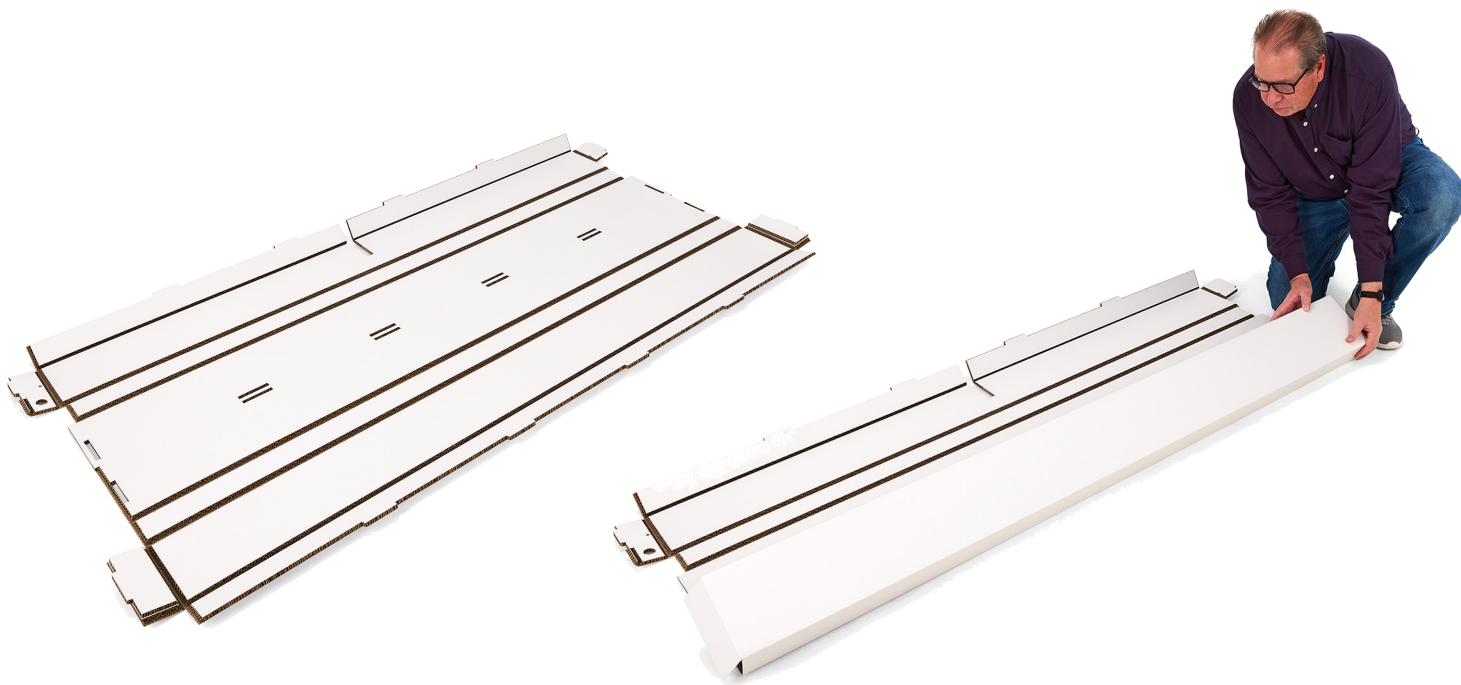

2. Fold the back flap up and insert the tabs into corresponding cutouts in the middle on the base.




Note: Do not fix the bottom.  
This step will be finished later.

3. Expand the half backwall (Right) and fold the flaps on both sides to the back. Hold the sides with both hands and place it in the middle groove on the base. Place the Left side backwall onto the base the same way.



- 4a. Align holes on the flaps at the center of the backwall, use screws and wing nuts to join two backwall panels.
- 4b. Align holes on each side at the bottom and secure the backwall with the base by using screws, nuts and allen key provided.

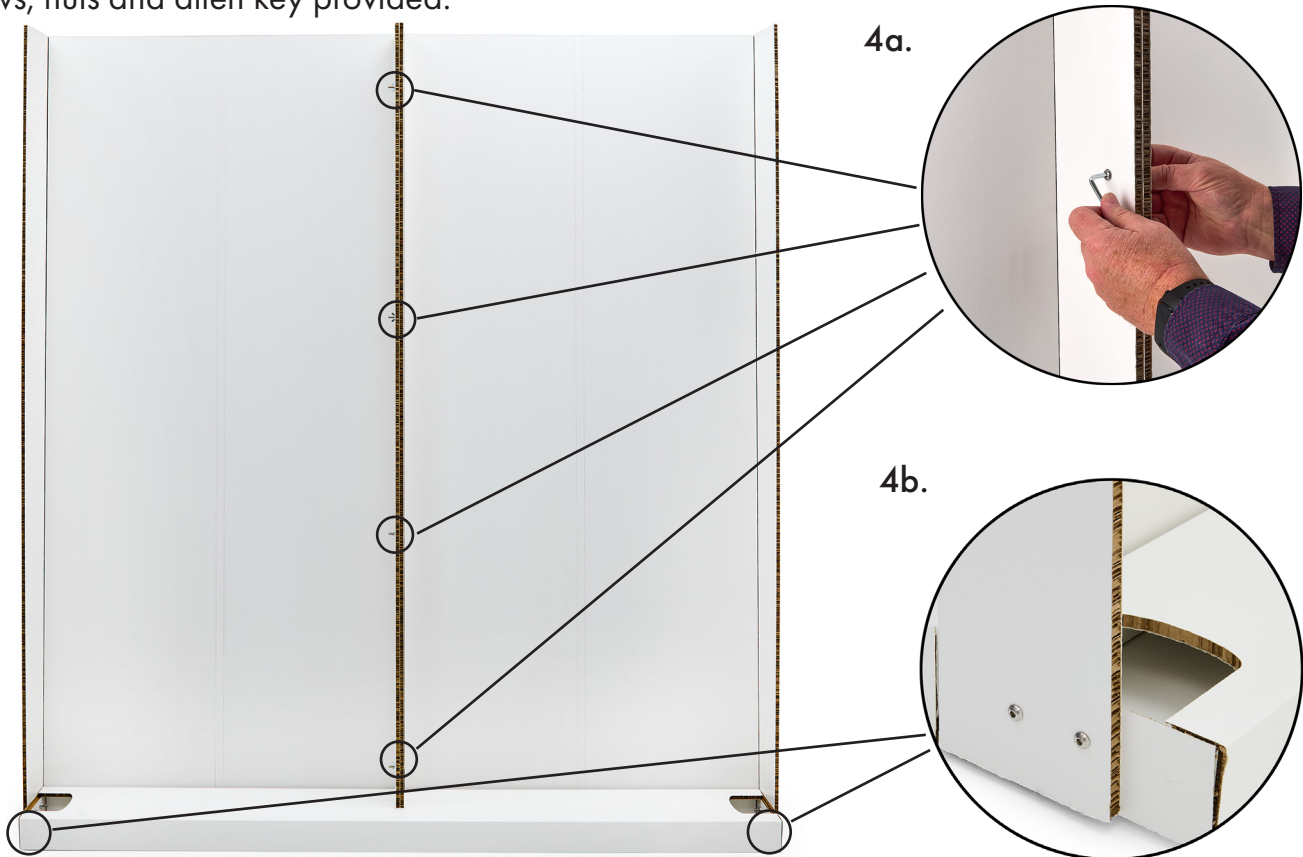

5. The assembly is finished. Place the backwall in desired angle and location.



*Enjoy your new  
booth backwall!*

CONTACT INFORMATION:

[www.displays2go.com](http://www.displays2go.com)

PHONE: 844-221-3388