

Assembly Instructions




SKU: TSECOTSW


STANDING SIGNAGE WALL



GREENPRINT PRODUCTS

PARTS LIST

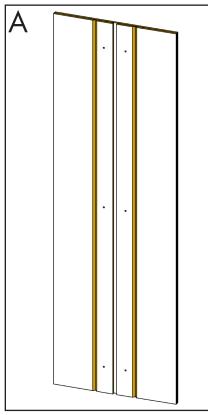


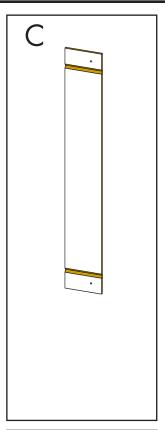



PART QUANTITY


A: Signage Board	. 1
B: Side Panel	.2
C: Back Panel	. 1
D. Screw 1.5in	. 4
E. Screw 2in	. 2

Tool recommended: Hex wrench.

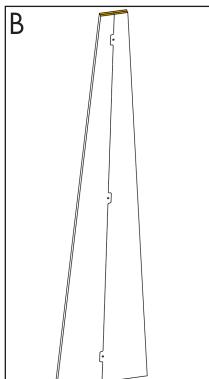



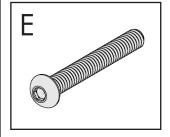

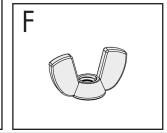

Scan QR code to visit product page



If you have any questions regarding our products, please visit us at www.displays2go.com or contact Displays2go customer service at 844-221-3388.

1. Unfold the signage board and expand both ends to reach full width.



2. Attach one side panel to the end and align precut holes at the same level. Insert 1.5in screws into top and middle holes and fix with wing nuts from the inside.



3. Assemble the other side panel the same way as in <u>Step 2</u>.



4. Fold in both side flaps on the back panel and attach it to the back of the signage board. Use 2in screws and wing nuts to fix the back panel and stablize the whole signage wall.





5. The assembly is finished. Position the signage wall at the desired angle and location.



Enjoy your new Standing Signage Wall!

CONTACT INFORMATION: www.displays2go.com PHONE: 844-221-3388