

Assembly Instructions

PCSGSD1000 - Sanitizing Dispenser with Bracket

Each product includes:

- 1 x Sanitizer Dispenser with Bracket
- 1 x Drip Tray
- 2 x Screw, M4x8
- 2 x Nut, M4




Scan QR code to visit the product page:



1. Assemble the drip tray with the dispenser holder. Raise the top part to free the pump head and push the tab back so the dispenser bottle can be removed.



2. Loosely tighten screws and nuts on the dispenser holder. Remove the end cap and slide down the inserts on the back of the bracket into the T-slot. Move the top tab up and tighten 2 screws to fix the bracket at desired height.

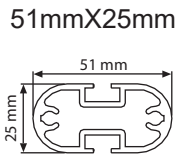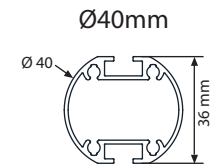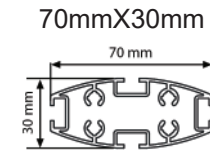

3. Push back the tab as shown and place the dispenser bottle inside the bracket. Lower the top tab onto the head of the dispenser bottle. Replace the end cap and the assembly is finished.

