


Assembly Instructions

PCSGW & PCSGB - PORTABLE COUNTER WITH CLEAR SNEEZE GUARD

- Each product includes
- 1 x Top table
 - 1 x Shelf
 - 1 x Convex counter
 - 1 x Clear barrier
 - 1 x 3mm Allen Wrench
 - 1 x 5mm Allen Wrench
 - 4 x M5x25 Screw
 - 4 x M6x35 Screw

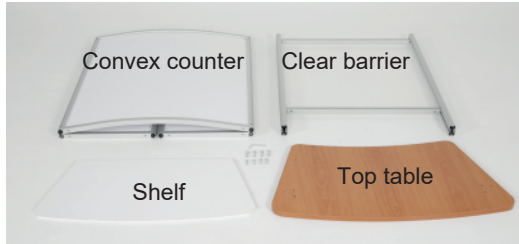


Scan QR code to visit the product page:



1. Place the counter frame in its standing position on the floor and unfold the counter. Expand each side panel fully. Fit the middle shelf inside the frame as shown. Make sure the shelf is secured inside the frame. **NOTE: pre-drilled holes on side panels must face up.**



2. Assemble the tabletop with clear barrier. First, identify the bottom of the tabletop. Insert 2 M6X35mm screws into the thru holes on each side from the bottom. Align holes on the bottom of the clear barrier frame with inserted screws. Tighten screws with enclosed allen key.

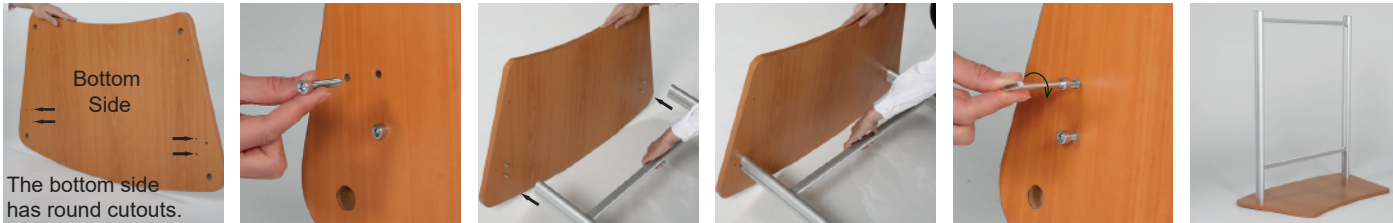

3. Carefully lift the assembled tabletop. Place it onto the counter frame with all rubber studs insert into the round cutouts on the bottom of the tabletop. Insert 4 M5X25mm screws into the pre-drilled holes and tighten with the counter frame. Peel off the protective film.



4. You can change the height of the sneeze guard to fit your needs. Use Allen Wrench to loosen the screws at 4 corners on the frame and slide the sneeze guard up and down to the desired height. Tighten all screws to fix the sneeze guard at the place.

