

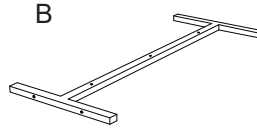


# ASSEMBLY INSTRUCTIONS


## SMWMFD - Wood and Metal Floor Display

Parts List	QTY.
A. Main Frame	1
B. "H" Frame	2
C. Side Frame	2
D. Countertop	1
E. Caster	4
F. M8X40 Screw	14
G. M8X25 Screw	4

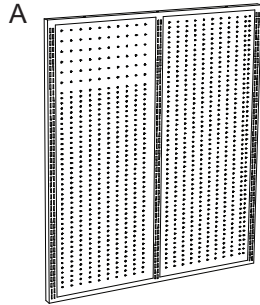


2 people are required

STEP 1. Attach the "H" shaped Frame (B) to the top of the Main Frame (A) and fix it with 3 M8x40 Screws (F). Fix the other "H" shaped Frame to the bottom the same way.

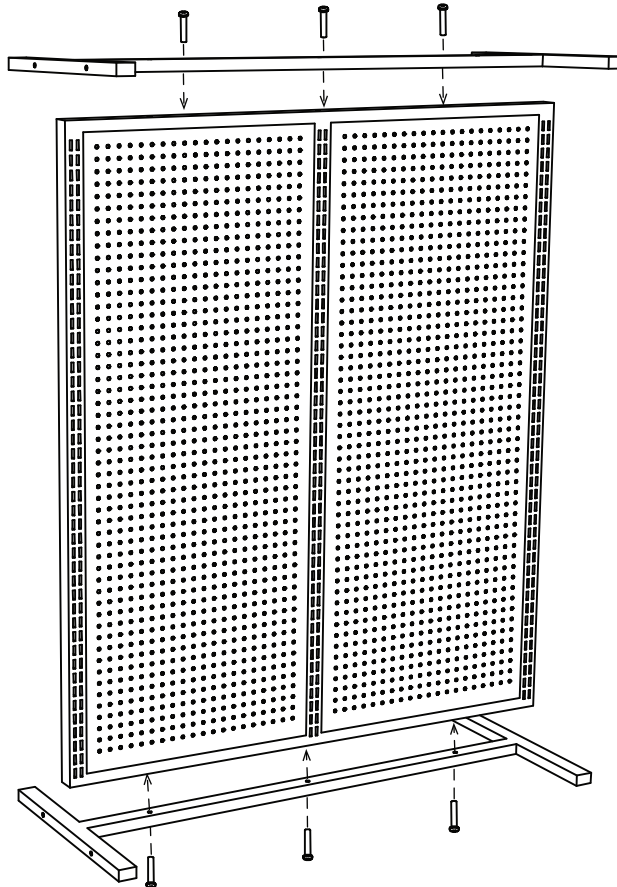


STEP 2. Screw 2 casters (E) into the bottom of each Side Frame (C) and tighten them securely. Attach 1 side frame to the assembled main frame and secure it by using 4 M8x40 screws (F) as shown. Fix the other side frame the same way.

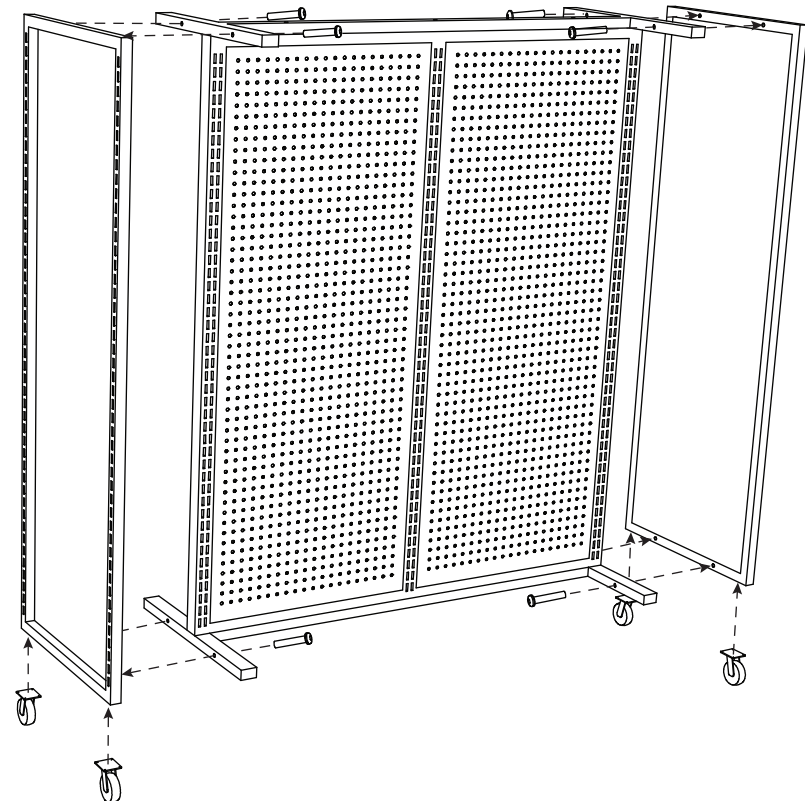


## ASSEMBLY INSTRUCTIONS

### SMWTFD - Wood and Metal Floor Display



STEP 3. Place the Countertop (D) on the assembled main body and secure it with 4 M8x25 Screws (G) as shown.

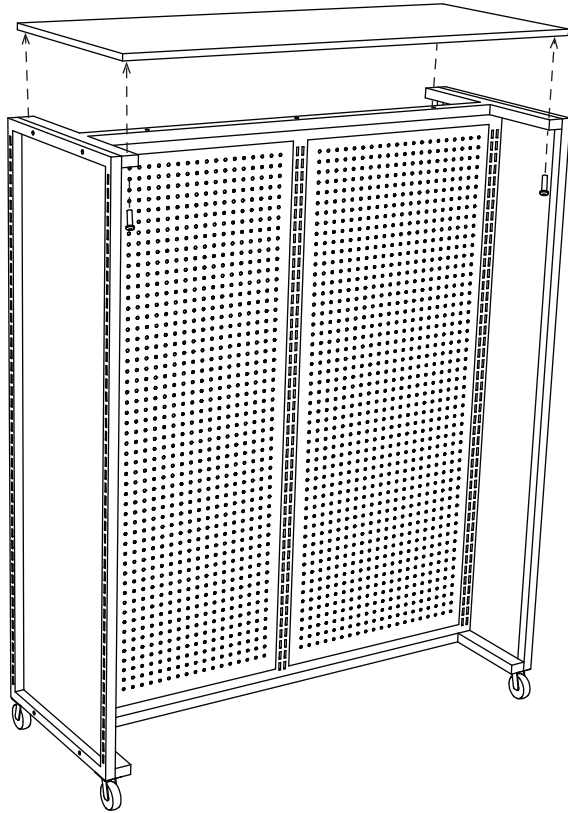

STEP 4. Attach your accessories to the display stand. Insert the metal tabs on both sides into the slots at desired height, and push the attachment down to secure it in place. SM2WMSBHB, SM2WMSB will ONLY fit left or right on the Main Frame (A) as shown below; SM4HBB will ONLY fit the Side Frames (C) as shown.

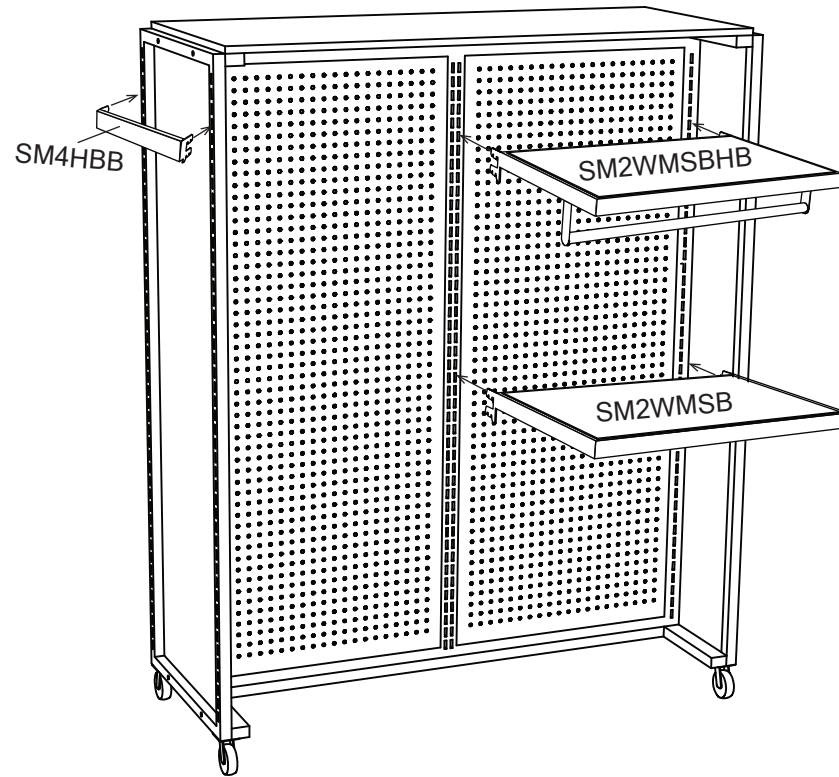

To use hanger displays, assemble SM4HBB to the stand first, then attach the bracket to the hanger beam as shown below.

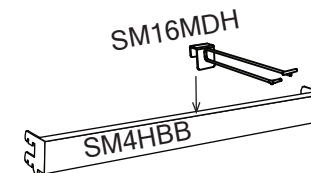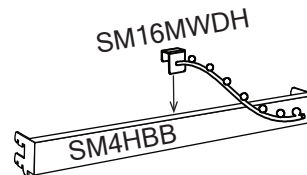

Scan QR code to visit the product page:

