



RETAIL CASH WRAP WITH 3 ADJUSTABLE STORAGE SHELVES

Assembly Instructions

48"-70" Cash Wrap with Custom Printed Graphic Panel Kit SKU:
BKCW48CGSV, WHCW48CGSV, WHCW72CGSV, BKCW72CGSV

48"-70" Cash Wrap without Custom Printed Panel SKU: MRCWR48BK,
MRCWR48WH, MRCWR72BK, MRCWR72WH



Scan the QR code to
visit the product page.


Safety & Warnings

BEFORE BEGINNING ASSEMBLY, PLEASE TAKE TIME TO READ THROUGH THE INSTRUCTIONS AND UNDERSTAND EACH STEP THOROUGHLY.


Displays2go is not responsible for any personal injury or product damage due to mishandling, incorrect mounting, incorrect assembly or incorrect use of this product.

2 people are required for assembly.

Components

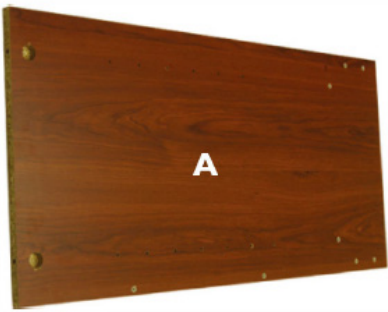

Left Side Panel (x1)

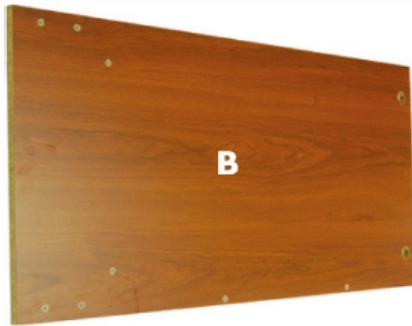

Right Side Panel (x1)



Toe Kick (x2)



Bottom Panel (x1)



Center Panel (x1)



Front Panel (x1)



Top Panel (x1)



Shelf (x2)



Bolt (x29)



Cam Lock (x29)



Shelf Support Pin (x8)



Screw Cap (x13)



Glide Foot (x4)

Tools Needed:



Phillips Screwdriver



Rubber Mallet



Flathead Screwdriver




Drill


Assembly

How to Join 2 Boards with Cam Locks


1.

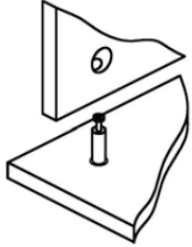

2.

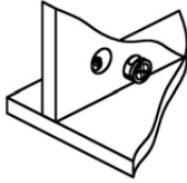

3.

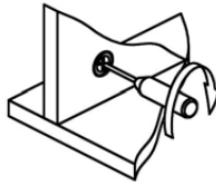

1. Insert cam bolt into board, then lower the hole of the joining board over the cam bolt.

2. Each cam lock has an open section on the back. Insert the cam lock into the hole of the joining board, making sure the open section is placed over the head of the cam bolt.

3. Turn the cam lock clockwise with a screwdriver to lock the cam lock to the cam post. Do not over-tighten.

1. Connect Toekick C to Bottom Panel D using bolts.
2. Insert and tighten cam locks.
3. Repeat to attach other toekick to the bottom panel.
4. Use a rubber mallet to hammer the 4 glide feet into the toekicks.



5. Connect Center Panel E to Front Panel F using bolts. Insert and tighten cam locks.
6. Connect Center and Front Panels to base using bolts. Insert and tighten cam locks.



7. Connect Left Side Panel A to counter using bolts. Insert and tighten cam locks.
8. Repeat with Right Side Panel B.



9. Flip counter over and attach Top Panel G to counter using bolts. Insert and tighten cam locks.
10. Insert shelf support pins in desired position.
11. Gently place shelves onto shelf support pins.
12. Cover screws with plastic screw caps.




**Assembly is
complete.**



Installing Custom Printed Panel

For BKCW48CGSV, WHCW48CGSV, BKCW72CGSV, WHCW72CGSV only.

1. Place the custom printed panel at the desired location on the counter. Mark the center of each hole with a pencil onto the surface.
2. Set aside the panel. Place the stand-off threaded flanges onto the included screws.
3. Using a power drill and a 1/16" bit, drill screws and threaded flanges into the center of each mark.
4. Screw each stand-off base onto the threaded flange bases.
5. Place panel onto bases, then screw stand-off caps into stand-off bases to secure the panel.

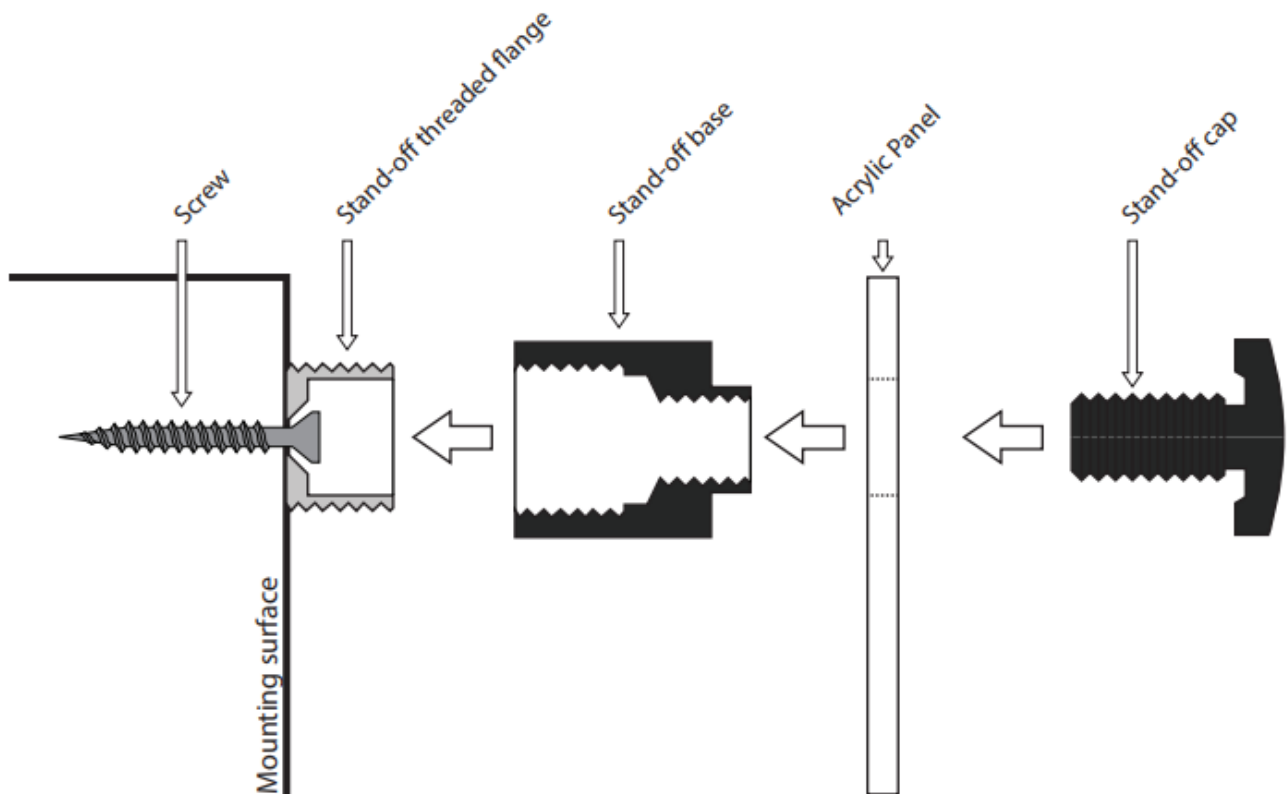

If you have any questions regarding our products, please visit us at www.displays2go.com or contact Displays2go customer service at 844-221-3388.