



DISPLAYS2GO
CONNECTING PEOPLE & BRANDS WITH THE WORLD



QUEUE POLE SLATWALL MERCHANDISERS

Assembly Instructions

Small Metal Slatwall Shelf (QPMSSBKSM)
Large Metal Slatwall Shelf (QPMSSBKLK)
Small Metal Slatwall Basket (QPMBSLVSM)
Large Metal Slatwall Basket (QPMBSLVLG)
Accessories sold separately.




Scan the QR
code to visit the
product page.



Packing List


Base Kit

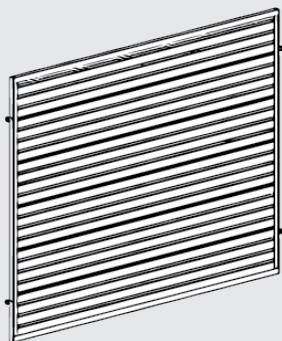

A. Slatwall panel



B. Connectors

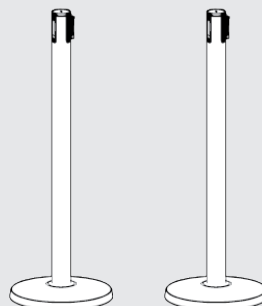

C. Stanchions




D. Hex Wrench
(5mm)

Accessories (Sold Separately)



Large Metal Slatwall Shelf

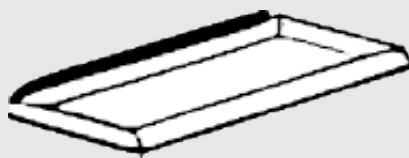

Small Metal Slatwall Shelf



Metal Wire Basket

Safety Warnings and Precautions

Read and understand all instructions prior to assembly to avoid personal or product damage. Carefully insert all accessories at the correct angle to the slatwall panel to avoid scratches.

Cleaning and Maintenance

- Clean the surface with a soap-based cleaning agent diluted in water, then wipe dry with a soft, dry cloth.
- Powder coated metal is a durable material, but can be sensitive to oxidation, which can lead to scratching. Be careful when using hard, warm, or sharp objects as they can damage the surface.

Suggested Weight Capacity per Item

- QPMSSBKLG Large Metal Slatwall Shelf 11 x 49 **44LBS (20KGS)**
- QPMSSBKSM Small Metal Slatwall Shelf 11 x 23 **17.5LBS (8KGS)**
- QPMSBSLVSM Small Metal Slatwall Basket 12 x 12 **35LBS (16KGS)**
- QPMSBSLVLG Large Metal Slatwall Basket 12 x 24 **35LBS (16KGS)**


Assembly

! **NOTE:** Pencil and ruler required for assembly (not included).

1. Measure 5 inches from the top of each stanchion post (C) and mark location with pencil.
2. Attach connector (B) to stanchion posts.
NOTE: the bottom of the connector should be above pencil line.
3. Check that connectors are level on stanchion post and with each other. Tighten with hex wrench.
4. Carefully lift slat wall and orient to correct position, shown below.



Slat Wall Orientation

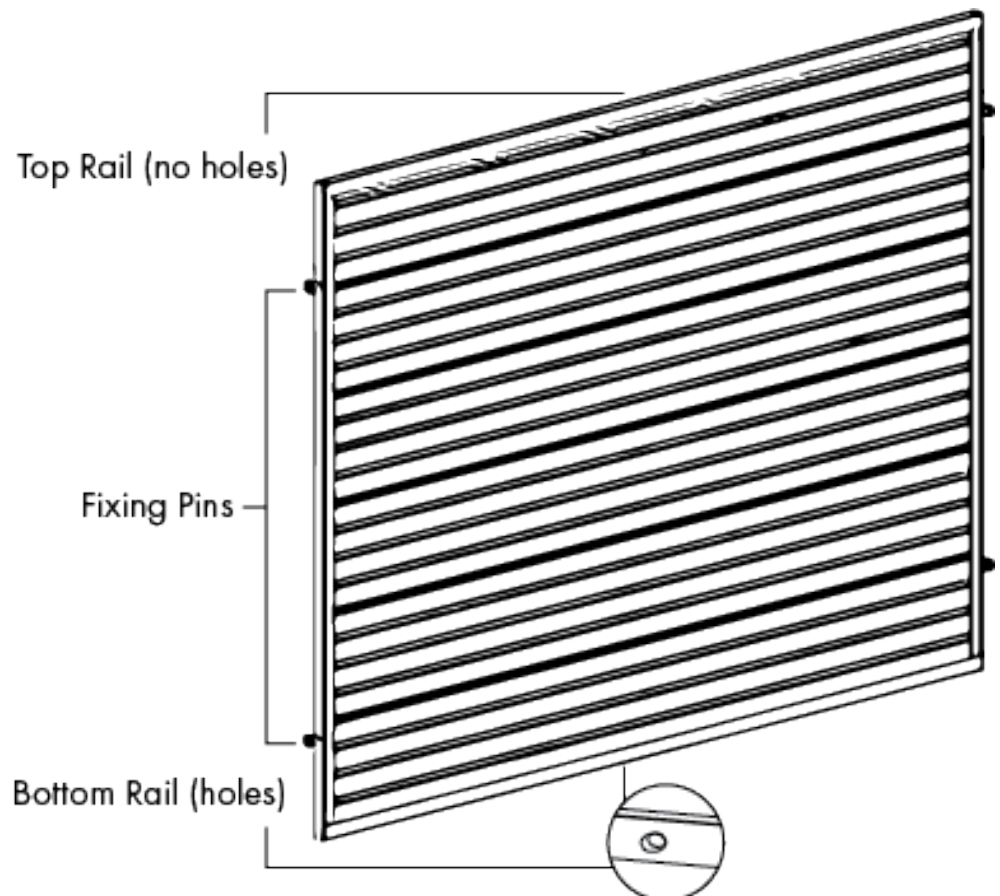

5. Attach slat wall to stanchions by inserting fixing pins of slat wall into corresponding connector slots. Hand-tighten to secure.
6. Add 2 connectors to the bottom of the stanchion, aligning with the fixing pins of the slat wall, then hand-tighten to secure.
7. Tighten all connectors with hex wrench.
8. Attach any accessories (sold separately) by tilting and gently sliding into the slats.



Assembly is complete.

If you have any questions regarding our products, please visit us at www.displays2go.com or contact Displays2go customer service at 844-221-3388.