


3-Tier Merchandising Table (White or Black)


SMAP3TW (White Table with Oak Shelves)

SMAP3TMAB (Black Table with Wood Grain Shelves)




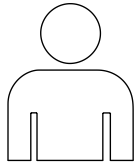

**2-3 PEOPLE
REQUIRED
FOR
ASSEMBLY**

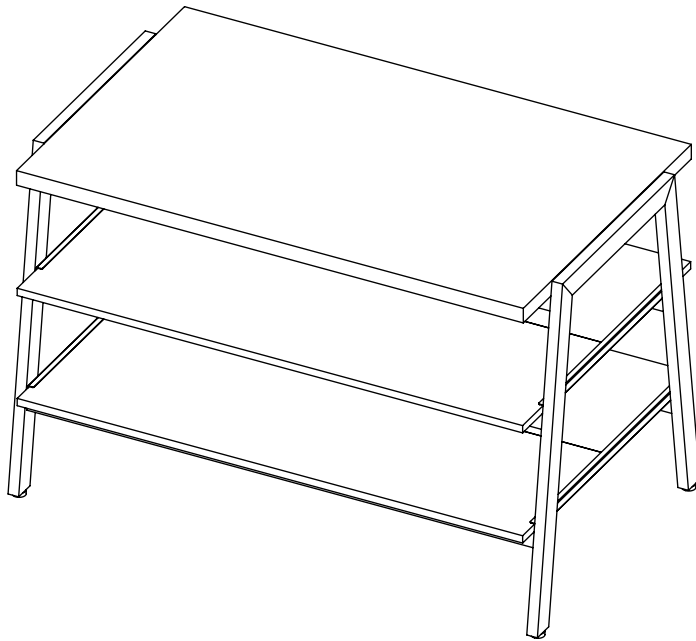


INCLUDED HARDWARE

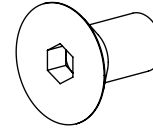


24X
5/16"-18 x 0.625" LONG
CSK SOCKET HEAD SCREW




4X
#10 x 0.625" LONG
WOOD SCREW



16X
1/4"-20 x 0.5" LONG
SOCKET BUTTON HEAD CAP SCREW

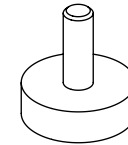


4X
3/8-16" x 1" LONG
NYLON LEVELER

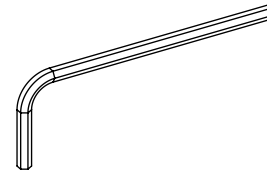


3X
ALLEN KEY
2.5mm, 4mm, 5mm

TOOLS REQUIRED

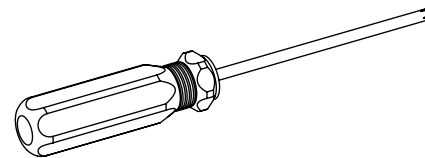


PHILIPS HEAD
SCREWDRIVER

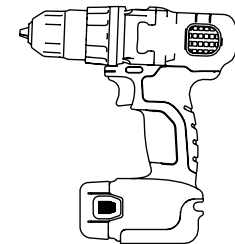

POWER DRILL


1

ASSEMBLE FRAME.

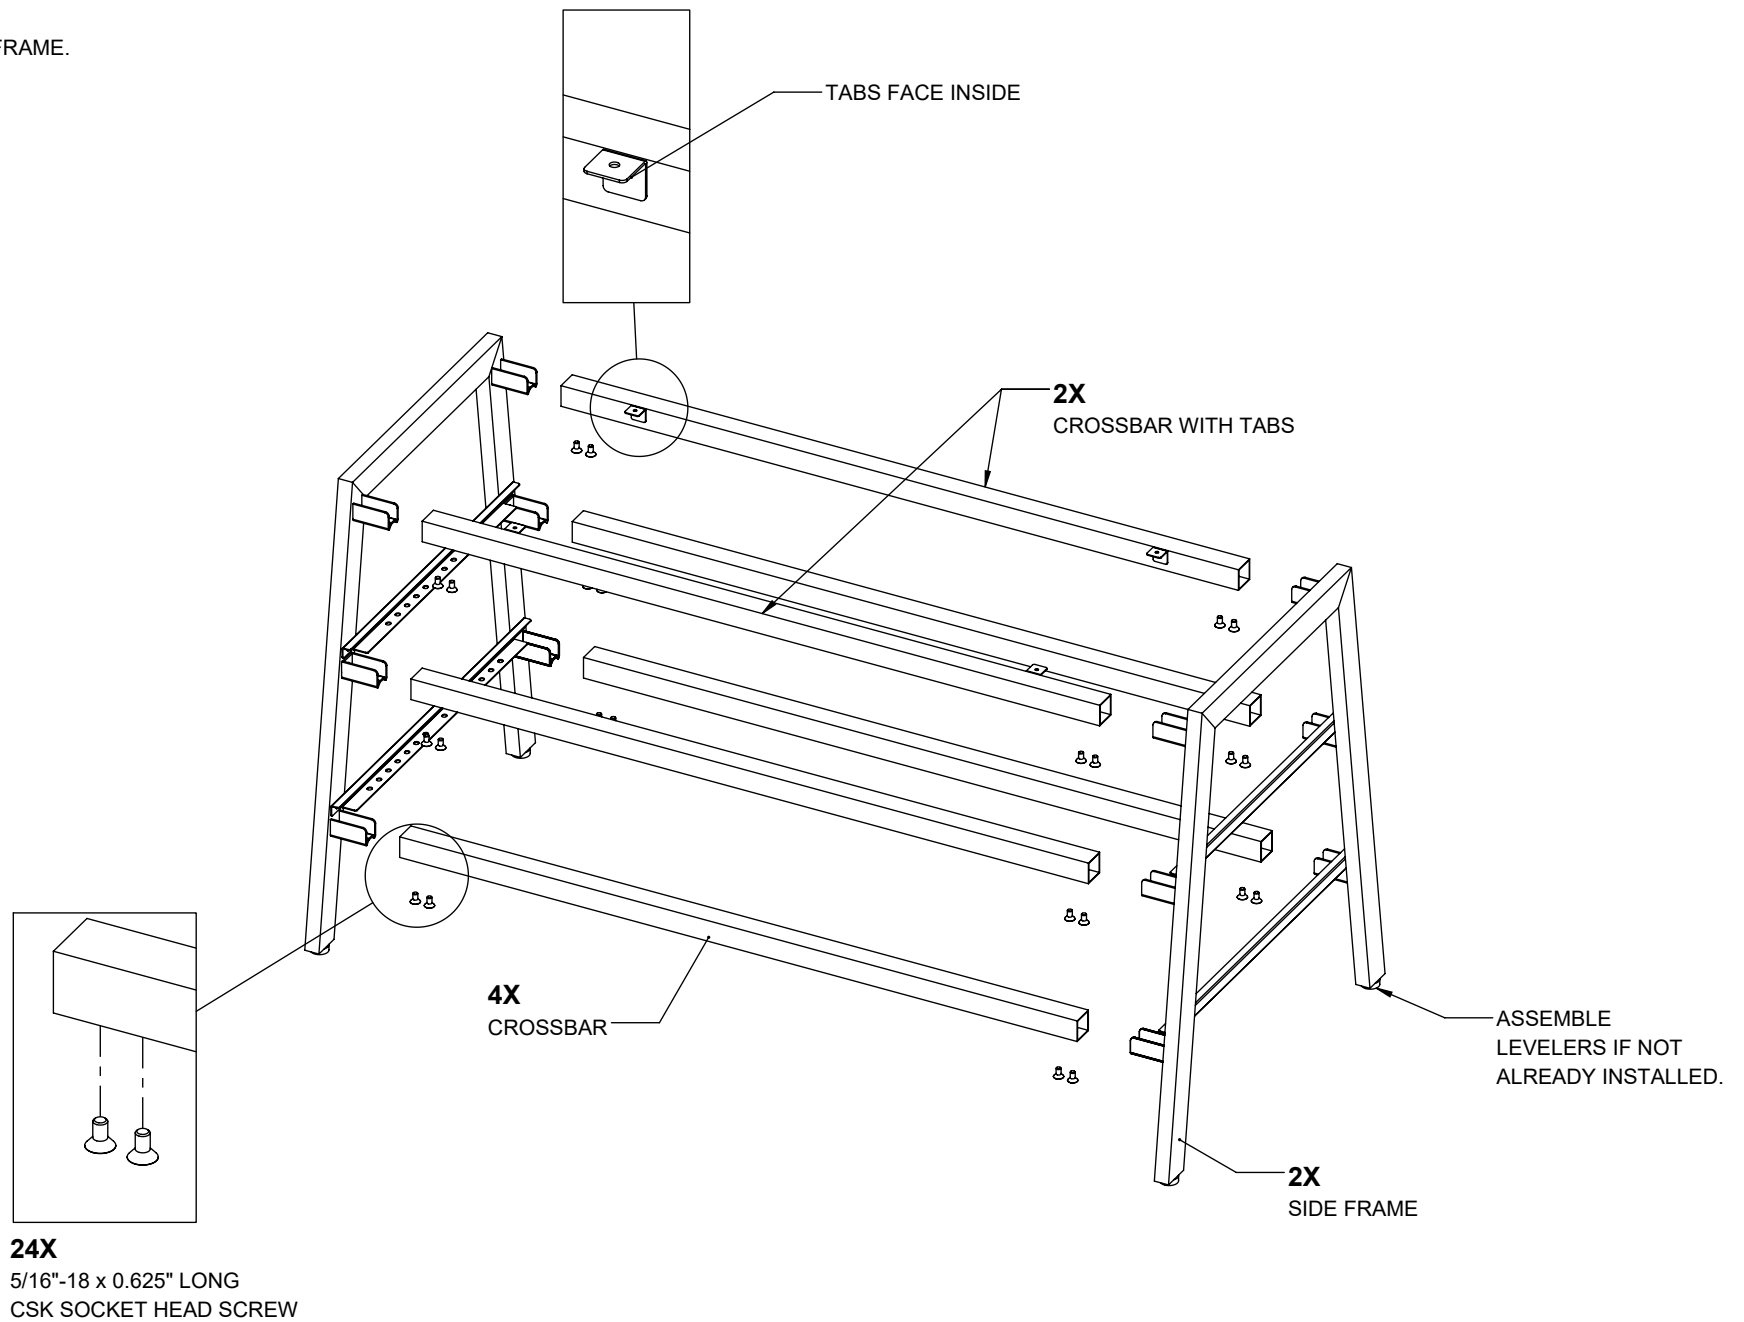

2A

PLACE TABLE TOP ON FLOOR.
PLACE FRAME OVER TABLE TOP.
MAKE SURE THE PILOT HOLES ARE FACING UP.

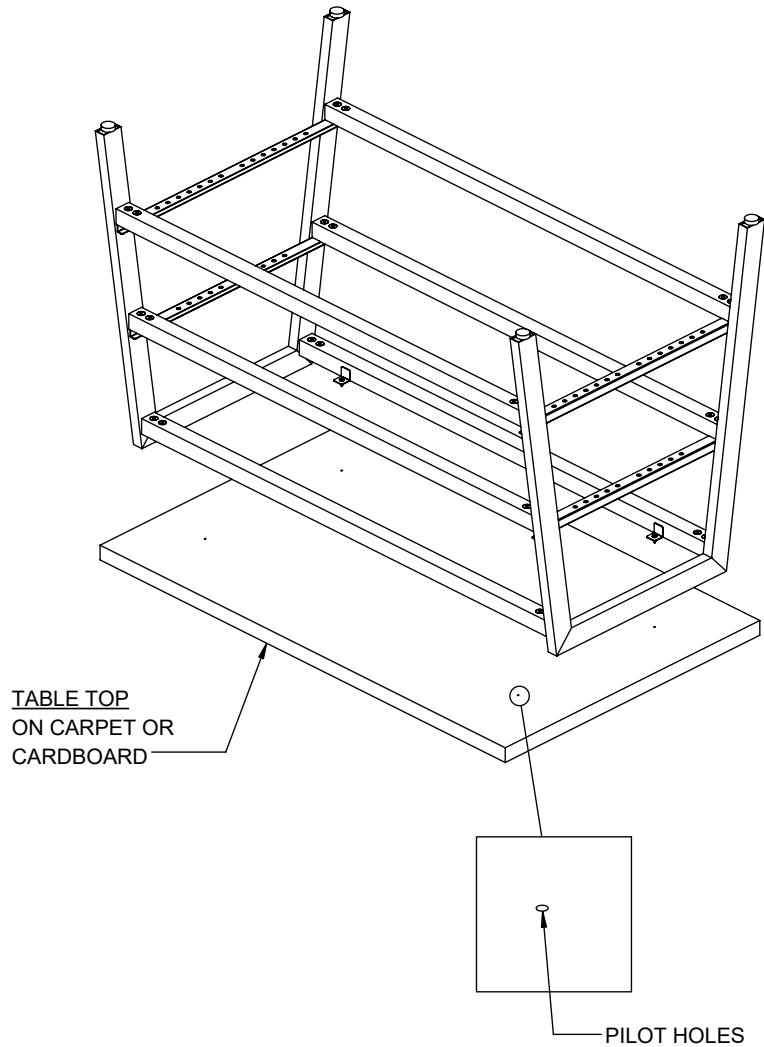


2B

ALIGN TABS WITH PILOT HOLES.

SECURE WITH WOOD SCREWS WITH
POWER DRILL OR SCREWDRIVER.


CAREFULLY FLIP TABLE UPRIGHT
WITH 2-3 PEOPLE.

**HOLD TABLE TOP AND FRAME
WHEN FLIPPING OVER.**

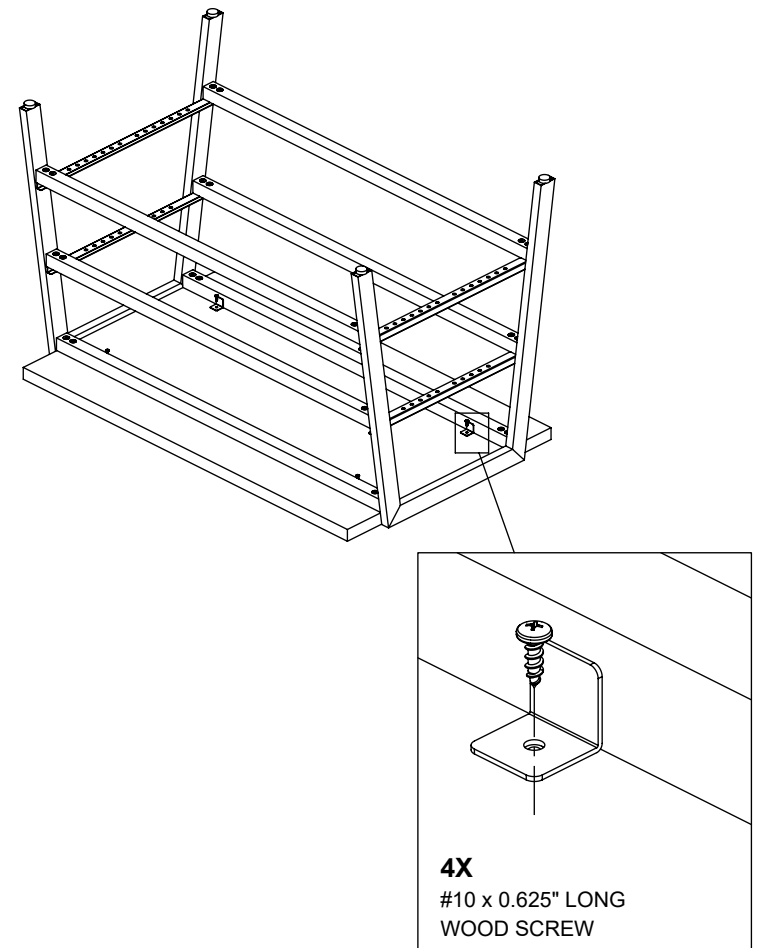




3A

SLIDE IN SHELF INTO U CHANNELS.

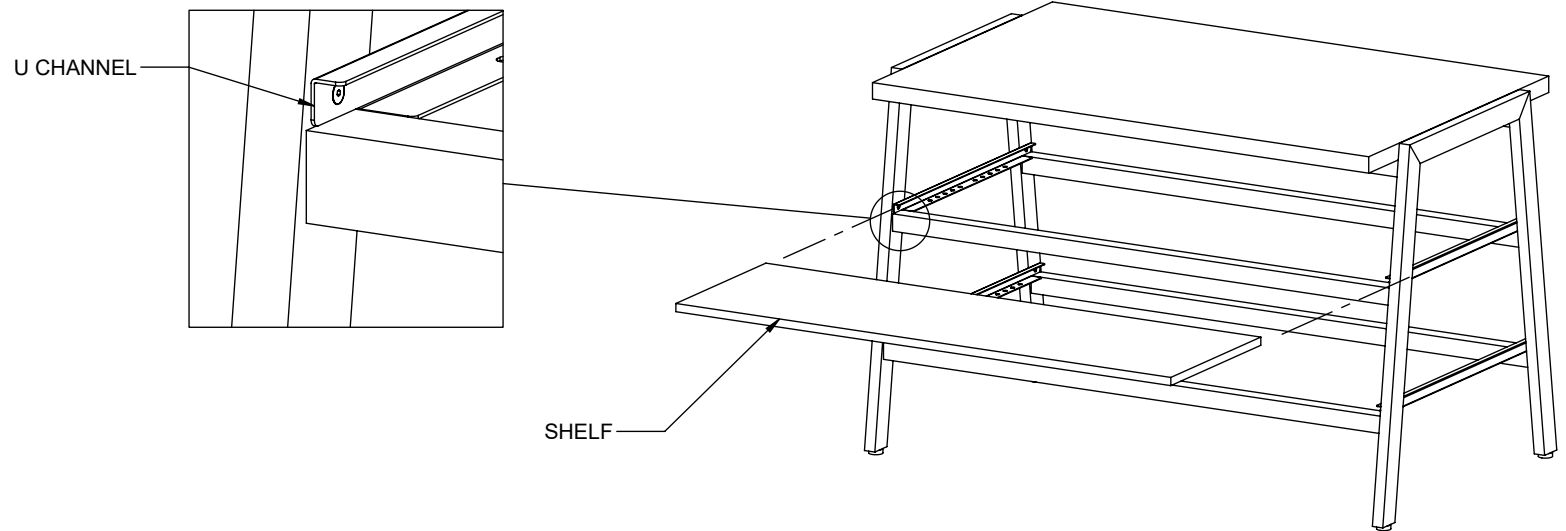

3B

SECURE SHELF FROM UNDERNEATH WITH SCREWS. DEPTH OF SHELF CAN BE ADJUSTED BASED ON WHERE SCREWS ARE INSERTED.

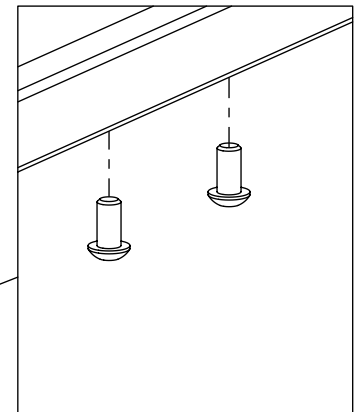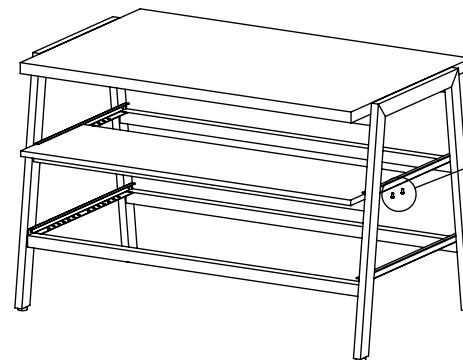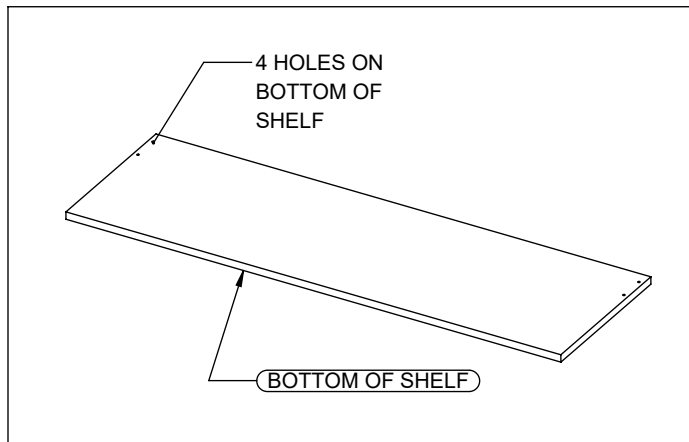

4X
1/4"-20 x 0.5" LONG
SOCKET BUTTON
HEAD CAP SCREW

4

PUT IN OTHER SHELVES.
ADJUST TO DESIRED DEPTH.
SECURE OTHER SHELVES WITH
SCREWS (SEE [STEP 3.](#))

