



Components:

SM363603WDB

Panels:



(2) Floor Panels
(open hole sockets)



(3) 1st, 2nd and 3rd Levels
(closed hole sockets)

Legs:

(8) - 12"

(4) - 24"

(4) - 36"


Waterbeds:



(1) - without holes





(2) - with holes

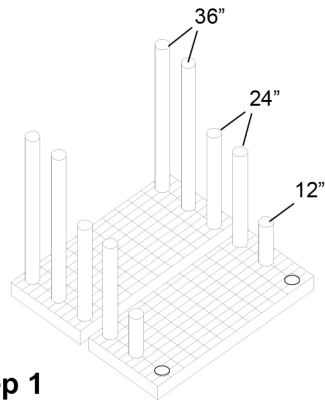

Step 1 Floor level

Lay floor panels (open hole sockets) in position and place legs as shown. (Make sure legs go through to ground).


Fully Assembled

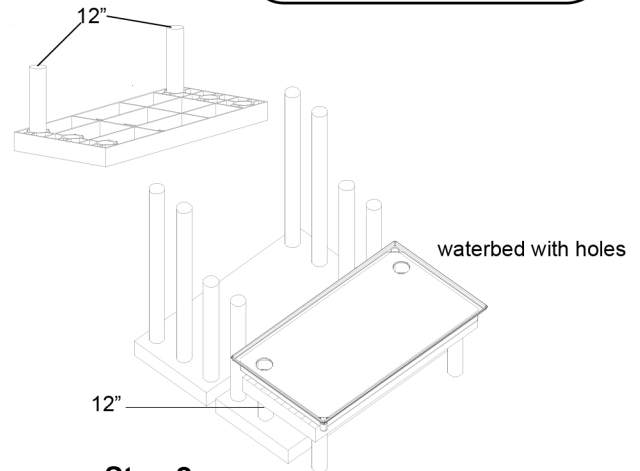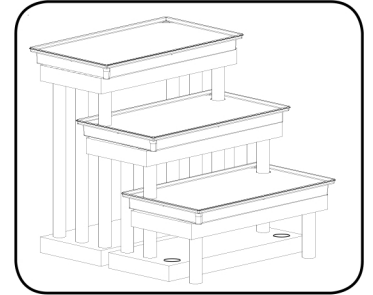

Step 2 1st level


A. Invert the 1st, 2nd & 3rd level panels (closed hole sockets) and insert (2 ea) 12" legs in outside sockets as shown. Position 1st level above 12" legs as shown. Push down until leg rests on top of socket.

B. Next, lay one waterbed with open holes on the first level with the holes to the back as shown.

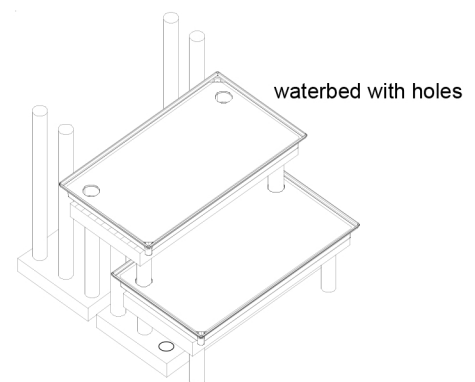

Step 4 Waterbed with holes


Position second waterbed with holes on 2nd level with holes to the back.

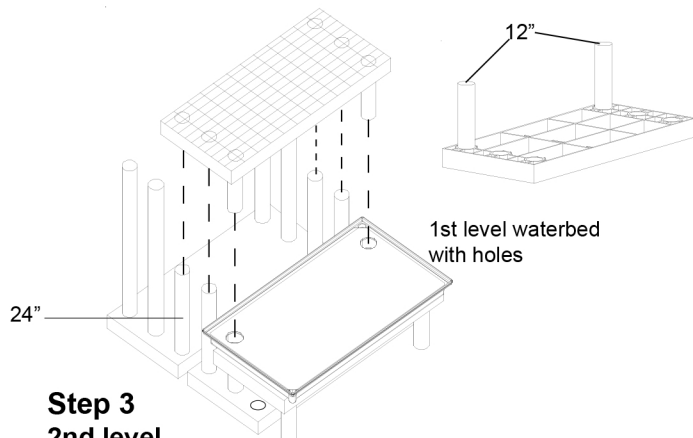

Step 3 2nd level


Position 2nd level panel over 24" legs and 12" legs over 1st level waterbed as shown. Slide 12" legs into holes of waterbed. Push down until 24" legs rest on top of socket.

**Oil All Sockets
Before Assembly**

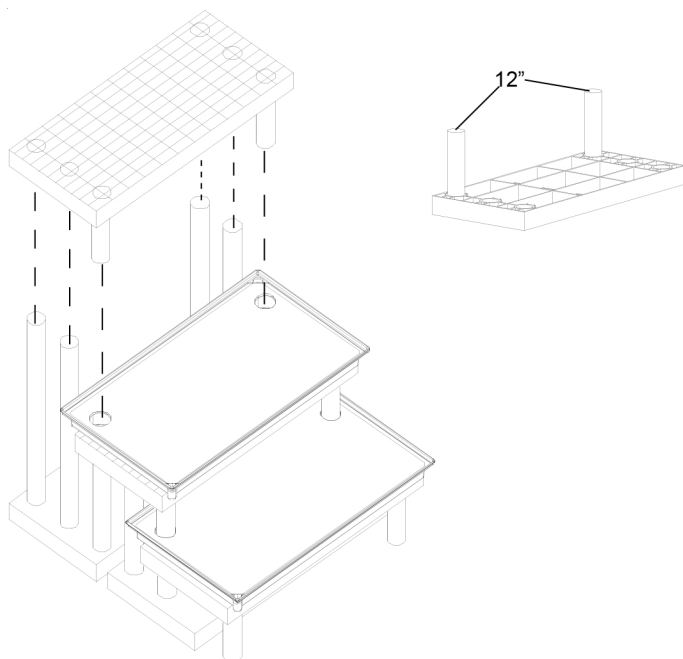

Step 5
3rd Level

The third level repeat step 3.

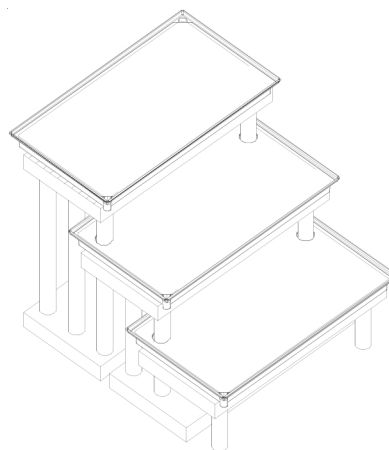

Step 6
Waterbed With out holes

Position waterbed without holes on top of the 3rd level.

**Oil All Sockets
Before Assembly**