


Clothing Wall Display with Hang-Rail and Two 12" Faceouts

SMT500SCK3 (Chrome)

Version 1.0




ASSEMBLY INSTRUCTIONS: **T500SC**

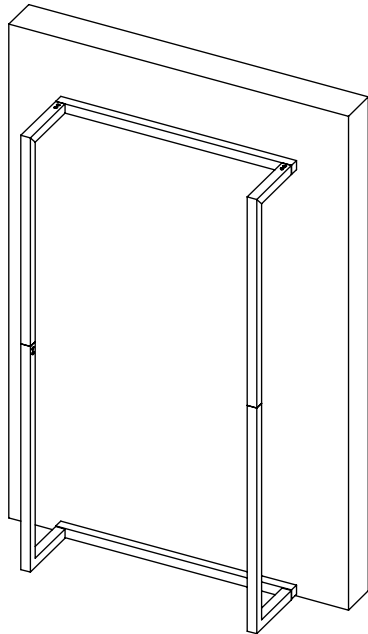


REQUIRED TOOLS NOT INCLUDED

- POWER DRILL
- BUBBLE LEVEL
- WALL ANCHOR HARDWARE WITH A SHEAR RATING OF 60 LBS OR MORE AND A TENSION RATING OF 80 LBS OR MORE. (**MAXIMUM HARDWARE DIAMETER 1/4"**)


1

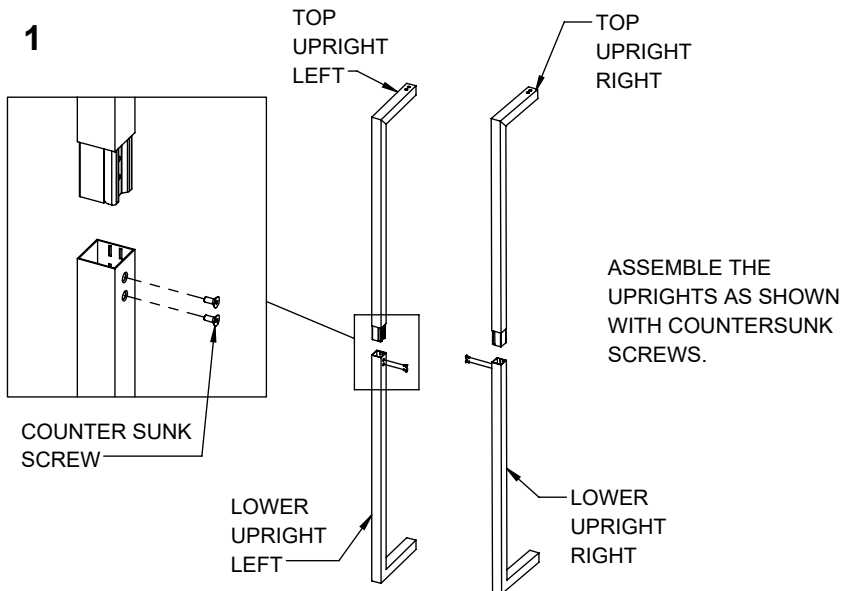

2

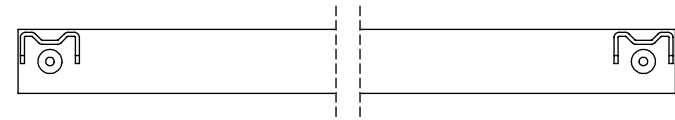


**TOP CROSS BAR
FRONT VIEW**

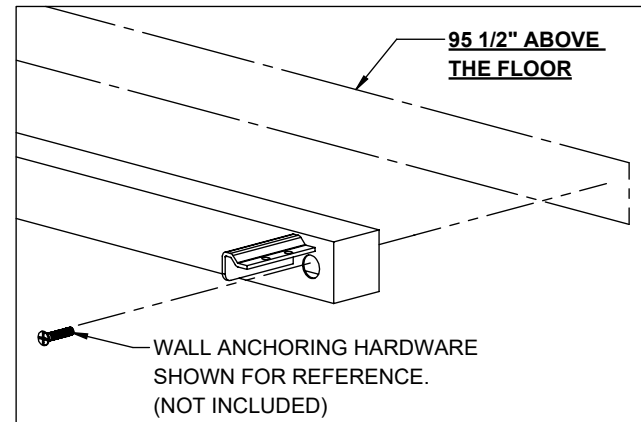


LEVEL AND MOUNT THE TOP CROSS BAR TO THE DESIRED WALL AS SHOWN WITH APPROPRIATE WALL MOUNTING HARDWARE.

3

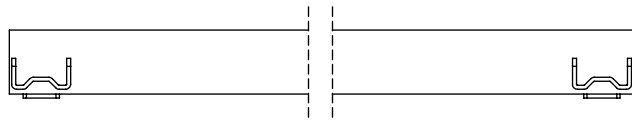

BOTTOM CROSS BAR
FRONT VIEW

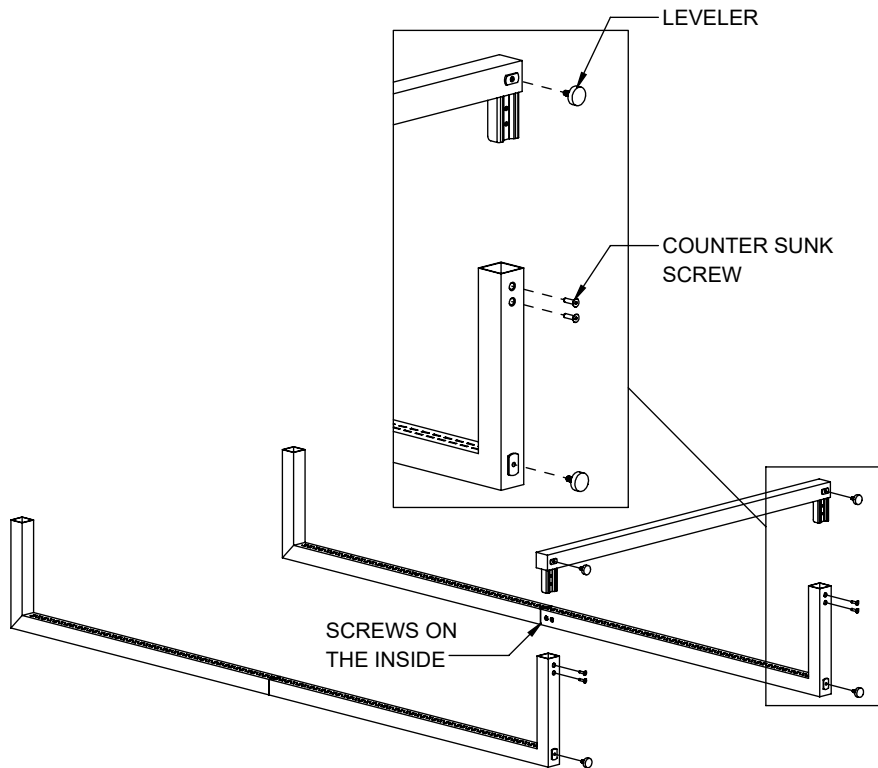


- LAY THE UPRIGHTS ON THE FLOOR AS SHOWN AND ASSEMBLE THE UPRIGHTS WITH THE LOWER CROSS BAR.
- INSTALL THE LEVELERS AS SHOWN.

NOTE: IT IS RECOMMENDED TO POSITION THE SCREWS ON THE UPRIGHTS TO BE POSITIONED ON THE INSIDE OF THE UNIT, BUT THIS IS NOT REQUIRED.

4

THIS STEP MAY REQUIRE 2 OR MORE PEOPLE

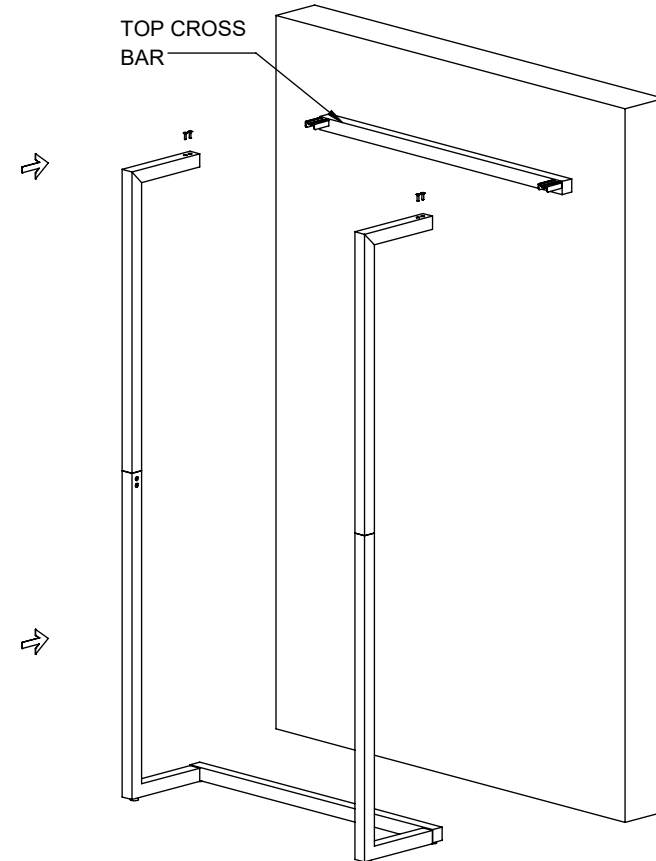

LIFT THE ASSEMBLED FRAME UP TO THE UPPER CROSS BAR MOUNTED ON THE WALL AND ASSEMBLE AS SHOWN WITH THE REMAINING COUNTER SUNK SCREWS.

NOTE: BE SURE TO MAKE SURE ALL LEVELERS ARE UNSCREWED ENOUGH TO ALLOW THE UNITS WEIGHT TO BE ON THE FLOOR.