

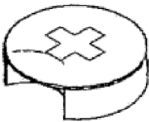

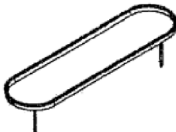
48" L-Shape Slatwall Merchandiser (Maple or Black)

SWSMLS48M (Maple)

SWSMLS48B (Black)

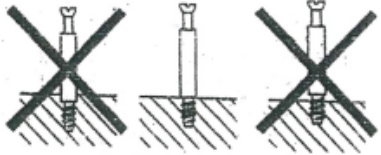


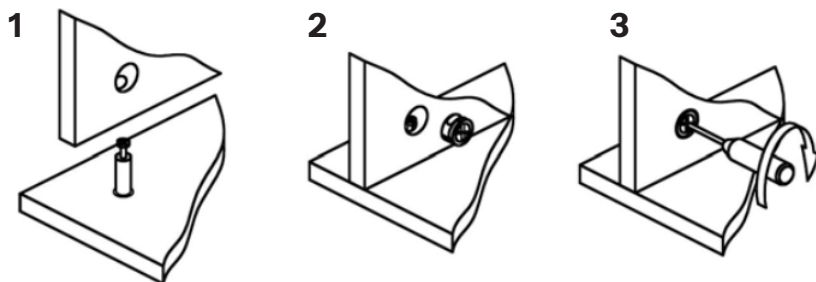
Version 1.0

Included Hardware			
			
Cam Bolt	Cam Lock	Screw	Glider
x21	x21	x8	x6

Required Tools: Philips screwdriver, Rubber mallet (recommended)

How to Join Boards with Cam Locks

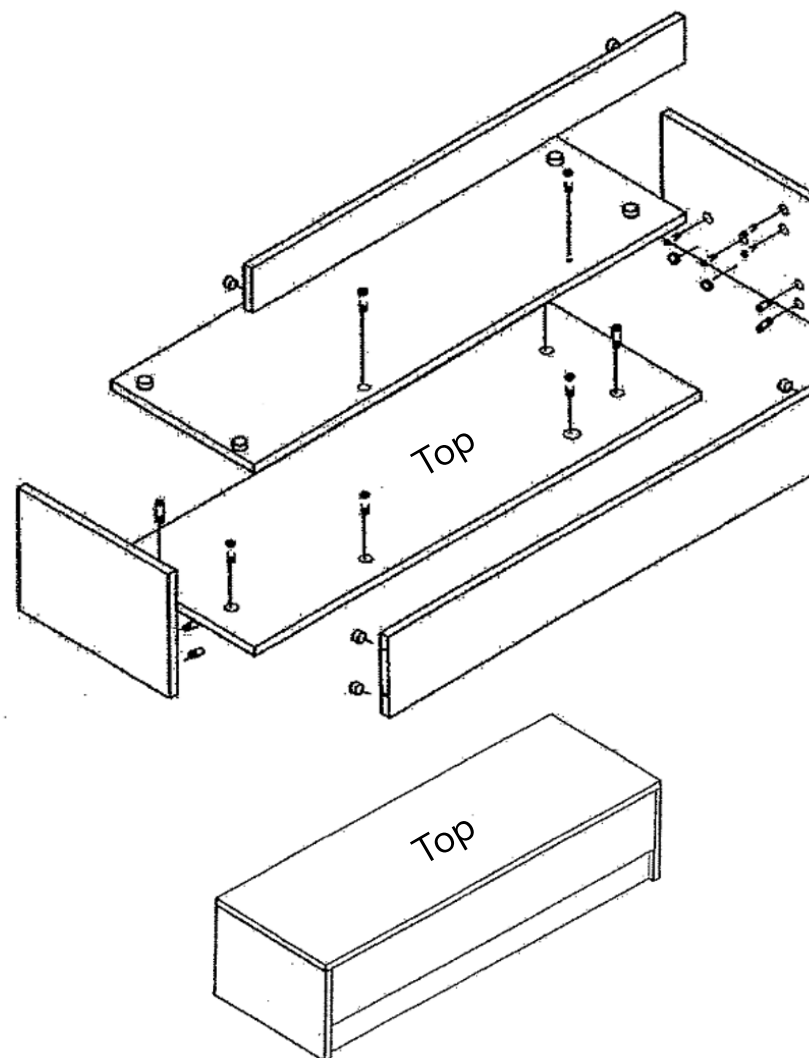
1. Insert the cam bolt into the board, then lower the hole of the joining board over the cam bolt.
 
2. Each cam lock has an open section on the back. Insert the cam lock into the hole of the joining board, making sure the open section is placed over the head of the cam bolt.
3. Turn the cam lock clockwise with a screwdriver to align the cam lock with the cam bolt. Revolve the cam lock until it locks.
 - Do not over-tighten! At the end of the assembly, fully tighten all cam bolts to ensure pieces fit correctly.



Step 1

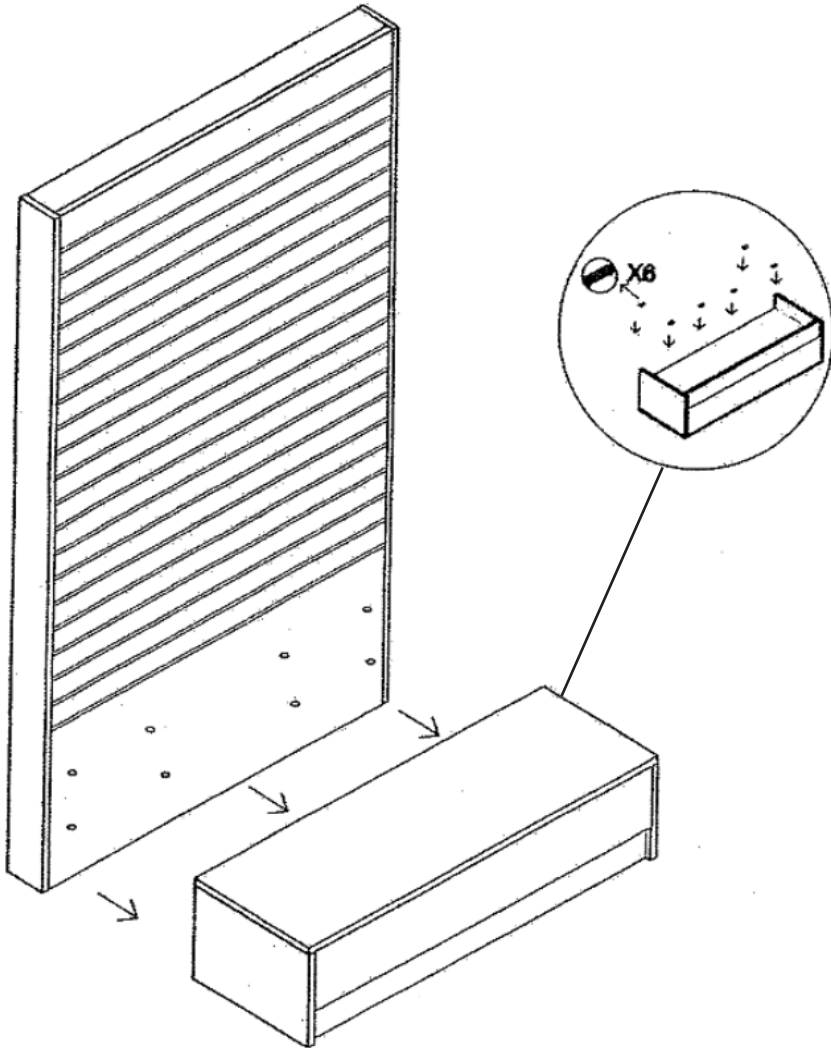
⚠ 2 people required for safe assembly.

1. Place the top of the base on the floor.
2. Assemble the base using cam locks and cam screws.
3. Use a mallet to press the gliders to the bottom of the toe kick.

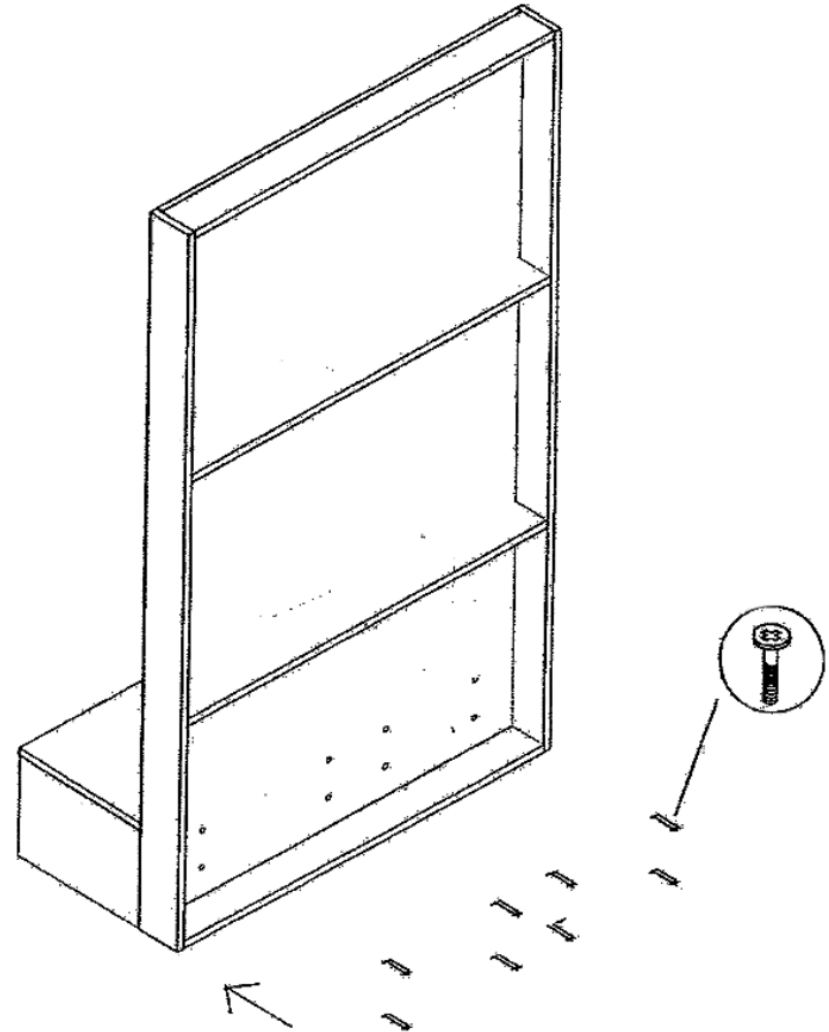


Step 2

1. Place the slatwall merchandiser against the toe kick.
2. Attach both pieces using cam locks and cam bolts.

**Step 3**

1. Connect the slatwall merchandiser to the toe kick using threaded screws.



Assembly is complete.