




Assembly Instructions for your WCCD2 or WCCD3

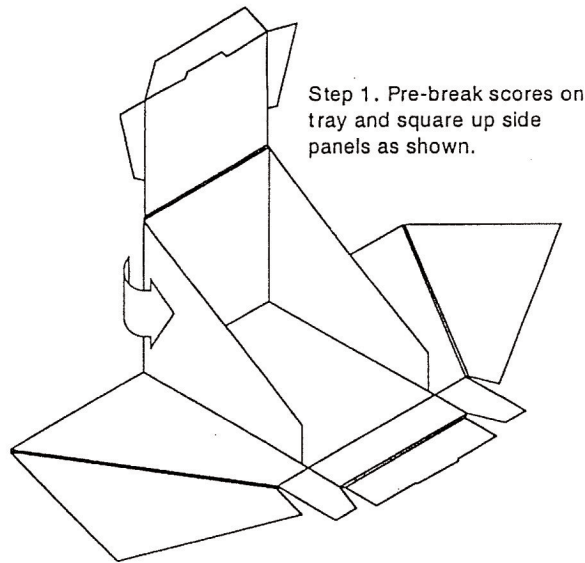


Step 1. Pre-break scores on tray and square up side panels as shown.

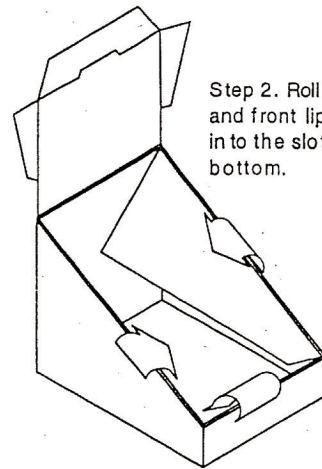


Step 2. Roll over sideflaps and front lip and lock them in to the slots at the tray bottom.

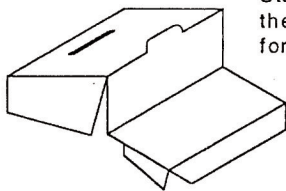


Step 3. Pre-break scores on the insert and fold in to step formation as shown.

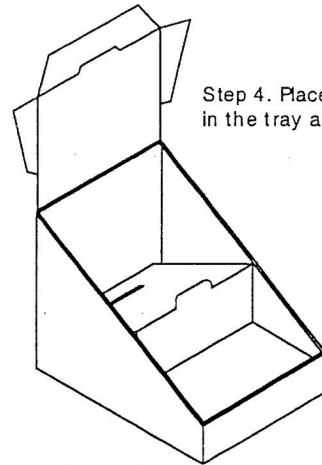


Step 4. Place the insert in the tray as shown.

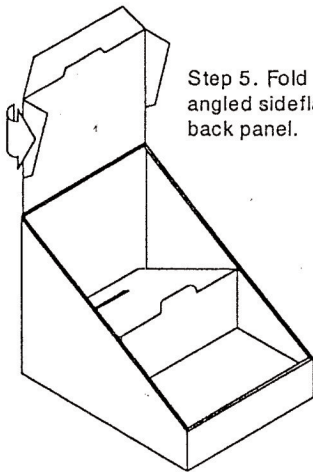


Step 5. Fold in angled sideflaps on back panel.

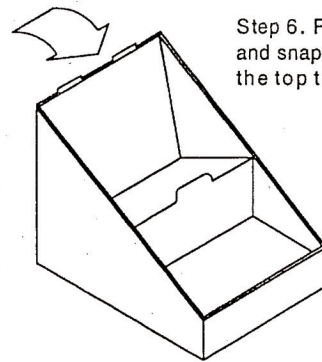

Step 6. Roll over back panel and snap tab in to the slot on the top tier of the insert.

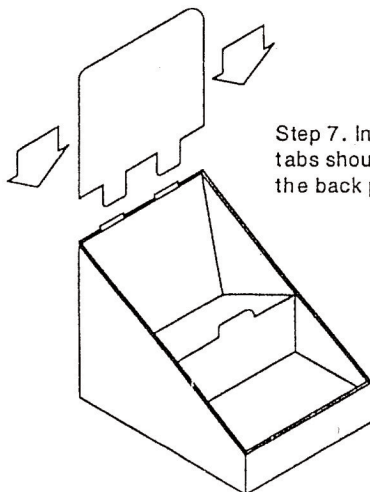

Step 7. Insert header. Header tabs should slide in to slots on the back panel scores.

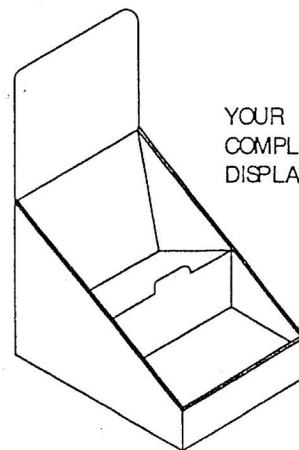

YOUR
COMPLETED
DISPLAY