

## MOBILE WHITEBOARD

Assembly Instructions


SKU: WHBM2840

## **PARTS LIST**


Tools Required: Phillips Screwdriver; Mallet (optional)



Scan QR code to visit product page

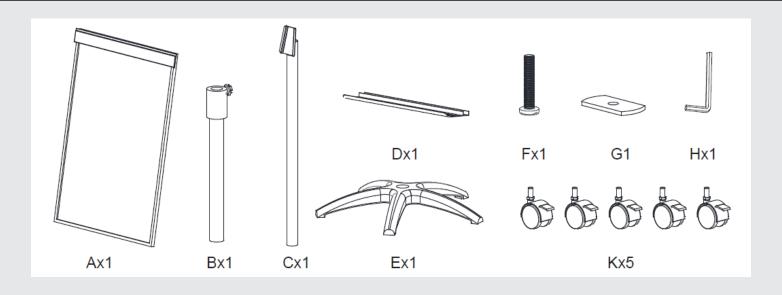


PART	QUANTITY
A: Whiteboard	1
B: Bottom Support Rod	
C: Top Support Rod	
D: Tray	
E: Star Base	1
F: Bolt	1
G: Bracket	1
H: Allen Wrench	1
K: Caster	5

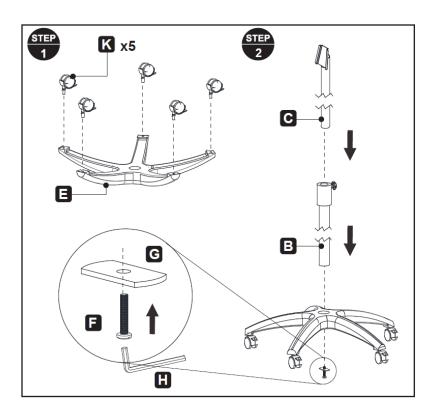


- 1. Thread each caster into place on the star base, as shown.
- 2. Slide top support rod into the bottom rod and use knob to tighten.

Then, slide the entire support rod into the star base. Attach with bracket and bolt, as shown.

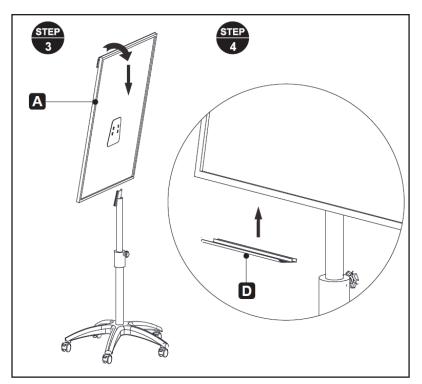

- 3. Line back of white board up with the small mounting plate on the top of the support rod and press down to slide into place.
- 4. Press-fit the tray onto the bottom left corner of the white board. Once inserted, tap firmly with hand or mallet to ensure stable fit.

Enjoy your new white board!

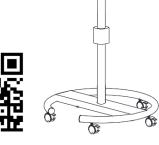

Scan QR code to visit

