


Assembly Instructions

SMSDWCBC1 – Wood and Clear Vinyl Hygiene Barrier


DISPLAYS2GO

1

Take body panel and press the 3 tabs on each side into the slots in each leg.

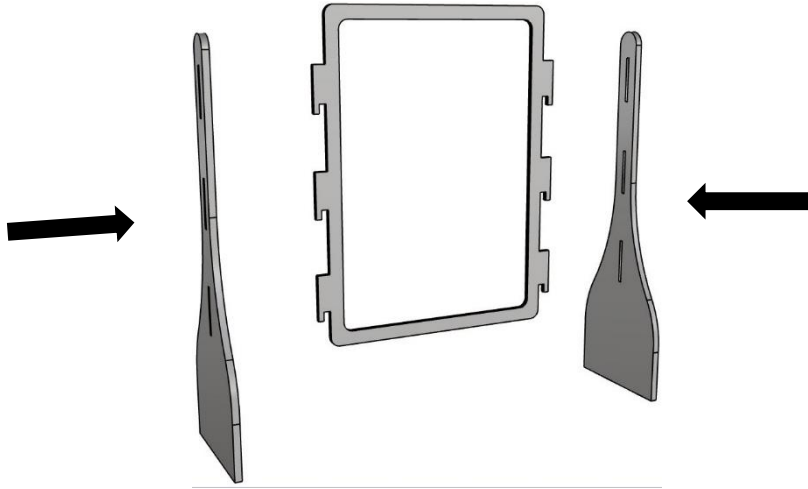


Legs

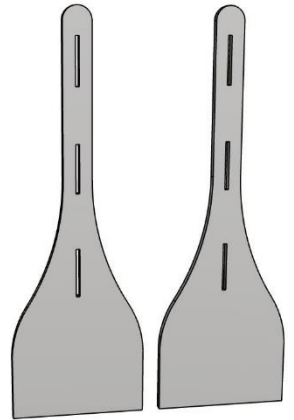

2

Once the tabs are pressed into leg slots, apply downward pressure on the body to lock the legs in place.

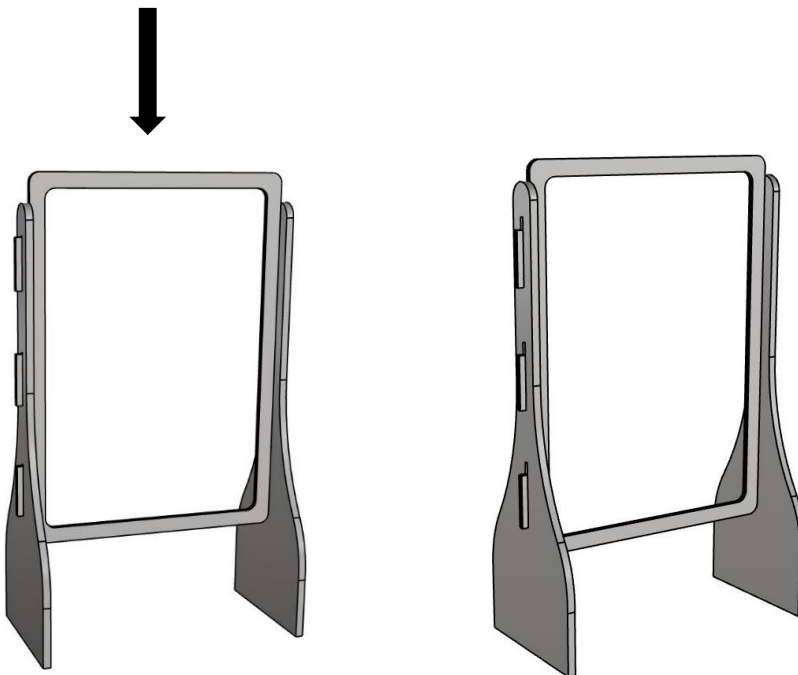

Body Panel

