



Assembly Instructions

Left, Front and Back Upright Panel (x3)

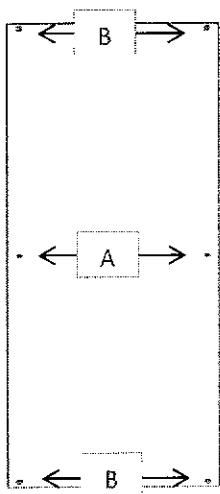

Right Upright Panel (x1)

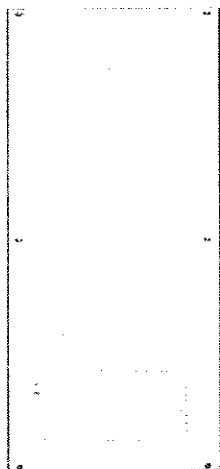

Connecting Strip (x4)




Lock (x1)




Screwdriver (x1)



Top panel (x1)

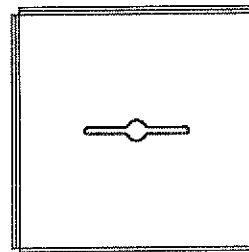

Base panel (x1)

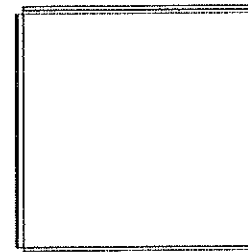

Door (x1)



Allen head screws M6*10 (x24)




Allen head screws M3*10 (x8)



Match hinge (x2)




Nut (x8)

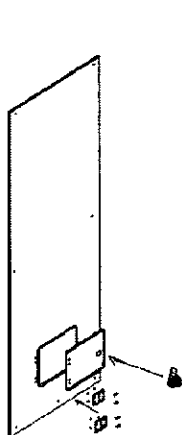

Step 1


Connect the door, upright panel, and metal hinges with M3*10 (x8) screws and nuts (x8). Attach the lock to the door.

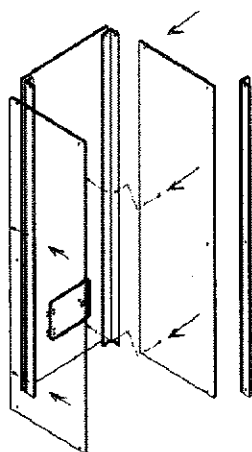

Step 2


Join the front and back upright panels to the right upright panel by attaching the connecting strips (x2) with M6*10 (x4) screws in the "A" locations.

(Do NOT attach screws to the "B" locations at this time.)

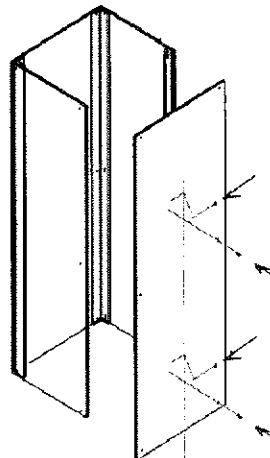


Step 3

Repeat Step 2 for the left upright panel.

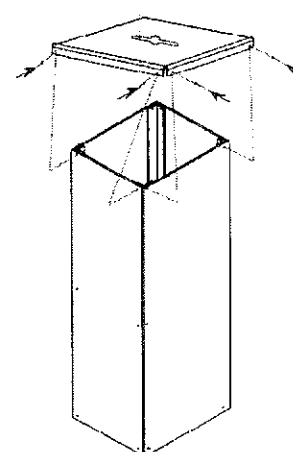

Step 4

Attach the top cover (donation slot) to the body using M6*10 (x8) screws in the corresponding "B" locations.

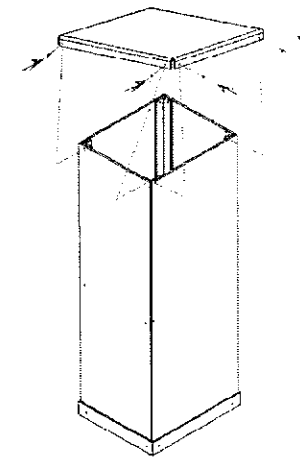


Step 5

Flip the assembly over and attach the bottom cover using M6*10 (x8) screws in the corresponding "B" locations.


Installing Lock Instructions



Step 1: Unscrew

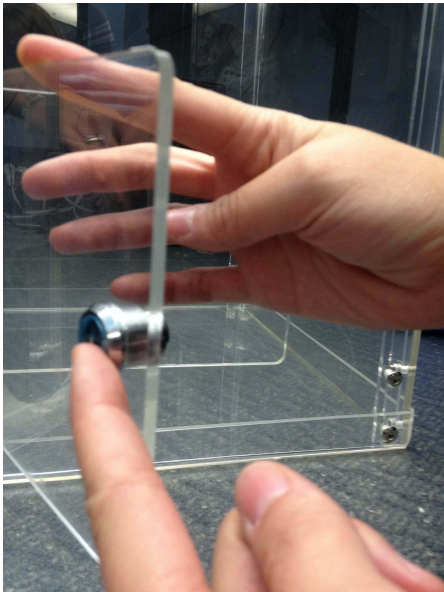

Step 2: Place Lock Inside Pre-Drilled Hole

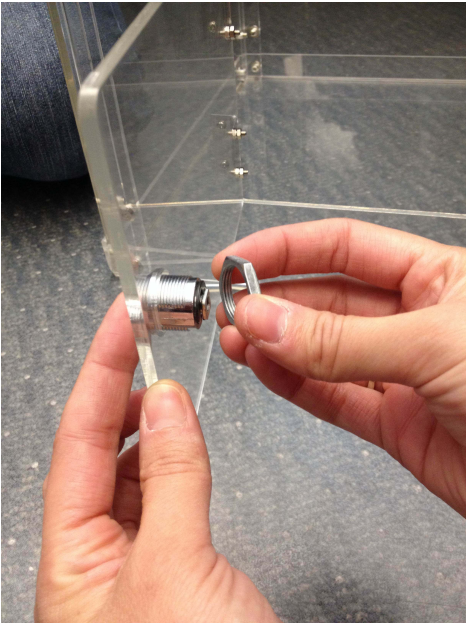

Step 3: Screw Bolt onto the Inside of the Lock



Step 4: Add Pin



Step 5: Add Bolt



Step 6: Screw Together



Step 7: Lock Door