




DSIGN3BKDR Installation Instructions

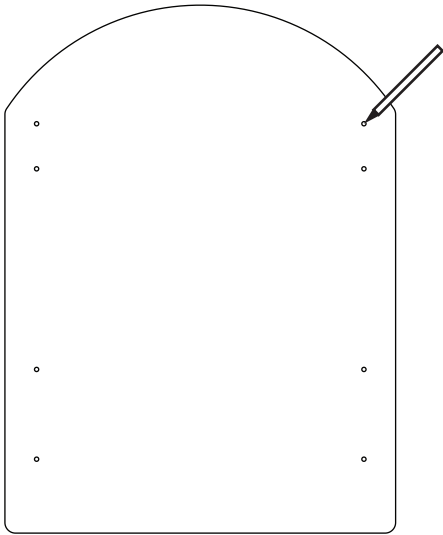



1. Place backer of sign on wall in desired location. With a pencil, mark the center of the 8 holes in the backer.

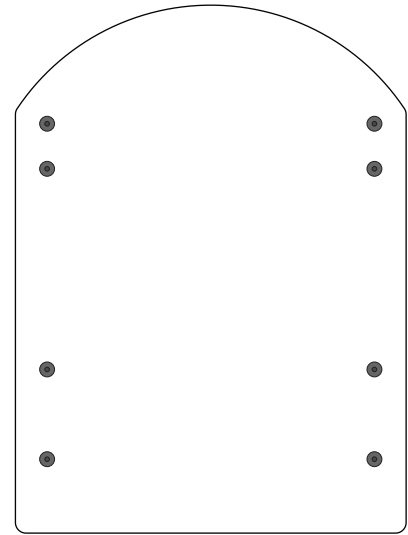

2. With the backer still on the wall, install the stand-off bases, sandwiching the backer to the wall.

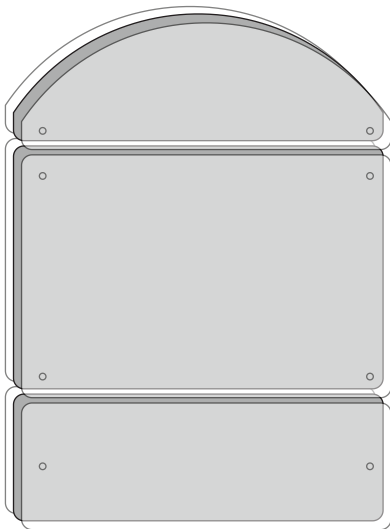

3. Sandwich your graphics between the two layers of clear acrylic and trim if necessary.

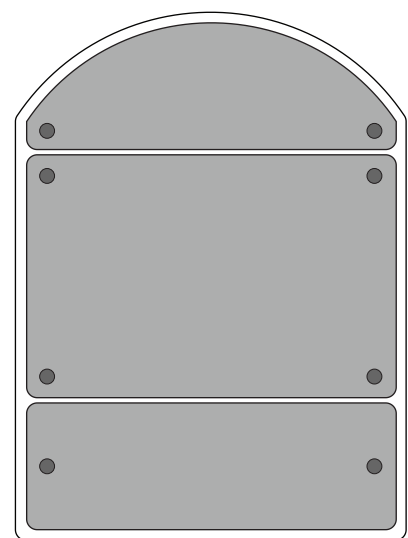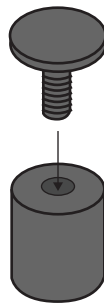

4. Screw on the stand-offs caps, going through the two clear acrylic layers and your graphics.