


Assembly Instructions

①: socket head screws M6*22 12PCS 



②: allen wrench 1PCS 

③: white levelers M8*19*ø25.4 4PCS 

STEP 1:

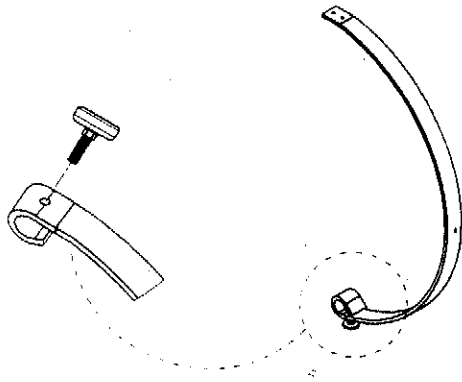

STEP 2:

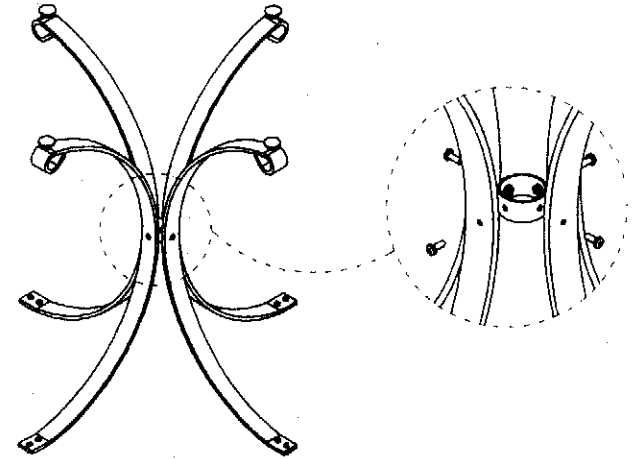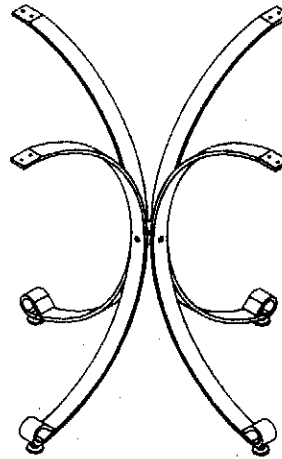

STEP 3:

