

FULL VISION SHOWCASE (FRC) ASSEMBLY INSTRUCTION



PLEASE NOTE: Two people are required for assembly of this unit.

PARTS LIST



DOOR PULL (X2)



#6 x 1/2" PAN SCREW (X6)



TROX SCREW x 3/4" (X22)



TROX SCREW x 1/2" (X2)



AGCON2 (X6)



AGCON3 (X2)



BOLT (X16)



#58 CAM LOCK (X16)



SHELF SUPPORT (X8)



PLASTIC GLAZING (X14)



GLASS GLAZING (X4)



1" GRAY SCREW-CAP (X2)



HW117- 4(X1)



HW116 - 4 (X1)




AK0313 - 4 (X1)




HW18 - 4 (X1)




NE09034-4 (X2)




TOEKICK (X2)

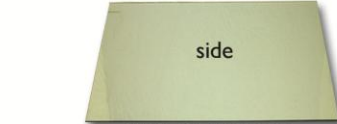

SIDE GLASS (X2)




FRONT GLASS (X1)




SHELF GLASS (X2)



GLASS DOOR (X2)

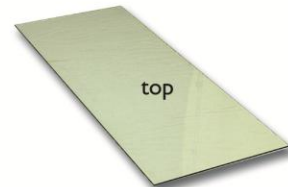

TOP GLASS (X1)



SIDE TOEKICK (X2)



GLIDE (X4)



TOP GUIDE (X4)



BOTTOM PANEL (X1)

TOOLS NEEDED





*T20 TROX SCREW DRIVER NEEDED

1.

BASE ASSEMBLY

TOEKICK (x2)	#58 CAM LOCK (x16)
SIDE TOEKICK (x2)	BOLT (x16)
BOTTOM PANEL (x1)	GLIDE (x4)

- CONNECT SIDE TOE KICK PANEL WITH TOE KICK PANEL USING BOLT.
- INSERT AND TIGHTEN #58 CAM LOCK.
- ATTACH GLIDES ON TOE KICK.
- CONNECT TOE KICK SET WITH BOTTOM PANEL USING BOLT.
- INSERT AND TIGHTEN #58 CAM LOCK.
- SIT BASE ON FLOOR.

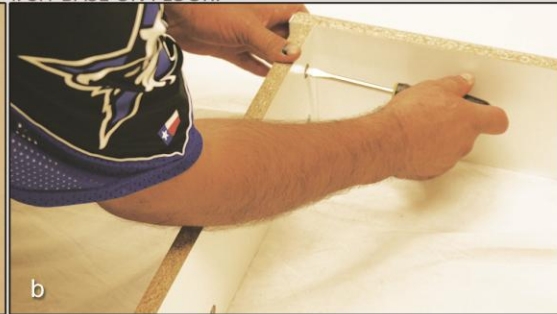
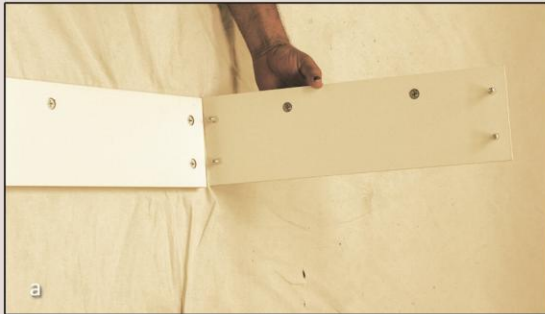


2.

GLASS MODULAR ASSEMBLY

FRONT GLASS (x1)	AGCON3 (x2)
SIDE GLASS (x2)	#6 x 1/2" PAN SCREW (x4)
TOP GLASS (x1)	TROX SCREW x 3/4" (x22)
AGCON2 (x6)	SHELF SUPPORT (x8)

- INSERT FRONT GLASS.
- INSERT RIGHT SIDE GLASS .
- CONNECT FRONT GLASS WITH RIGHT SIDE GLASS USING AGCON3 & 3/4"L TROX SCREW.
- CONNECT RIGHT SIDE GLASS WITH BOTTOM USING AGCON2, 3/4"L TROX SCREW & #6X1/2" PAN SCREW.
- REPEAT SETP 3 AND 4. TO CONNECT LEFT SIDE GLASS WITH FRONT GLASS AND BOTTOM.
- CONNECT TOP GLASS WITH MODULAR USING 3/4" TROX SCREW.
- CONNECT TROX SCREW 3/4" THROUGH SIDE GLASS WITH SHELF SUPPORT.

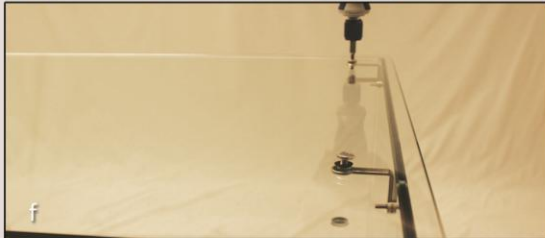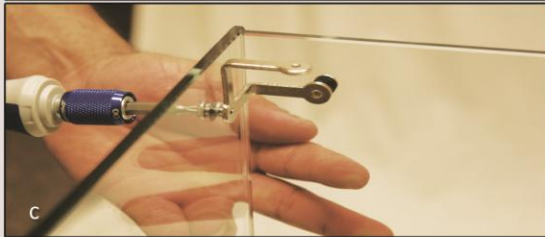

3.

GLASS DOOR ASSEMBLY

GLASS DOOR (x2) TROX SCREW x 1/2" (x2)
HWI17- 4 (x1) GLASS GLAZING (x4)
HWI16- 4 (x1) TOP GUIDE (x4)
HWI8 - 4 (x1) DOOR PULL (x2)
NE09034-4 (X2)
#6 x 1/2" PAN SCREW (x2)

- a. CONNECT HWI17-4 WITH TOP GLASS USING TROX SCREW x 1/2".
- b. CONNECT HWI16-4 WITH BOTTOM USING #6 x 1/2" PAN SCREW
- c. SNAP HWI8-4 INTO HWI16-4.
- d. ATTACH 2 GLASS GLAZING ON 24"L EDGE OF GLASS DOOR.
- e. ATTACH NE09034-4 WITH GLASS DOOR.
- f. ATTACH 2 TOP GUIDE ON TOP OF GLASS DOOR.
- g. PLACE GLASS SHELF ON TO SHELF SUPPORT.
- h. INSERT GLASS DOOR ON CASE.
- i. ADHERE DOOR PULL ON GLASS DOOR WITH PROPER POSITION.

