


ASSEMBLY INSTRUCTIONS


SMFDFBB, SMFDFSB, SMMDFB, SMMDFSB - Dress Form with Wheeled Base

V21.03

Step 1. Attach Casters to the bottom of the Base by hand, then securely tighten them with the enclosed hex wrench. Test the base and make sure all casters are inserted properly and the base is well balanced.

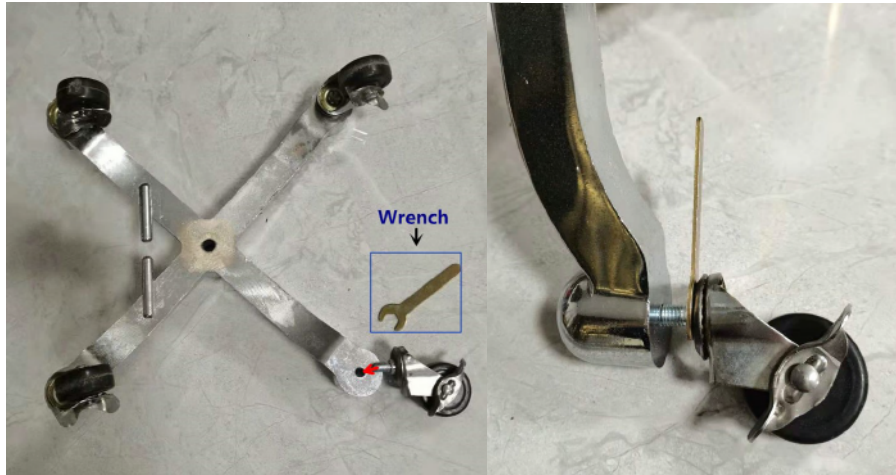

Step 2. Insert the lower pole into the center of the base and fix it with Screw A, and tighten the screw with Allen Wrench included. To fully secure the pole, tighten the screw from the side of the base as shown in the right picture.

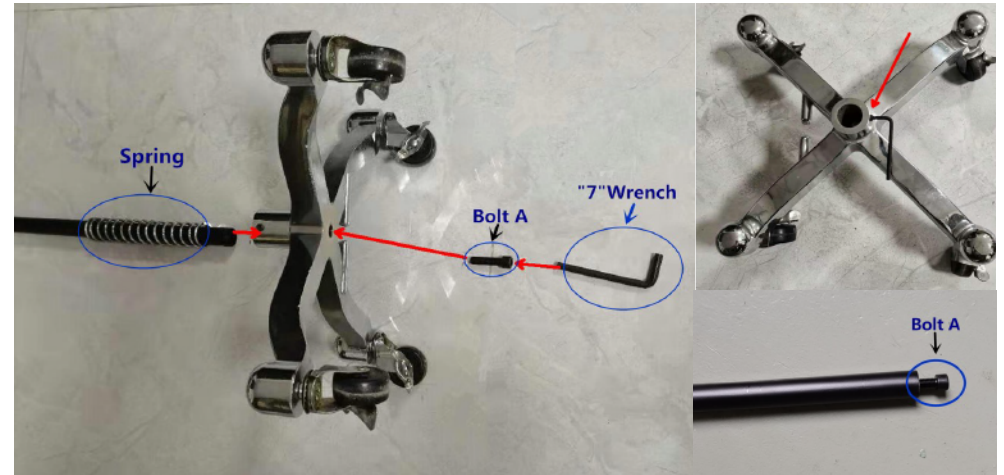


Step 3. Place the foot pedal onto the base as shown below.



Step 4. Insert the upper pole into the lower pole then adjust to the desired height. Hand tighten the thumb screw to fix it in place.



Step 5. Attach the half mannequin to the upper pole and secure it by tightening the thumb screw inside.

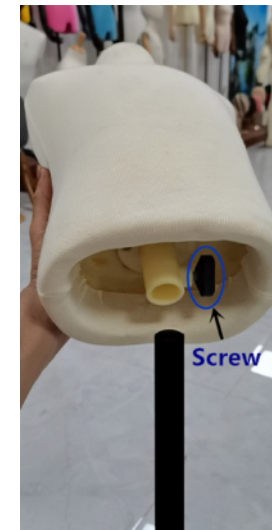

Scan QR code to visit the product page:

