








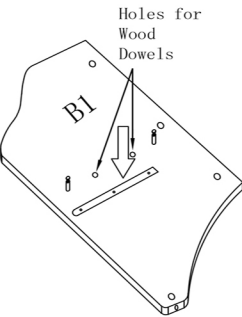


STARTER STUDY CARREL


Assembly Instructions

PARTS			HARDWARE BAG							
A	Top Panel	1 pc	H1	Cam Locks	16 pcs		H6	Glide Brackets	2 pcs	
B	Side Panel	2 pcs		Cam Posts	16 pcs		H7	Wood Dowels	4 pcs	
D	Back Panel	1 pc	H2	Wood Screws	10 pcs		H8	Glides	4 pcs	
E	Keyboard Shelf	1 pc	H3	Keyboard Slide & Track	1 set		H9	Threaded Posts	2 pcs	
F	Square Steel Tube (Left Leg)	1 pc		Grommet Sleeve & Cap	1 set		H10	Socket Screws	2 pcs	
G	Square Steel Tube (Right Leg)	1 pc								


Attention: Before you start assembling your study carrel; please prepare a soft surface work area on the floor. The only tool you will need is a screwdriver. Carefully remove all hardware from packaging and place the hardware parts on the soft work area where they will not come in contact with the laminated wood components. To avoid damage to the laminated wood surfaces, keep hardware parts separated until they are needed for assembly.





(1)

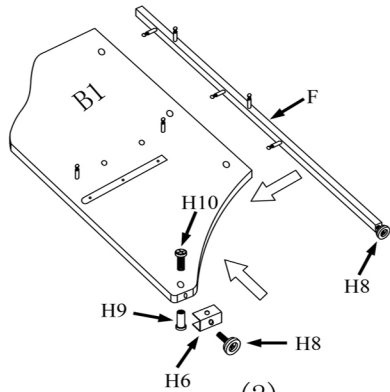


(2)

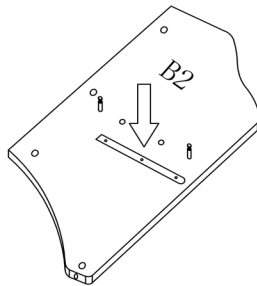


(3)

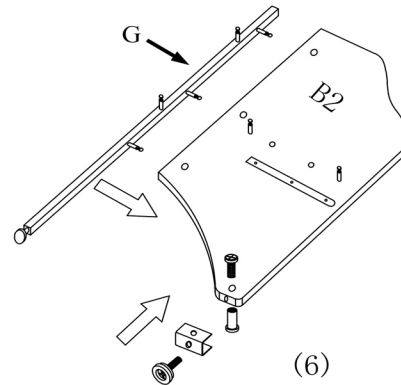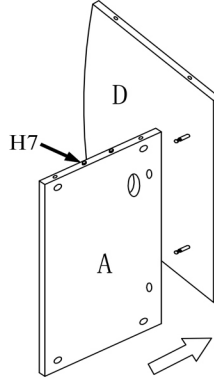


(5)

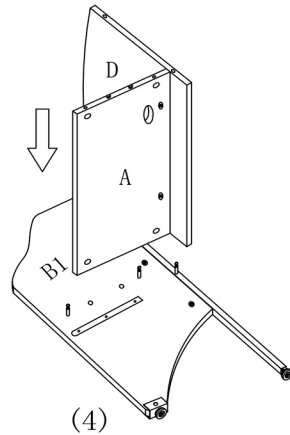


(6)

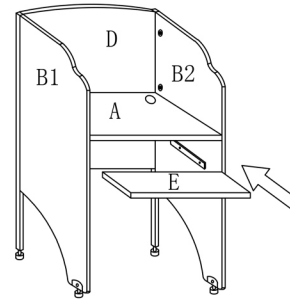


(7)

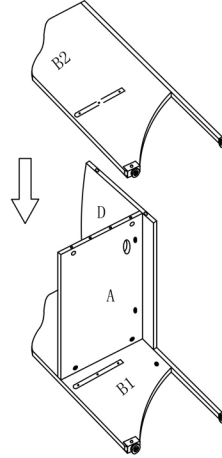

(8)

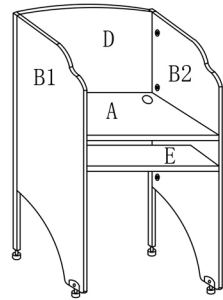

(9)

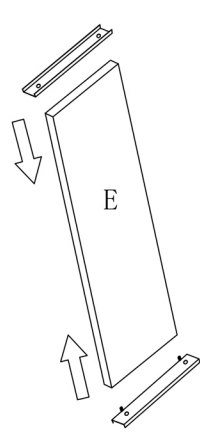

(10)