


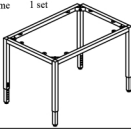



STARTER CARREL

Assembly Instructions

PANELS			HARDWARE BAG							
A	Shelf	1 pc	H1	Cam Lock	22 pcs		H4	Wood Screw	8 pcs	
B	Side Panel	2 pcs	H2	Cam Post	22 pcs		H5	Tube Frame	1 set	
C	Top Panel	1 pc	H3	Grommet	1 set					
D	Back Panel	1 pc								

Attention: Before you start assembling your study carrel, please prepare a soft surface work area on the floor. The only tool you will need is a screwdriver. Carefully remove all hardware from packaging and place the hardware parts on the soft work area where they will not come in contact with the laminated wood components. To avoid damage to the laminated wood surfaces, keep hardware parts separated until they are needed for assembly.

