


## Assembly Procedure

of M8831

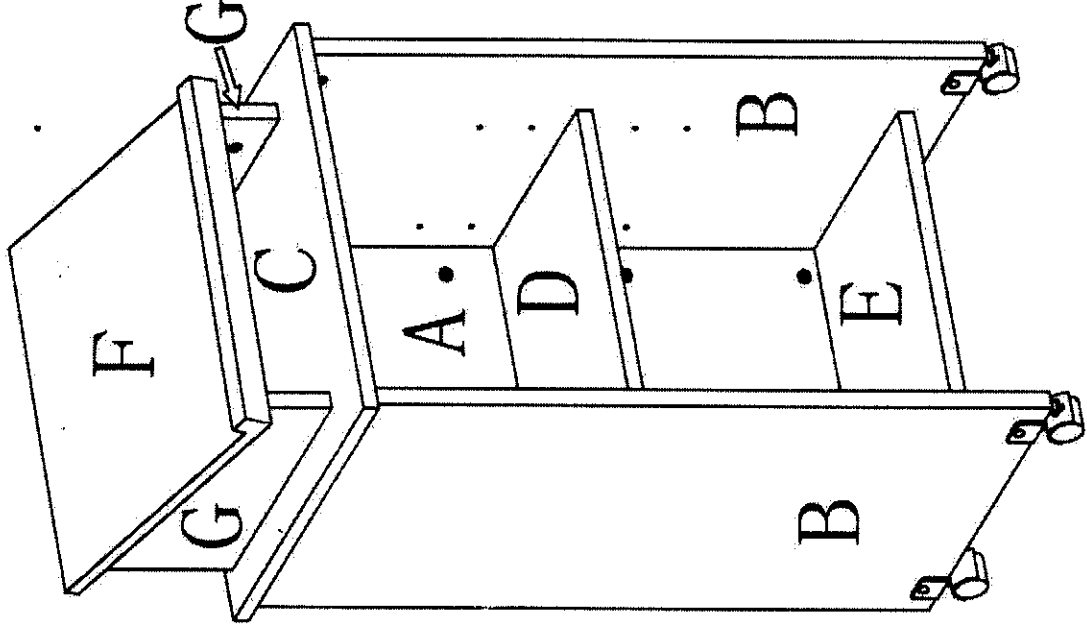

1. Please join bottom panel **E** with back panel **A**.
2. Then join side panel **B** with **A&E**.
3. Cover top panel **C**.
4. Assemble casters with brake in front.
5. Join trapezoid panel **G** onto top panel **C**, then cover slant panel **F**.
4. Insert the adjustable pins into the proper holes and put on the adjustable storage shelf **D**.