



# ASSEMBLY INSTRUCTIONS


## MBSHF - NESTING SHELVES WITH WHEELS

Attention: Before starting assembling, please prepare a soft surface work area on the floor. Carefully remove all hardware from packaging and place the hardware parts on the soft work area where they will not come in contact with the wood boards. 2 PERSON RECOMMENDED.


HARDWARE			
A	Cam Post	4pcs	
B	Dowel	4pcs	
C	Caster Screw	16pcs	
D	Tooth Washer Lock Nut	16pcs	
E	Caster	4pcs	
F	Cam Lock	4pcs	
G	Wood Screw	4pcs	
H	Shelf Pin	4pcs	

Tools needed:

Phillips Screw Driver

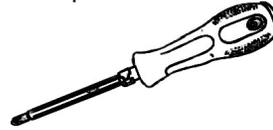

Wrench

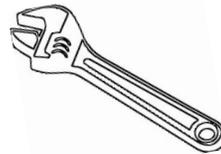


How to join 2 boards with CAM lock:


(a) Insert cam post into flat surface of a board. Fit the hole in the edge of the joining board over the cam post.

(b) Each cam lock has an open section at the back. Insert the cam lock into the cam lock holes. Be sure the opening fits the head of the cam post.


(c) Use a screw driver to turn the cam lock clockwise so it locks onto the head of the cam post. Do not over tighten.

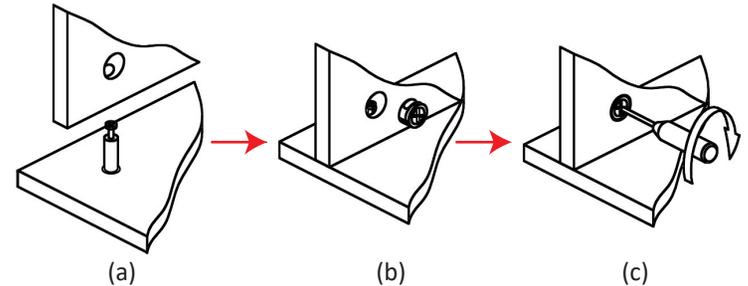


1. Place the top wood panel on the soft surface with pre-drilled holes facing up. Screw in 4 cam posts (A) with phillips screw driver, and insert 2 dowels (B) as shown below.

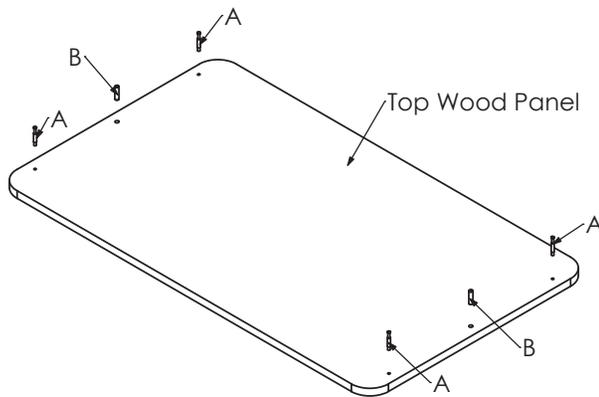

2. Fit cam holes in the edge of left and right panel over the corresponding cam posts installed on top panel in step 1. Insert 4 cam locks (F) into the cam lock holes and tighten them with screw driver.

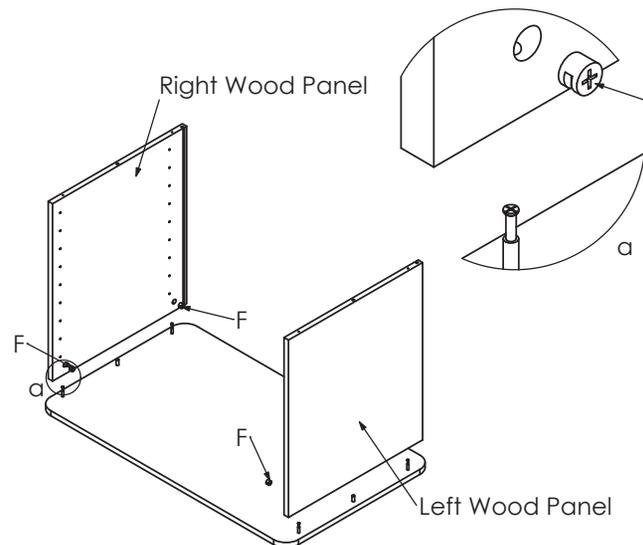


3. Slowly insert both edges of the back panel into grooves in the side panel. See image below:

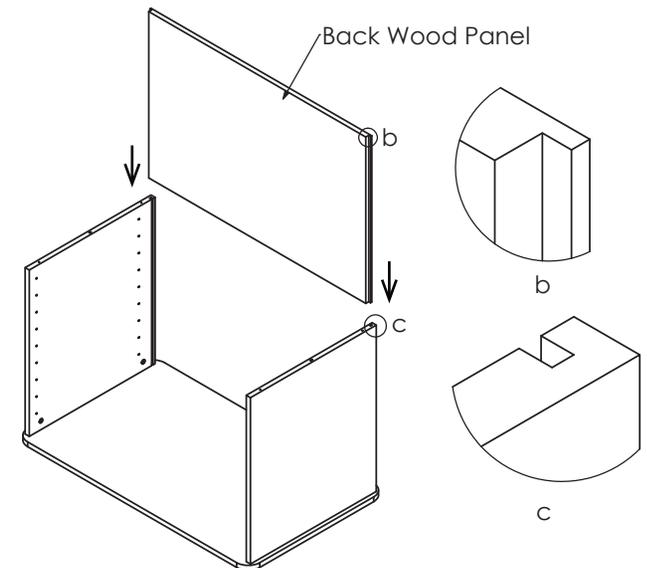


# ASSEMBLY INSTRUCTIONS

## MBSHF - NESTING SHELVES WITH WHEELS


4. Secure 4 casters onto the bottom wood panel with caster screws (C) and lock washers (D). Insert 2 dowels (B) into pre-drilled holes as shown below.

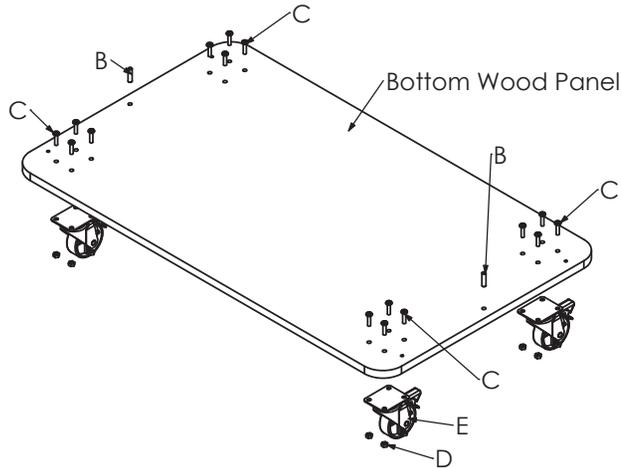


5. Flip the bottom panel with casters assembled and place on the top of the rest panel assembly. Fix the bottom panel by tightening 4 wood screws (G) as shown below.

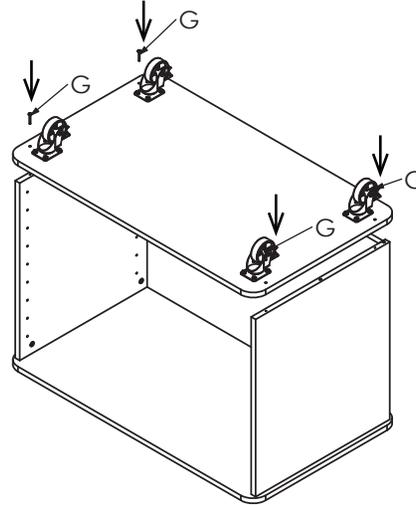


6. Carefully lift the assembled table to its upright position. Insert 4 metal shelf pins into holes in the side panels. Be sure that all 4 pins are on the same level.

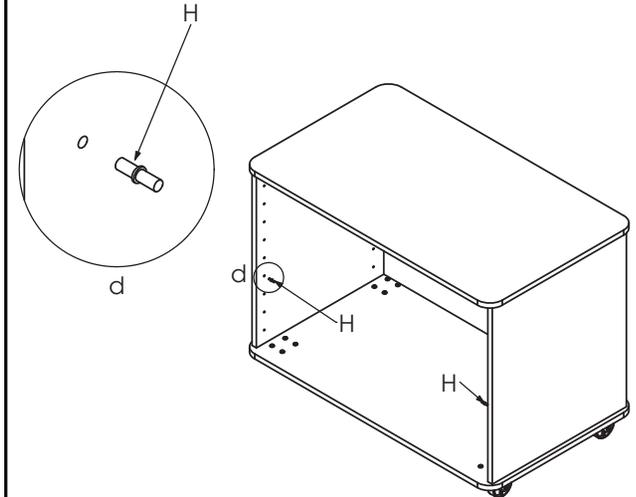

7. Place the shelf panel on the shelf pins. Make sure all 4 corners are supported by the shelf pins and the shelf is stable.

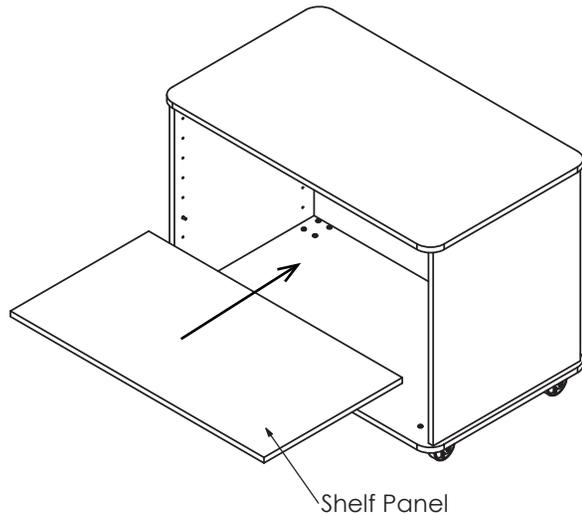

8. The assembly is finished and the table is ready to use.

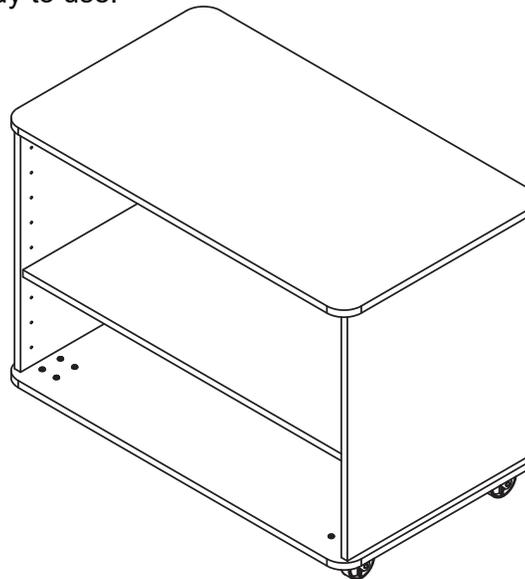

Scan QR code to visit the product page:

