


"MFPH" Series Pocket Bracket

ASPLAR82GO


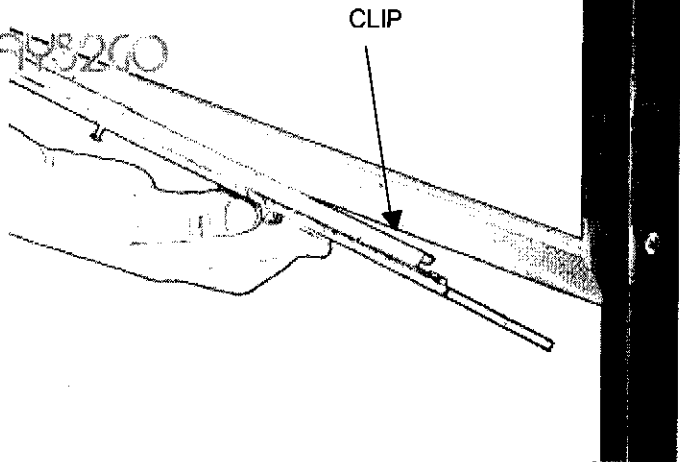


Step 1

Align the Bracket with the Clip positioned at top and the screws facing away from the MFPH body

Step 2

Push one side of the bracket-clip onto the poster frame, then continue inserting until the whole clip is secured. Center the bracket on the poster frame.

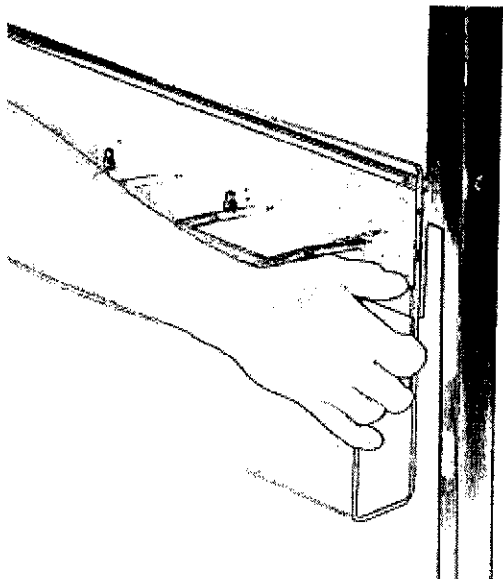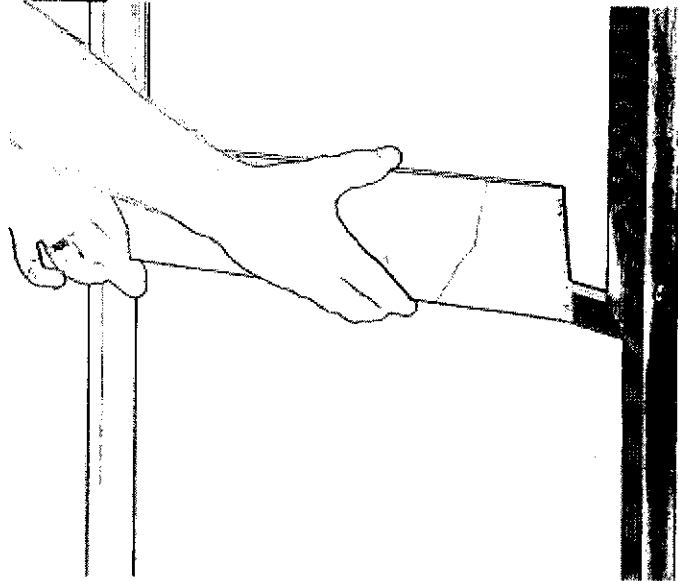

Step 3

Hang Pocket on the bracket and if needed lightly tighten the (2) screws to a snug fit using the enclosed Allen key that was taped to the back of the bracket.