



Remove the caps at the ends of MP pole.




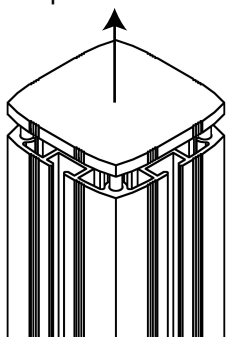


Connect the MP pole to the base and weight plate as shown below:

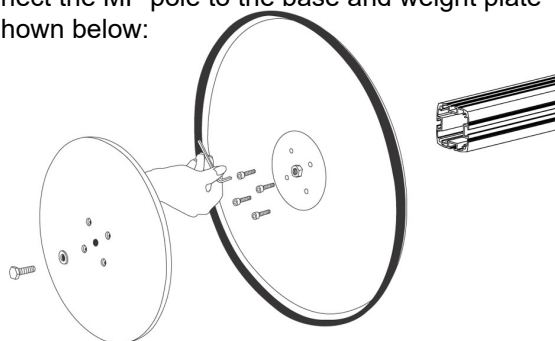




TO CONNECT A LITERATURE TRAY:

1. Loosely attach the included T-slot nut to the back of the literature tray.
2. Slide the support arm (attached to the tray) and the T-slot nut into the T-slot.
3. Tighten the screws with T-slot nut at the desired height.

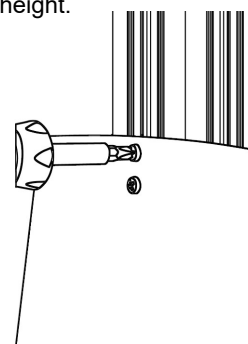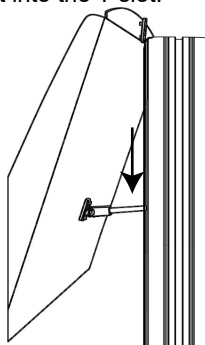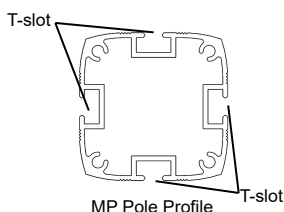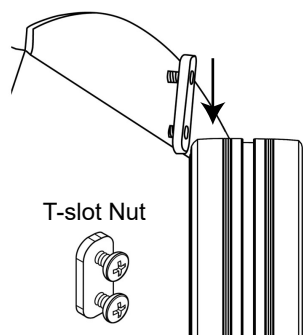




TO CONNECT SNAP FRAME:

1. Slide (2) T-slot nuts down the T-slot in the MP pole to the desired height.
2. Flip open the horizontal portions of the frame:
3. Tighten the screws at the top and bottom of the snap frame to secure it at the place.

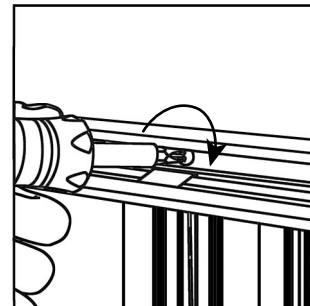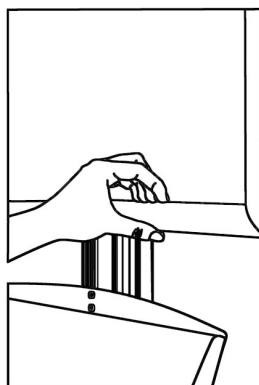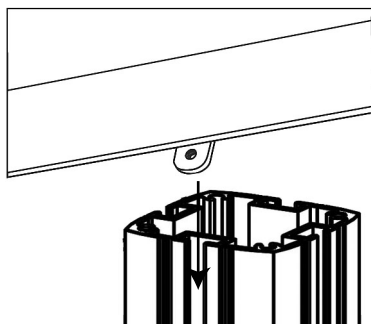



TO CONNECT ACRYLIC POCKET:

1. Loosely connect provided screws and T-slot nuts through the holes in the back of the acrylic pocket.
2. Slide both top and bottom T-slot nuts into the front T-slot in MP pole as shown below:
3. Position the acrylic pocket at the desired height. Secure the pocket by tightening (2) screws from inside of the pocket with the hex key provided.

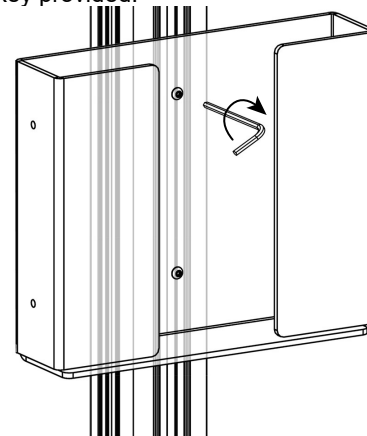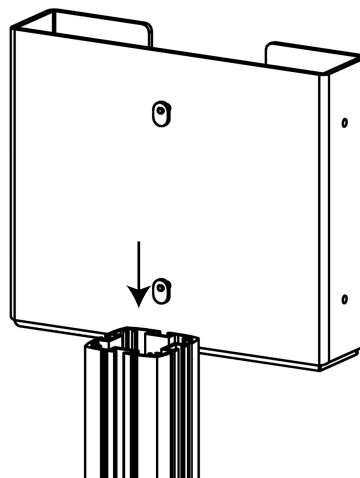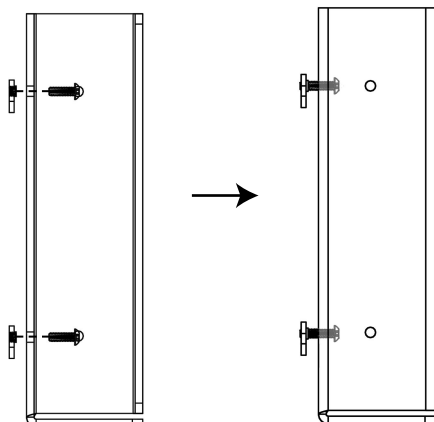


TO CONNECT A SHELF:

1. Slide the aluminum gripper on the shelf into the T-slot in the MP pole. Hold the shelf at the desired height.

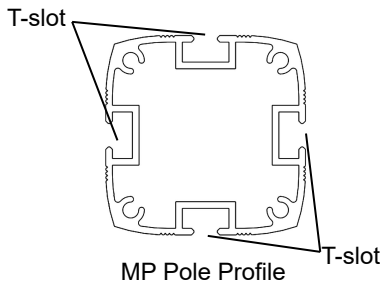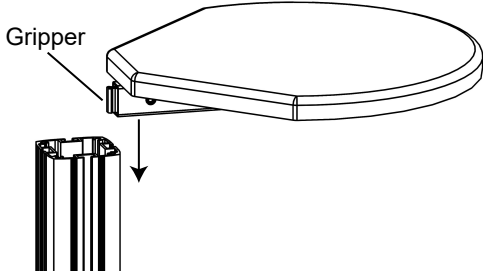


2. To secure the shelf in place, tighten the set screw underneath the shelf with the hex key provided.

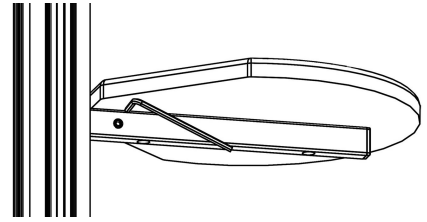


TO CONNECT AN ACRYLIC POCKET:

1. Slightly loosen the T-slot nuts on one side of the acrylic pocket.


Note: the screws and nuts are pre-assembled on the acrylic pocket.

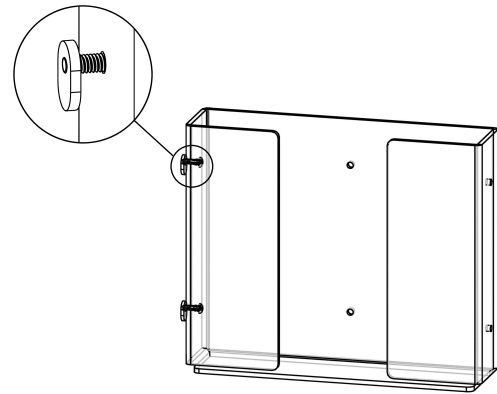

2. Slide both top and bottom T-slot nuts into the T-slot in MP pole as shown below:

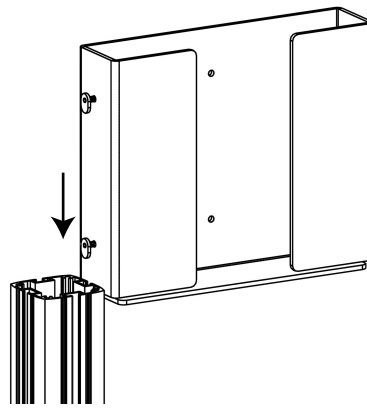


3. Position the acrylic pocket at the desired height. Secure the pocket by tightening 2 screws from inside of the pocket with the hex key provided.

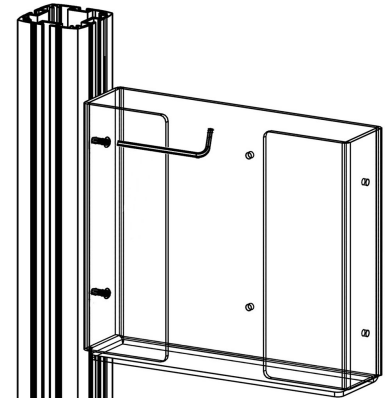


TO CONNECT A SNAP FRAME:


1. Open snap-frames by flipping up the top and bottom frames.

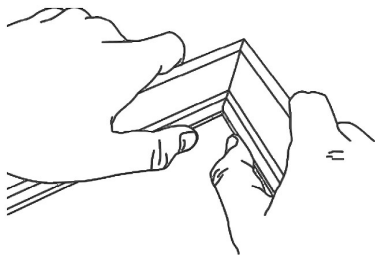

2. Secure the rectangle tubing to the back of the frame by using (2) screws through pre-drilled holes in the frame. Do this for both top and bottom.

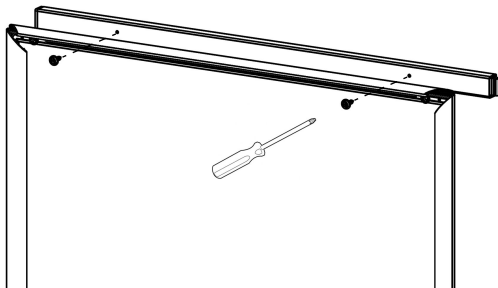


3. Slide both top and bottom grippers on the tubing into the T-slot in MP pole.

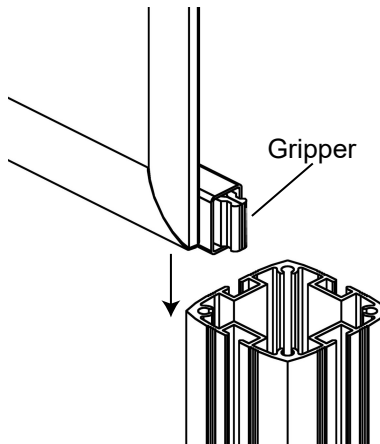

4. Hold the snap frame at the desired height. Tighten the set screws in the back with the hex key provided.

Do this for both top and bottom set screws to secure the snap frame.

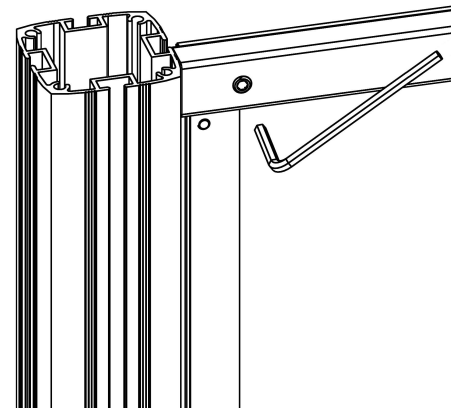

If you have any questions regarding our products, please visit us at www.displays2go.com or contact D2G customer service.