



# MRCORNERBK Assembly Instructions


---

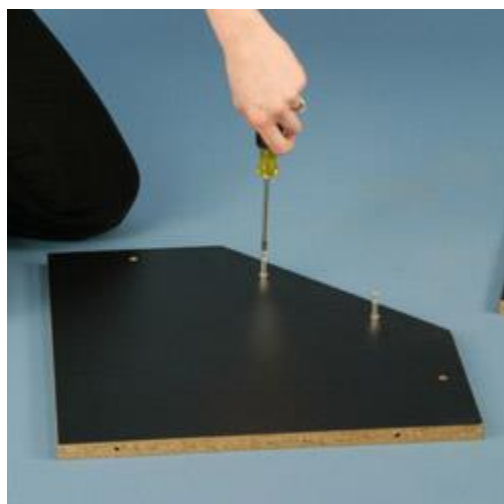


Step 1  
Using a Phillips head screwdriver, screw in two bolts.

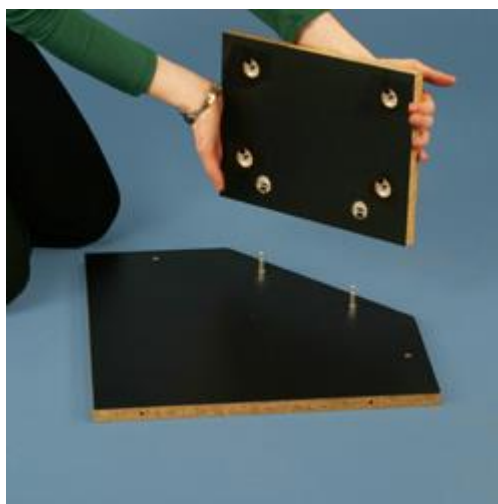

Step 2  
Insert the angle paneled cams so that the openings face the same direction as the bolts.

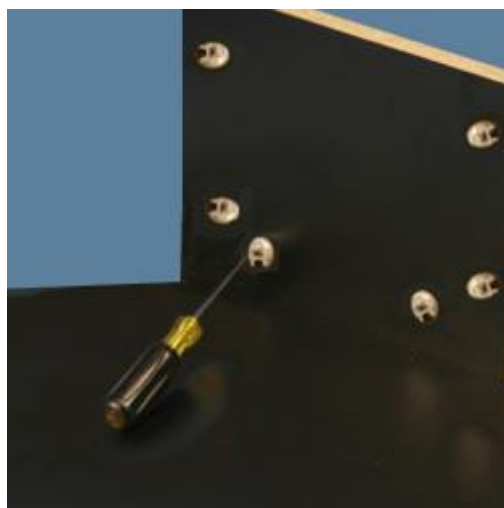

Step 3  
Turn the cams clockwise to tighten and lock them into place.

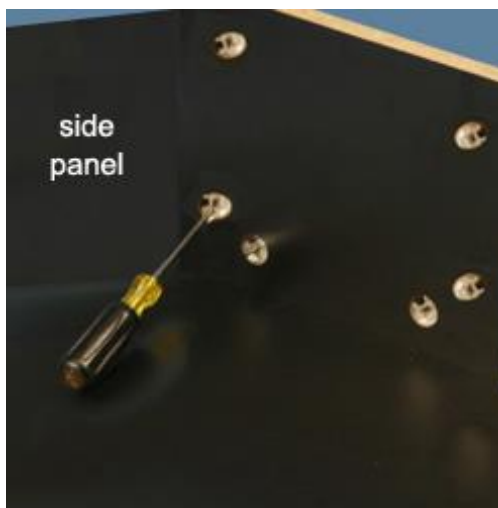

Step 4  
Add 2 side panels. Attach each of the side panels with 2 cams. Turn cams clockwise to tighten.



Step 5  
Find the narrower side panel.



Step 6  
Attach side panel to base using 3 screws.



Step 7  
Move the wider side panel into position.



Step 8  
Attach side panel to base and other side panel using 6 screws. Position the shelves as needed.