

ASSEMBLY INSTRUCTIONS


MRKR3X2 - Printed Marker Board, 36"X24"

DISPLAYS2GO

Please take time to read all instructions before starting the installation.

IMPORTANT: Ensure wall surface is of suitable strength to hold the weight of the acrylic board. The anchor screws provided are for mounting the standoffs to wall surface like drywall and concrete wall, etc. Special mounting hardware may need to be purchased from DIY or hardware store for other wall surfaces the standoffs are being mounted into.

Tools required:

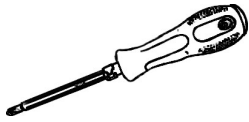

Screw Driver




Bubble Level



Power Drill


1. Hold the acrylic board against the wall at desired height. Use a bubble level to help adjust the board. Mark the center of each pre-drilled hole in the board on the wall.

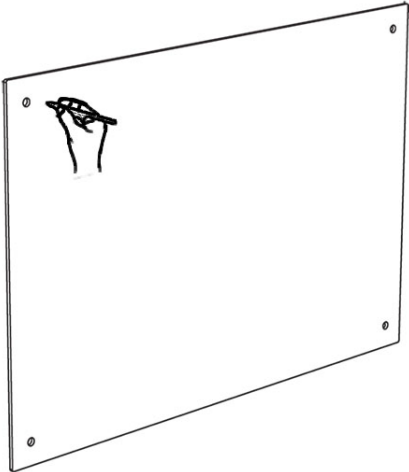

2. Carefully place the acrylic board aside. Drill 4 pilot holes for standoffs at the marked locations.




3. Separate each standoff from the base. Insert the nylon anchors into the pilot holes and tap them flush with the wall surface. Screw in the base of each standoff until they are securely fastened.

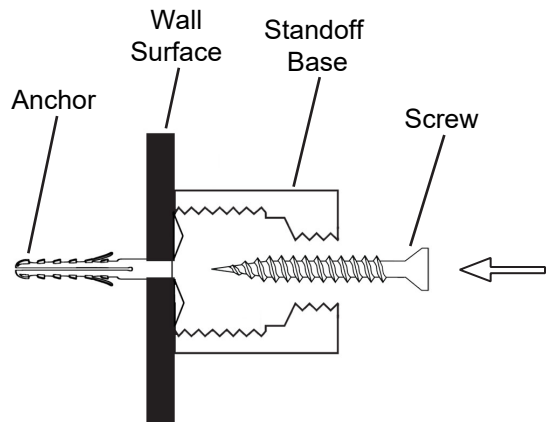

IMPORTANT: Check the base of each standoff is securely tightened after attaching to the wall.

4. Hold the acrylic board in position. Thread all standoff caps to secure the acrylic board to the standoff bases. Be sure to tighten all caps.

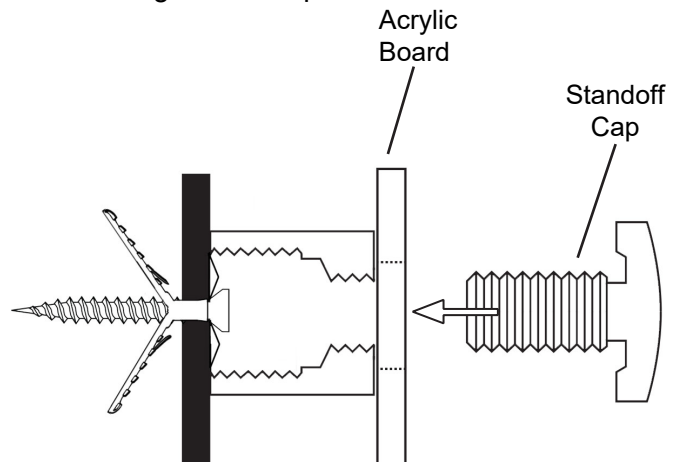

Scan QR code to visit the product page:



If you have any questions regarding our products, please visit www.displays2go.com or contact D2G customer service at 844-221-3388.