

ASSEMBLY INSTRUCTIONS


MRKR6X4 - Printed Marker Board, 72"X48"

DISPLAYS2GO

Please take time to read all instructions before starting the installation. 2 person are required for safety.

IMPORTANT: Ensure wall surface is of suitable strength to hold the weight of the acrylic board. The anchor screws provided are for mounting the standoffs to wall surface like drywall and concrete wall, etc. Special mounting hardware may need to be purchased from DIY or hardware store for other wall surfaces the standoffs are being mounted into.

Tools required:

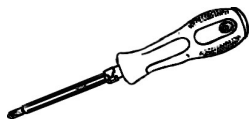

Screw Driver




Bubble Level




Power Drill


1. Attach the drill template to the wall at desired location and mark the drill center on the wall for each standoff. Use a bubble level to help to keep the top edge of the template horizontal.

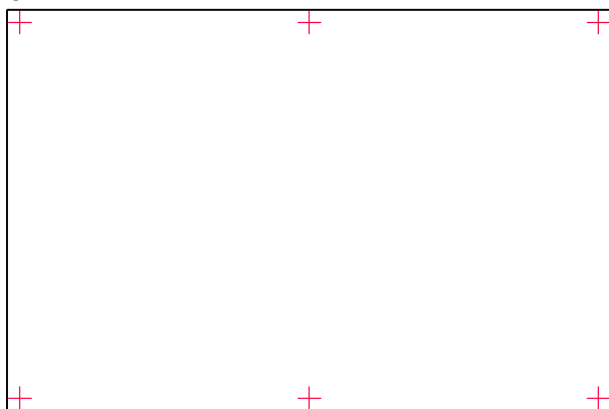

2. Fix the template on the wall and drill 4 pilot holes for standoffs at the marked locations.

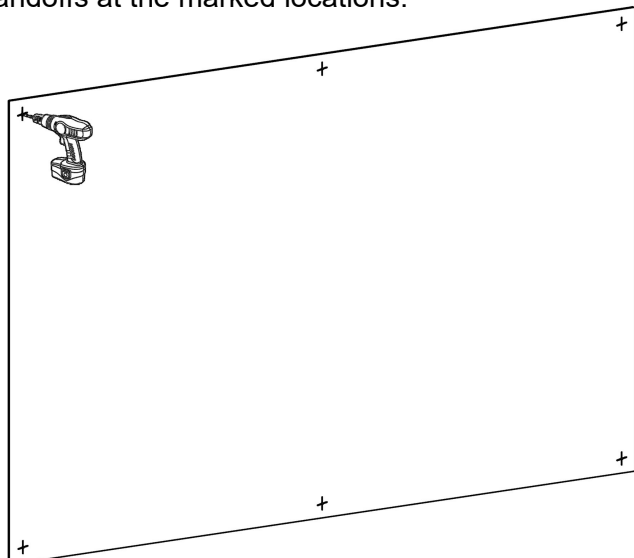

3. Separate each standoff from the base. Insert the nylon anchors into the pilot holes and tap them flush with the wall surface. Screw in the base of each standoff until they are securely fastened.

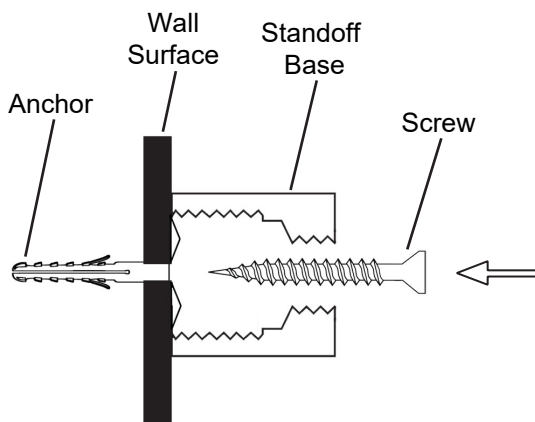


IMPORTANT: Check the base of each standoff is securely tightened after attaching to the wall.

4. Hold the acrylic board in position.

CAUTION: The acrylic board is heavy! 2 person are recommended to lift the board.

Thread all standoff caps to secure the acrylic board to the standoff bases. Be sure to tighten all caps.

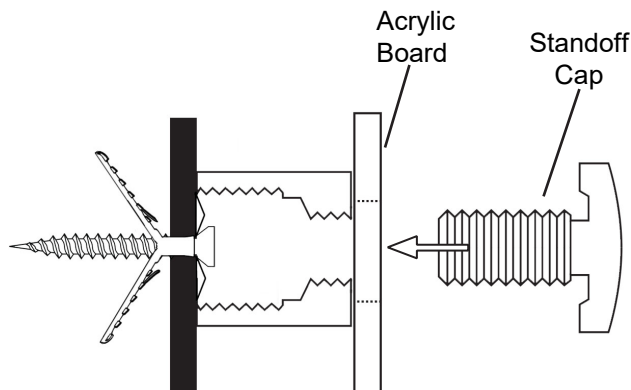

Scan QR code to visit the product page:



If you have any questions regarding our products, please visit www.displays2go.com or contact D2G customer service at 844-221-3388.