




SNAP FRAME

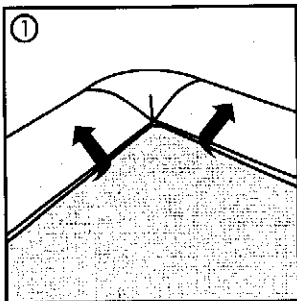


• Open all profiles upwards.

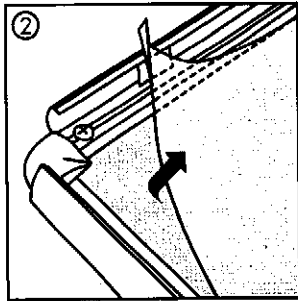

• Take-off the anti-reflex cover.

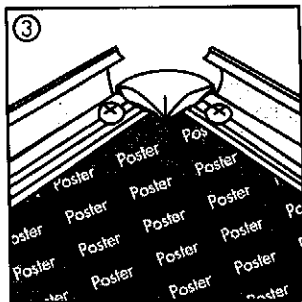

• Place in the poster.

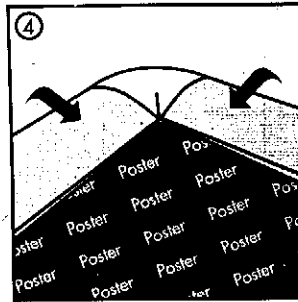

• After placing the cover back on the poster, close the profiles downwards.