

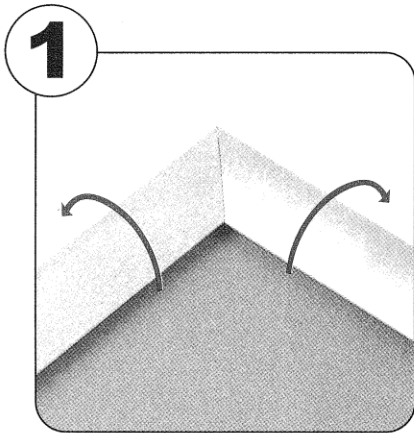



25#

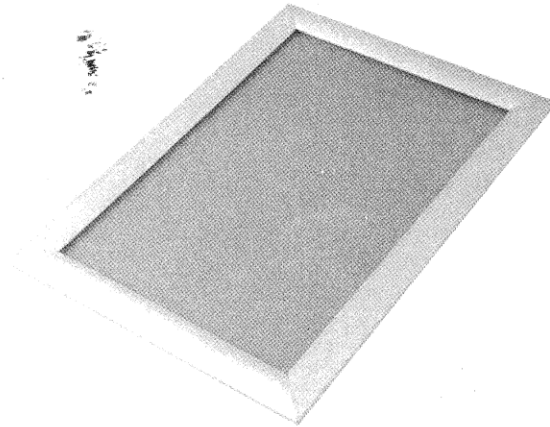


Open all profiles upwards.

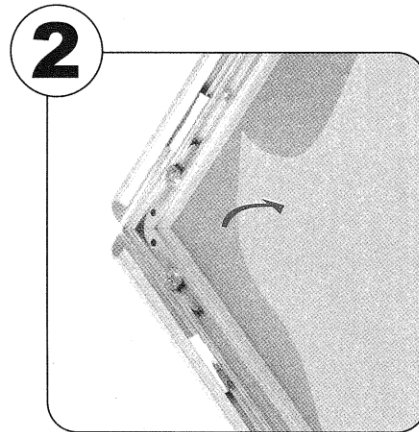

Take-off the anti-reflex cover.

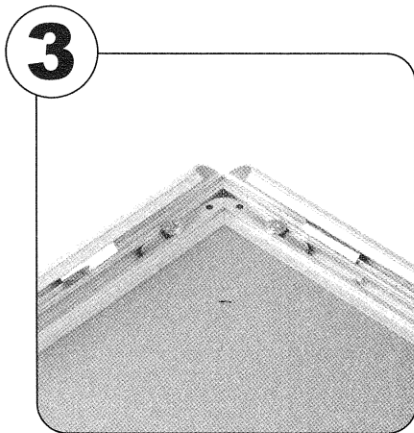

Place in the poster.

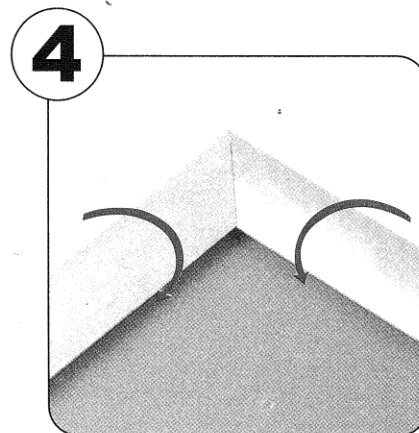

After placing the cover back on the poster, close the profiles downwards.