DISPLAYS2GO





Included Pieces:








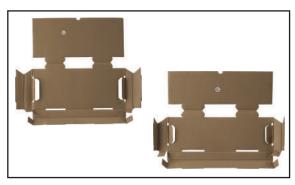

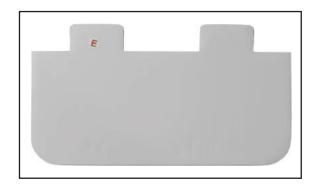

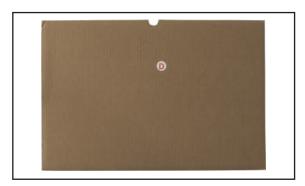



1. Open body (B), laying flat, folded in half



2. Take base (A) and insert tabs from body (B) into slots of (A)

NOTE: make sure perforated flap of base (A) is in front



3. Stand unit upright and insert tabs on sides of body (B) into base (A)



4. Insert bottom shelf cover (D) on top of (A)



5. Fold front lip of base (A) over to form the bottom tray



6. To form shelves (C1 & C2), fold front perforated lip up and over tab of shelf sides



7. Insert tabs from front lip into base of tray



8. Fold over sides - insert tabs into base slots



9. Fold top of tray over into place



10. Insert shelf tabs into body (B) back slots



11. Insert bottom tab of shelves (C1 + C2) into side panels of body (B)



12. Insert removable header