
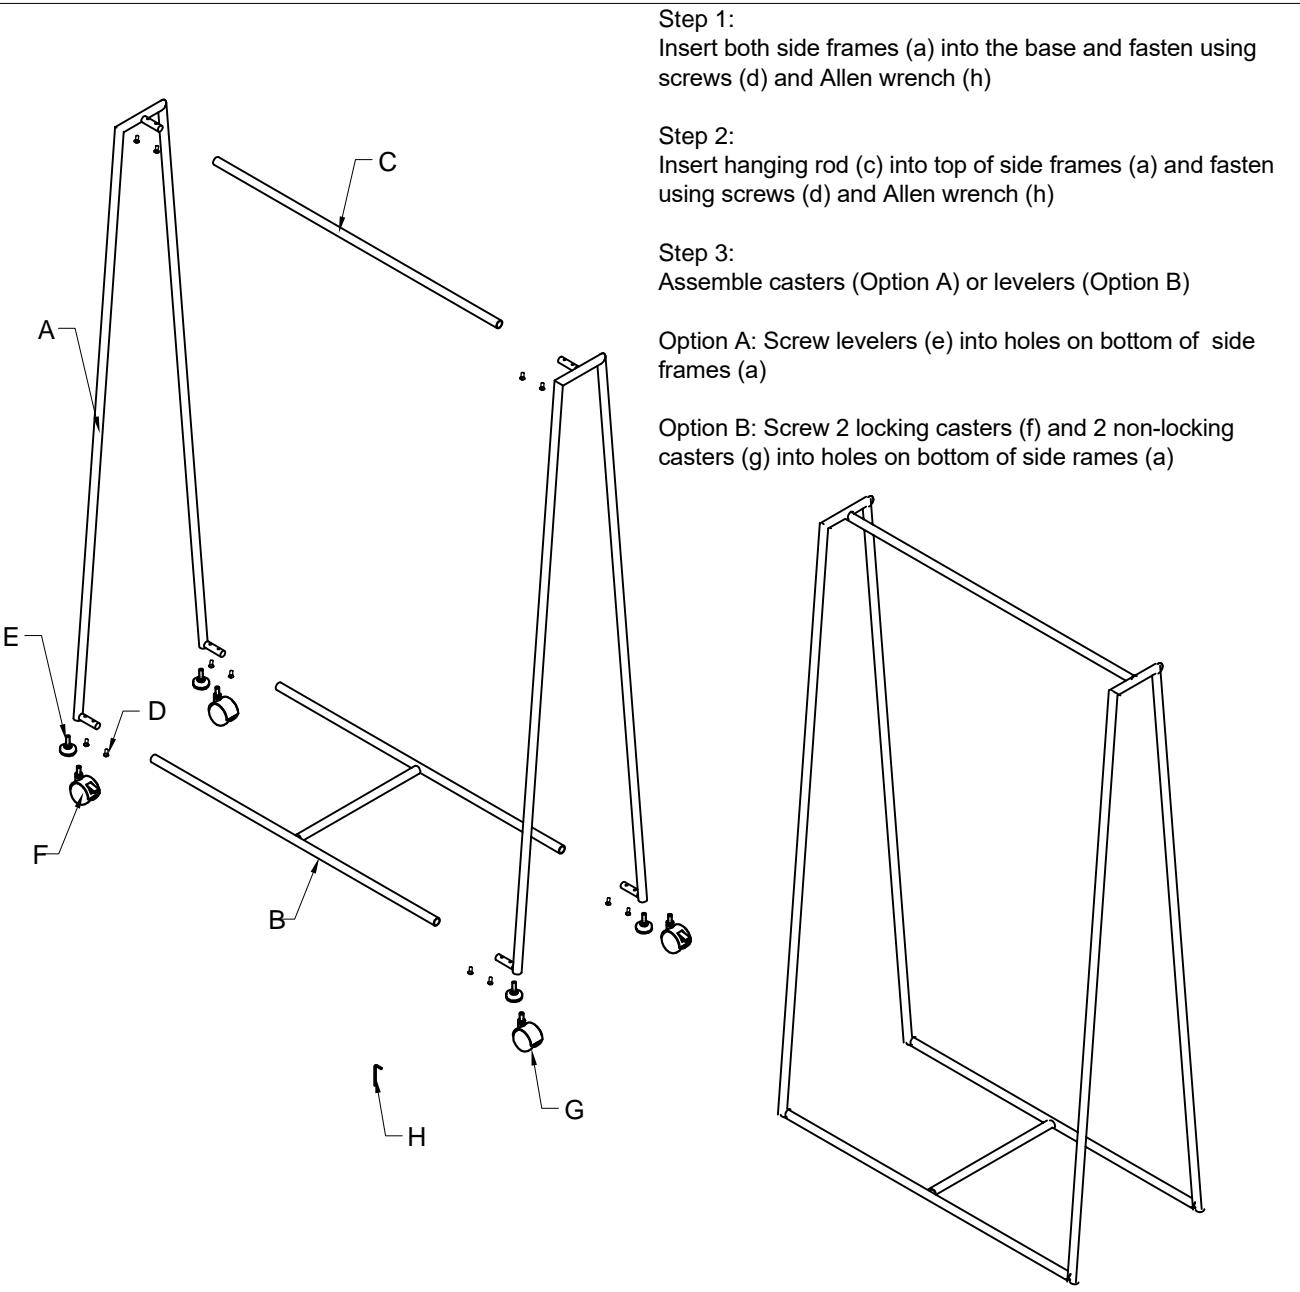


TEPEMTLBLK Instruction

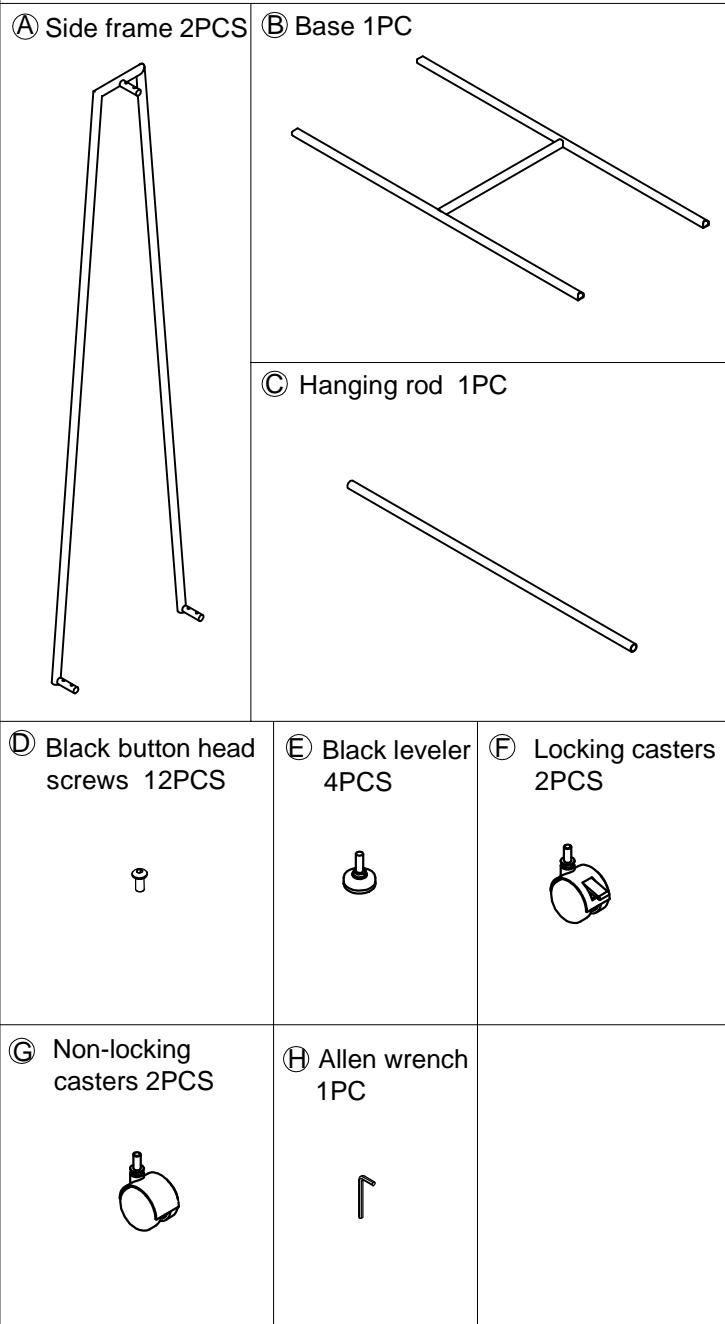

Step 1:
Insert both side frames (a) into the base and fasten using screws (d) and Allen wrench (h)

Step 2:
Insert hanging rod (c) into top of side frames (a) and fasten using screws (d) and Allen wrench (h)

Step 3:
Assemble casters (Option A) or levelers (Option B)

Option A: Screw levelers (e) into holes on bottom of side frames (a)

Option B: Screw 2 locking casters (f) and 2 non-locking casters (g) into holes on bottom of side frames (a)