


Literature Holder: Assembly Instructions

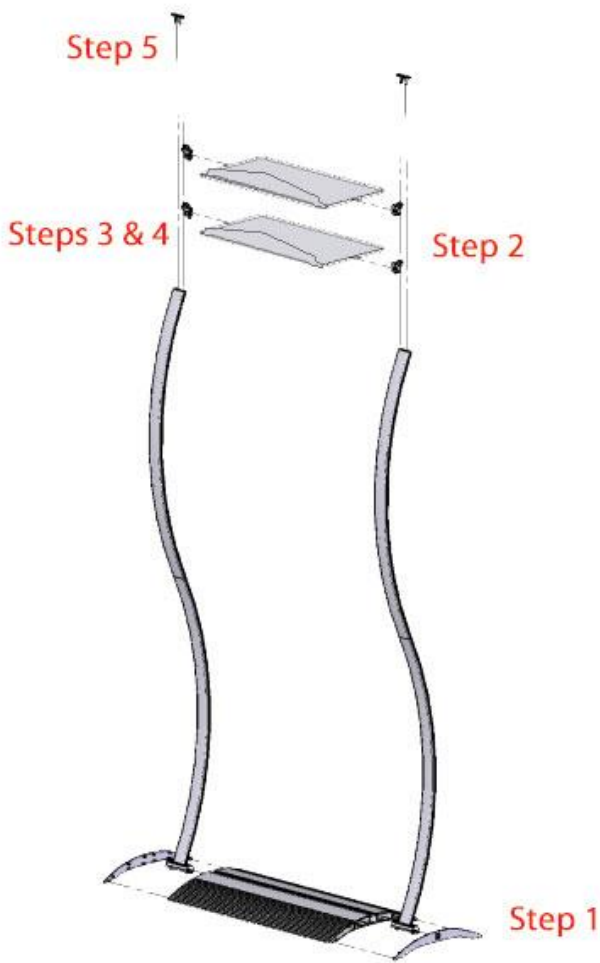


You will need:

Phillip's head screwdriver
Flat head screwdriver
Water level
Measuring tape
*All hardware is included

Assembly Tips:


- When tightening side extrusions to base, remember to keep the extrusion flush to the groove of the base. The extrusion tends to "rock" in the base groove, which if tightened this way, your display will not be perpendicular.
- If you are having difficulty inserting the compartments, loosen one of the side extrusions, and slide it slightly out the base to grant you more room.
- When tightening the plastic set screw, make sure your pocket is lying flush against the bracket to ensure a secure connection.
- Once you've attached your pockets, use a water leveler to ensure your shelves are level.

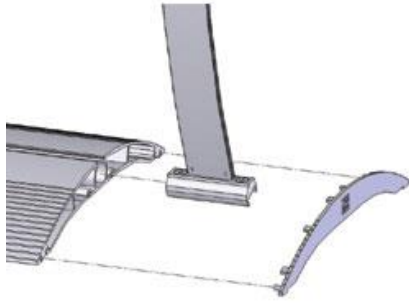


1. Remove end cap from base. Slide both side supports into base and secure in place with screwdriver. Replace end cap.




2. Measure the desired height for each pocket. Attach and secure each bracket onto both side supports, using a Phillips Head screwdriver and the provided Allen key.

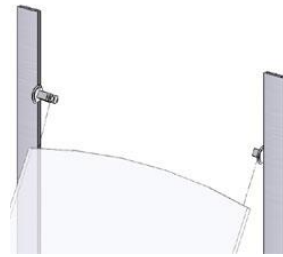

3. Insert each acrylic pocket into the brackets. Make sure your pocket is lying flush against the bracket to ensure a secure connection.

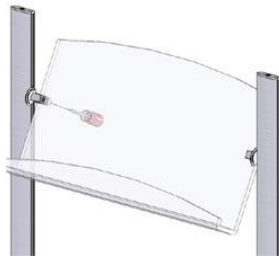

4. Secure your accessories in place by tightening the plastic set screws.

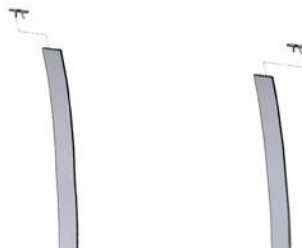

5. Attach end cap to both side supports.



6. Your display rack is now set up and ready for literature!