

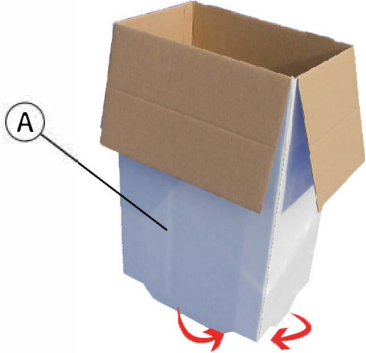


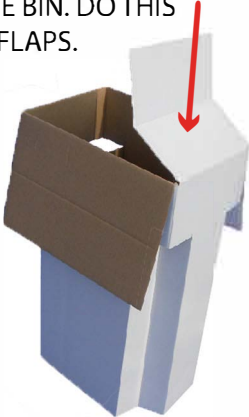
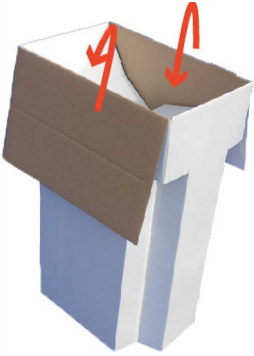

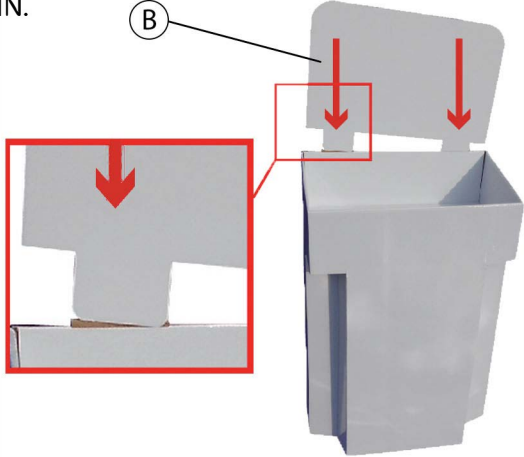


ASSEMBLY INSTRUCTIONS

WCDUM SERIES

PARTS LIST	QTY	A	B
A. DUMP BIN	1		
B. HEADER CARD	1		

INSTRUCTIONS

<p>1. UNFOLD THE DUMP BIN FLAT AND SQUARE UP.</p> 	<p>2. PUSH ONE VERTICAL EDGE IN ALONG THE LINE AND FORM A SUPPORTING POLE INSIDE.</p> <p>DO THIS TO ALL (4) EDGES.</p> 	<p>3. FOLD IN 2 SIDE FLAPS INWARD ALONG THE EDGES.</p> 
<p>4. FOLD THE 2ND FLAP ALONG THE PRE-FORMED LINE TO CREATE THE BOTTOM OF THE BIN. DO THIS ON BOTH SIDE FLAPS.</p> 	<p>5. FOLD IN FRONT AND BACK FLAPS AS THE SIDE FLAPS. FOLD THE 2ND FLAP TO FORM THE BOTTOM OF THE BIN.</p> 	<p>6. THE DUMP BIN ASSEMBLY IS COMPLETED.</p> 
<p>7. INSERT (2) TABS ON THE HEADER CARD INTO THE PRE-CUT SLOTS ON THE EDGE OF THE DUMP BIN.</p> 		<p>COMPLETED DUMP BIN.</p> 