










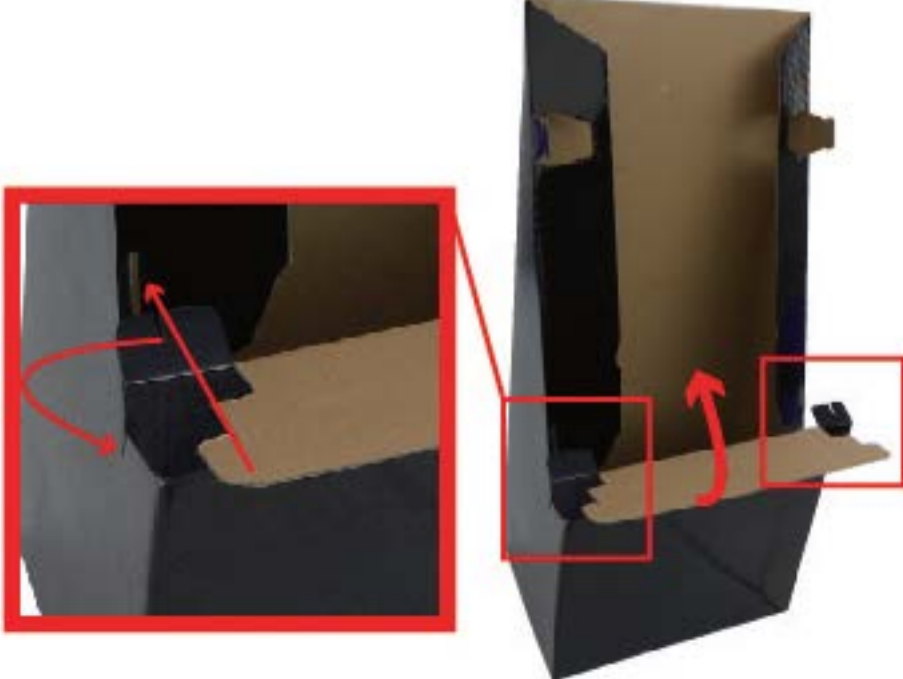


ASSEMBLY INSTRUCTION


WCFL6BK

<p>PARTS LIST QTY;</p> <p>A. BASE 1PCS</p> <p>B, SHELF 1PCS</p> <p>C. PARTITION 1PCS</p> <p>D. PARTITION 2PCS</p> <p>E. HEADER 1PCS</p>	A	B	C
			D
			E
			


STEPS

<p>1. FOLD PARTITIONS FROM MIDDLE LINE, AND PUT SHORT PARTITIONS INTO LONG PARTITION</p> 	<p>2. PARTITIONS ARE READY</p> 	<p>3. REAR SIDE UP</p> 
<p>4. PUT PARTITIONS IN THE MIDDLE AND FOLD SHELF TOP AND BOTTOM</p> 	<p>5. FOLD SHELF RIGHT AND LEFT SIDE</p> 	<p>6. CLOSE THE RIGHT AND LEFT SIDE INTO SLOT</p> 
<p>7. SHELF IS READY</p> 	<p>8. PUSH THE SIDES AS IMAGE AND OPEN THE BASE</p> 	<p>9. CLOSE IN AND LOCK THE SLOT ON FRONT SIDE OF BASE</p> 


10. BASE IS READY

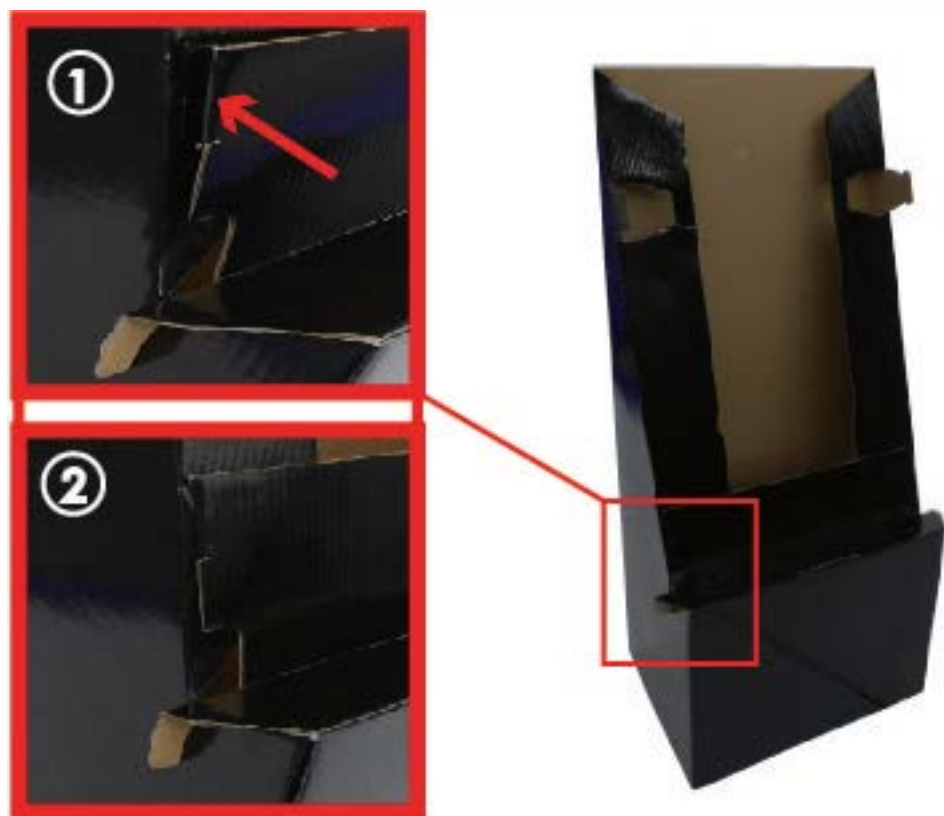

11. PUT SHELF ONTO BASE

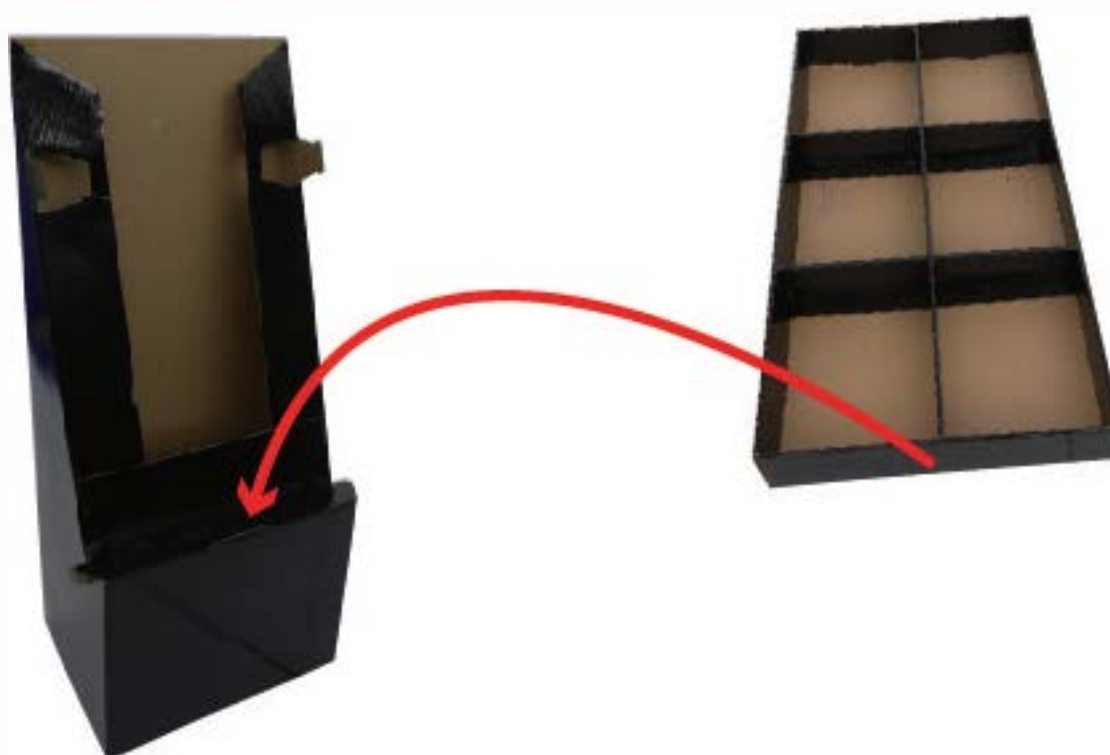

12. PUT THE BASE FLAP THROUGH THE SHELF SLOT AND CLOSE

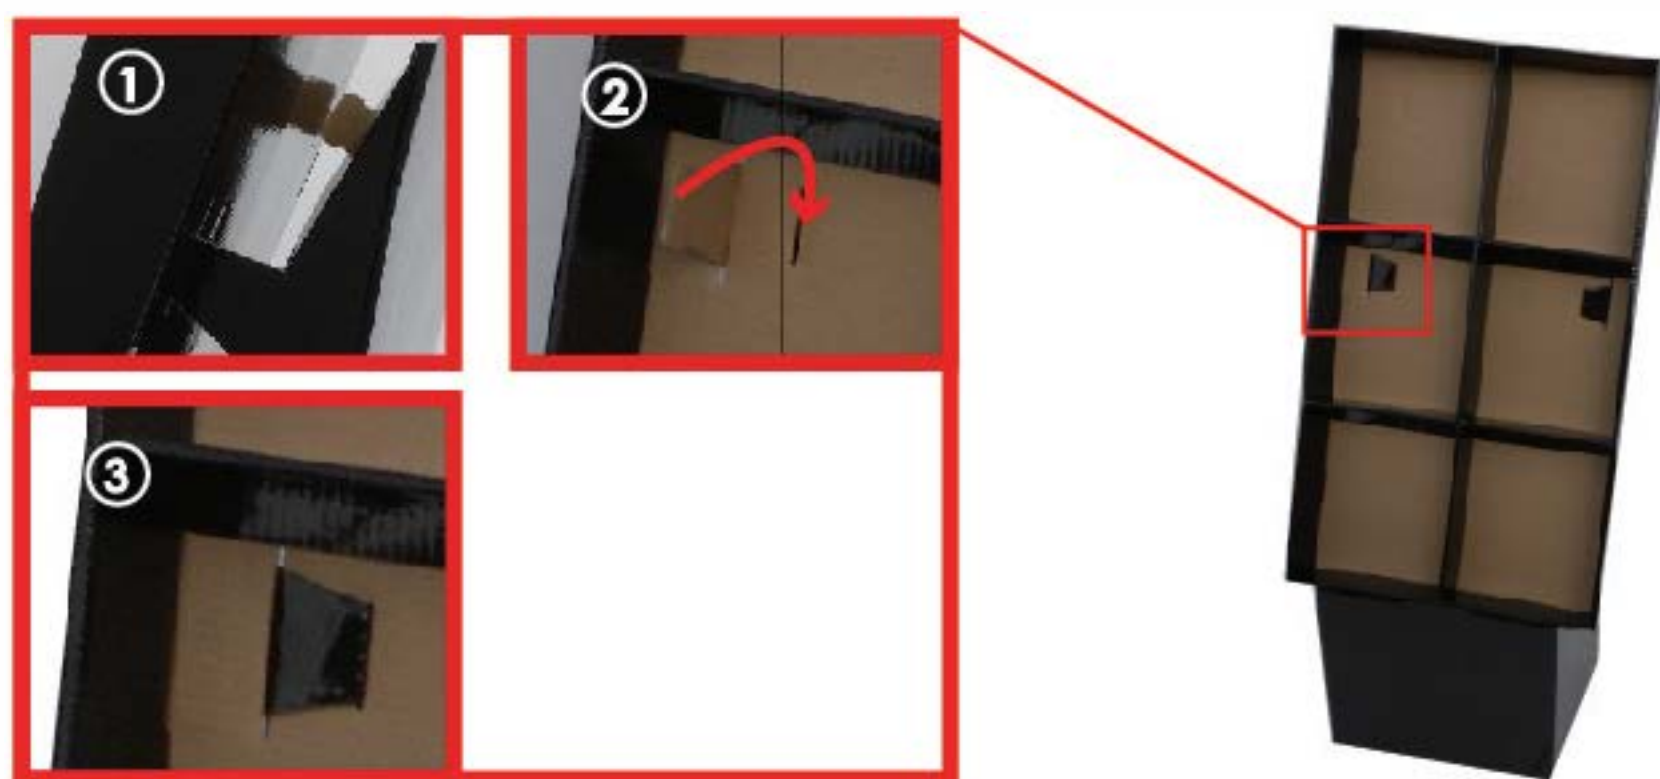

13. AS IN THE IMAGE, TURN BACK THE HEADER SIDES



14. PUT RIGHT AND LEFT SIDE ONTO SHELF



15. CLOSE DOWN THE HEADER RIGHT AND LEFT SIDE INTO SHELF

