




Open all profiles upwards.

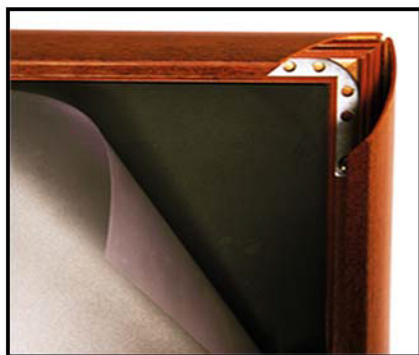

Take-off the anti-reflex cover and place the poster in.



After placing the cover back on the poster, close the profiles downwards.