


WMSO Series Installation Instructions


1.



Separate each
standoff from
the base.




2.

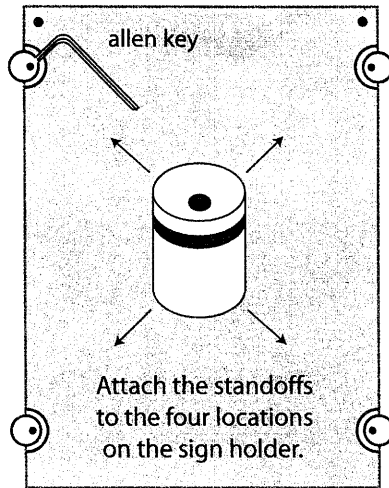

Attach the standoffs
to the four locations
on the sign holder.

3.

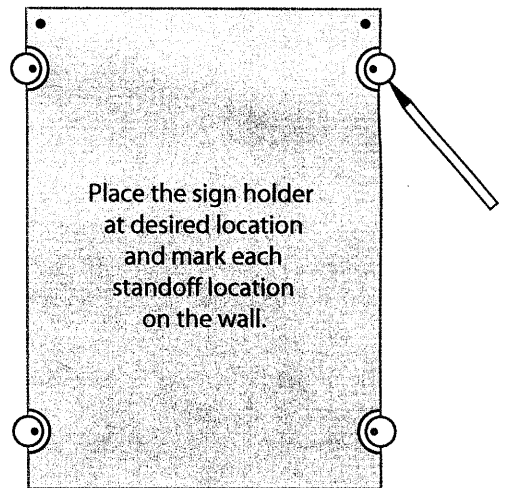


Place the sign holder
at desired location
and mark each
standoff location
on the wall.

4.




Drill holes in the center
of each marked spot.
Insert wall anchors.

5.





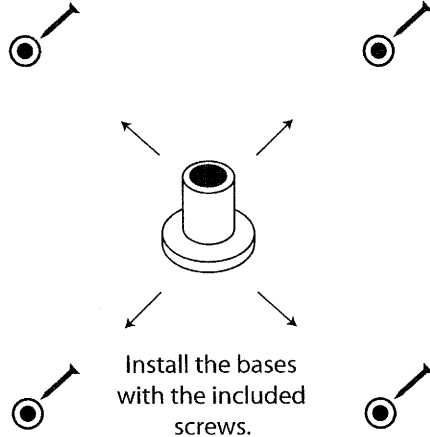


Install the bases
with the included
screws.

6.

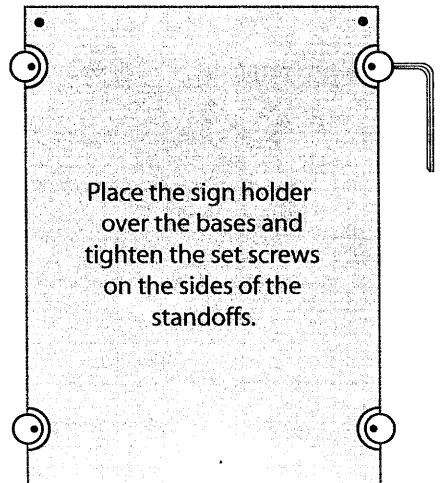

Place the sign holder
over the bases and
tighten the set screws
on the sides of the
standoffs.

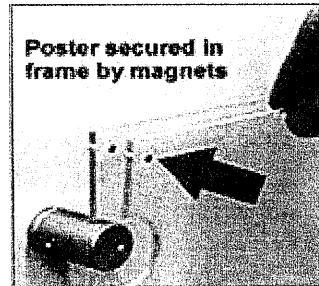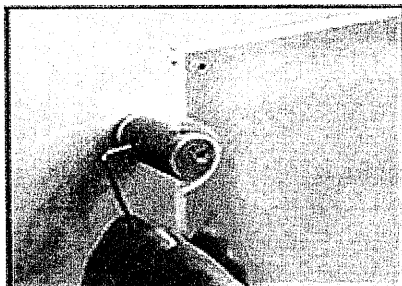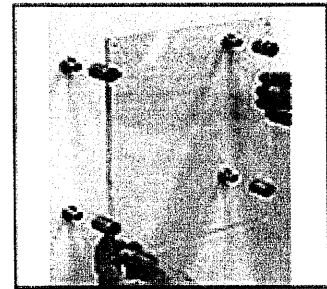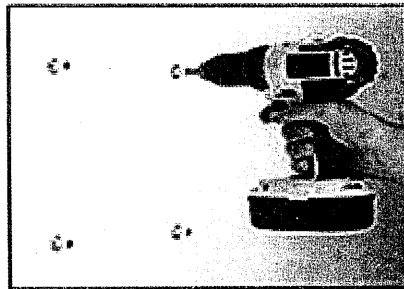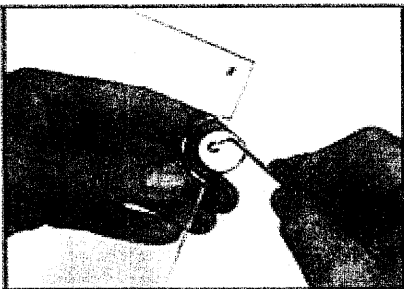

Poster secured in
frame by magnets