

WSFM936PB Assembly Instructions:

* PLEASE CONFIRM ALL PARTS SHOWN OR NOTED ARE PRESENT BEFORE STARTING. DO NOT DISCARD PACKING.

Parts: (1) Base
(1) Wire Frame
(1) Bearing Assembly (washer / ball bearing)
(1) Header Clip
(2) Poles (1 w/ flange) ; (1 w/ male side)
(2) Wire Collars (1 extra)

Assembly:

Step 1: Place the base on the floor and insert pole with flange into base until completely seated (flange side facing up).



Step 2: Slide bearing onto pole until it is seated on the flange.




Step 3: Slide washer over the bearing.



Step 4: Slide male side of second pole into the top end of the flanged pole.



Step 5: Slide wire frame onto assembled poles.

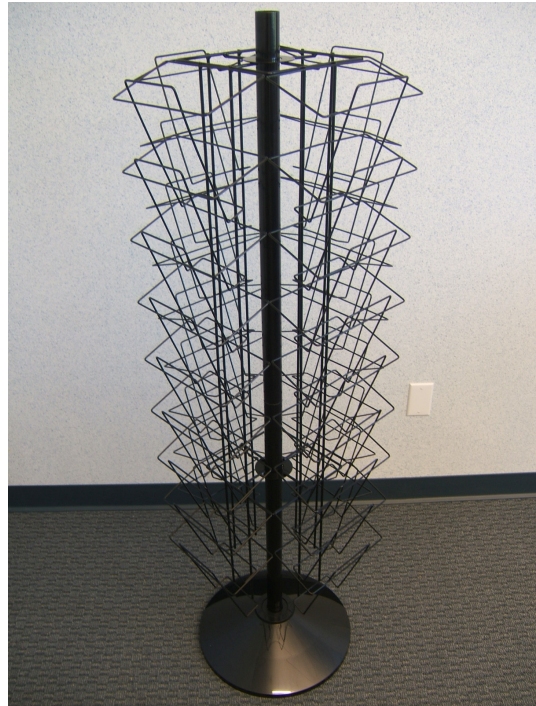

Step 6: Secure wire frame at the top using wire collar (should have extra left over).



7. Place header clip on top of the assembled poles.

