

QUICKSTART GUIDE

LED Digital Counter



Scan for video tutorial!


Basic Operation

Power

- Insert the power cord into unit and connect to outlet. Flip power switch to “I” position. Once powered on, the Wi-Fi network of the unit becomes active.
- To shut down, flip power switch to “O” position, then unplug the unit. Shut down unit before disassembly.

Internet Connection

The unit’s Wi-Fi network is “AP” followed by the product ID number, which can be found on the inside of the unit access door. Select the unit’s Wi-Fi from the list of available networks on your PC, then enter the Wi-Fi password: **12345678**. For Ethernet connections, plug an ethernet cable into Ethernet port of the unit and connect to internet router.

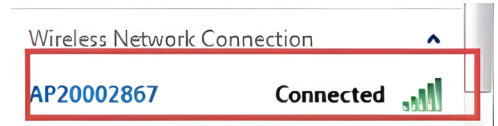


Display Settings

To display your content on the unit, first create and publish a playlist, also known as a ‘solution’ in the ViPlex Express desktop application. Then, share the solution to the unit via USB, Wi-Fi or ethernet connection, or the mobile app ViPlex Handy.

Step 1: Create a Playlist in ViPlex Express

1. Go to www.novastar.tech/downloads and click the Nova Cloud tab. Scroll to ViPlex Express and select the (x64) or (x32) download, depending on your computer’s processor. *Note:* You can also download the Async User Manual here for more in-depth instructions on using the software.
2. Connect to the unit’s internet on your PC, then launch the ViPlex Express software.
3. Enter the Admin login credentials to connect the software to the unit. Username: **admin**; Password: **123456**
4. In the **Solutions** tab, click **New**. In the Solution Information pop-up window, name your playlist and enter the resolution of the unit (see table below). Then click **OK**.

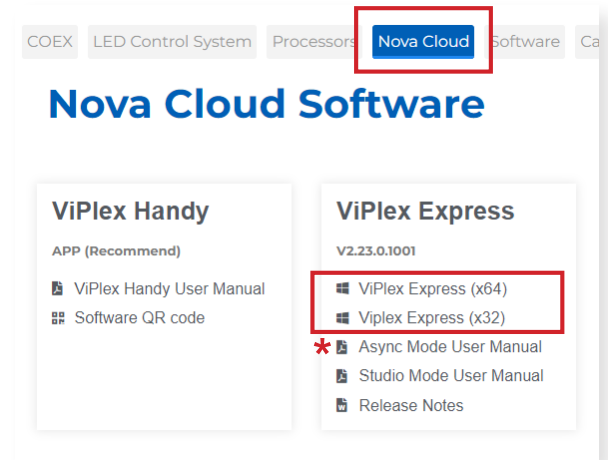

Resolution Input	
Display different content on each of the 3 sides of the unit	Width: 256 px Height: 320 px
Stretch content across all 3 sides of unit	Width: 768 px Height: 320 px



Our dedicated rentals team is here to help!

Have a question? Contact your Rentals Representative at 888-492-1885.

Display Settings


Step 2: Edit Playlist in ViPlex Express

1. In the Solution Editor, add a page for each 'slide' of the slideshow.
2. Customize each page with content and widgets, and adjust the settings of each slide.
3. Once finished, click **Save**. Close the Solution Editor.

SAVE

ADD MEDIA FILE

ADD WIDGETS AND CUSTOMIZATION

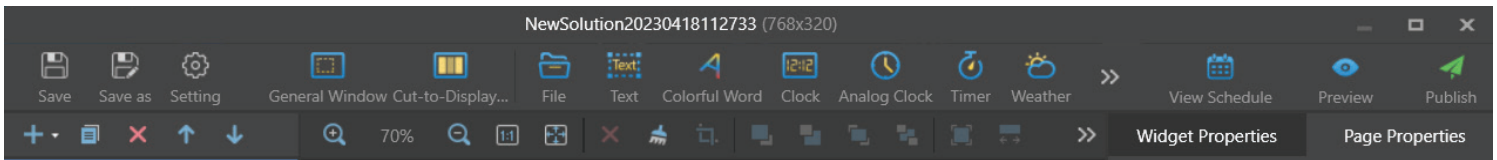

ADD PAGE


RESIZE/ADJUST CONTENT POSITION

PREVIEW


Step 3: Publish and Display Playlist

There are 3 methods of sharing a ViPlex playlist to the unit: Network connection, USB playback, or using the mobile app ViPlex Handy.


Method 1: Network Connection

1. Connect your PC to the unit's internet via Wi-Fi or Ethernet cable.
2. In ViPlex Express, click the Solutions tab. Hover over your playlist and click the green Publish icon  for Network playback.
3. The LED Counter begins displaying the playlist.

Method 2: USB Playback

1. In ViPlex Express, click the Solutions tab. Hover over your playlist and click the blue USB Playback icon .
2. In the pop-up window, browse to USB folder location and enter the unit's password (**123456**). Select **Copy and Play** or **Plug and Play**.
 - **Plug and Play**: Plug USB to play; remove USB to stop.
 - **Copy and Play**: Plug USB to copy the playlist to the unit and loop playback with or without USB in. Select **Overwrite** to use this option.
3. Click OK, then safely eject the USB and insert into the USB port of the unit. The LED Counter begins displaying the playlist.

Method 3: Network Connection

1. Download **ViPlex Handy**  from your mobile app store.
2. Connect to the unit's Wi-Fi.
3. Select your playlist created in ViPlex Express and press play. The LED Counter begins displaying the playlist.