# Assembly Instructions for TRSECRN

## Assembling Components:

### Connecting A to B and C:



Align the truss module and connector cross. Snap edges together and secure with knobbed screws.

### Connecting B and C to D:



Align the truss module and corner block. Snap edges together and secure with knobbed screws.

### Connecting D to E:



Align the corner block and regular base. Snap edges together and secure with knobbed screws on the under-side of the regular base.

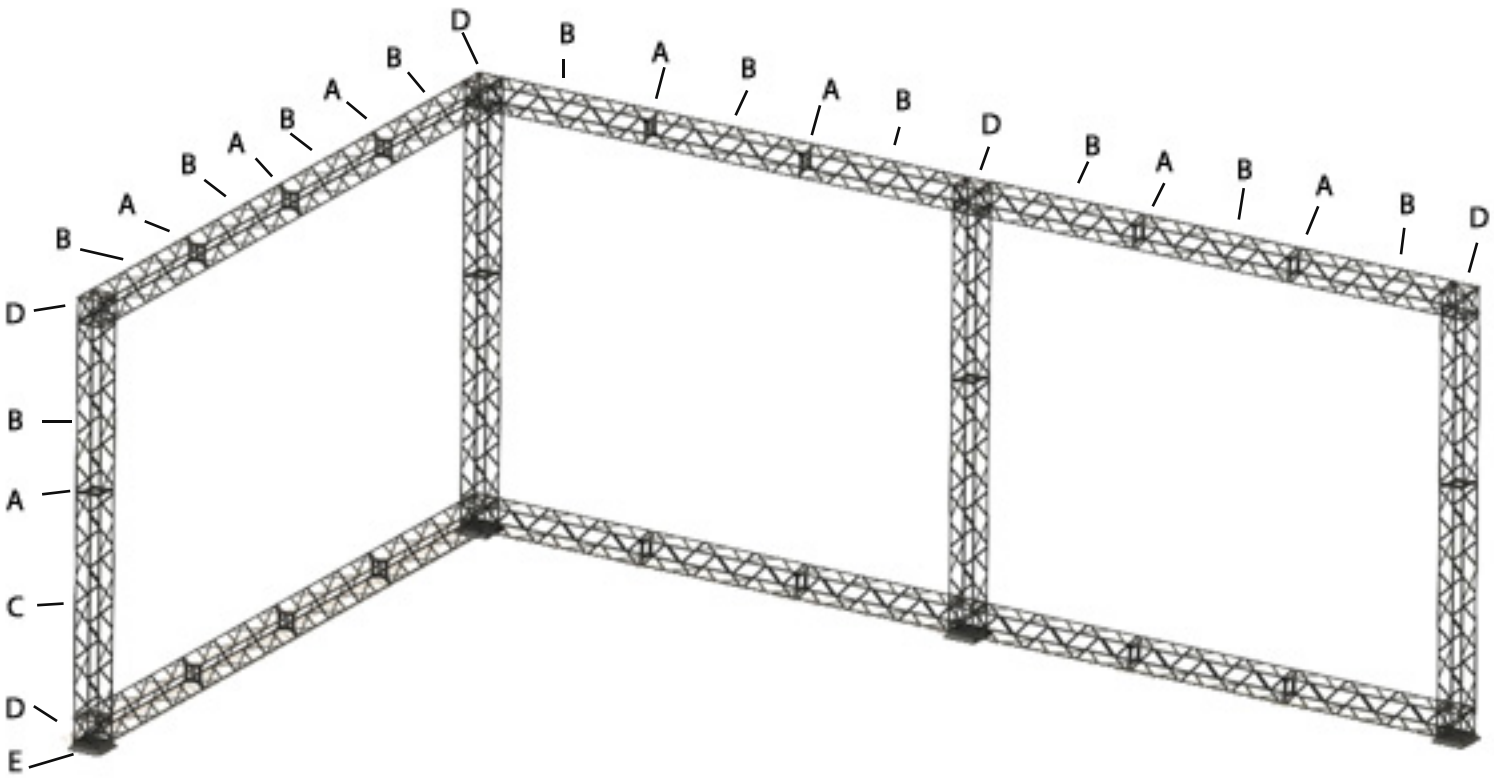


## Parts List

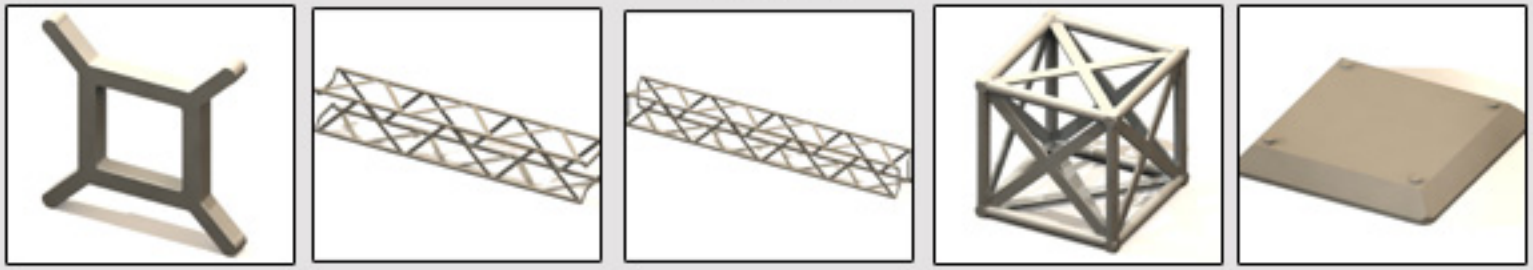

A= Connector Cross
(SKU: CTCONCRS5)

B= 90cm Truss Module
(SKU: CTMOD940)

C= 120cm Truss Module
(SKU: CTMOD4120)

D= Corner Block
(SKU: CTCORNER4)

E= Regular Base
(SKU: CTBASE4)