# Assembly Instructions for TRSJN1

## Assembling Components:

Connecting A to B, C, or D:



Align the truss module and connector cross. Snap edges together and secure with knobbed screws.

Connecting E to B, C, or D:



Align the truss module and corner block. Snap edges together and secure with knobbed screws.

Connecting E to F:



Align the corner block and regular base. Snap edges together and secure with knobbed screws on the under-side of the regular base.

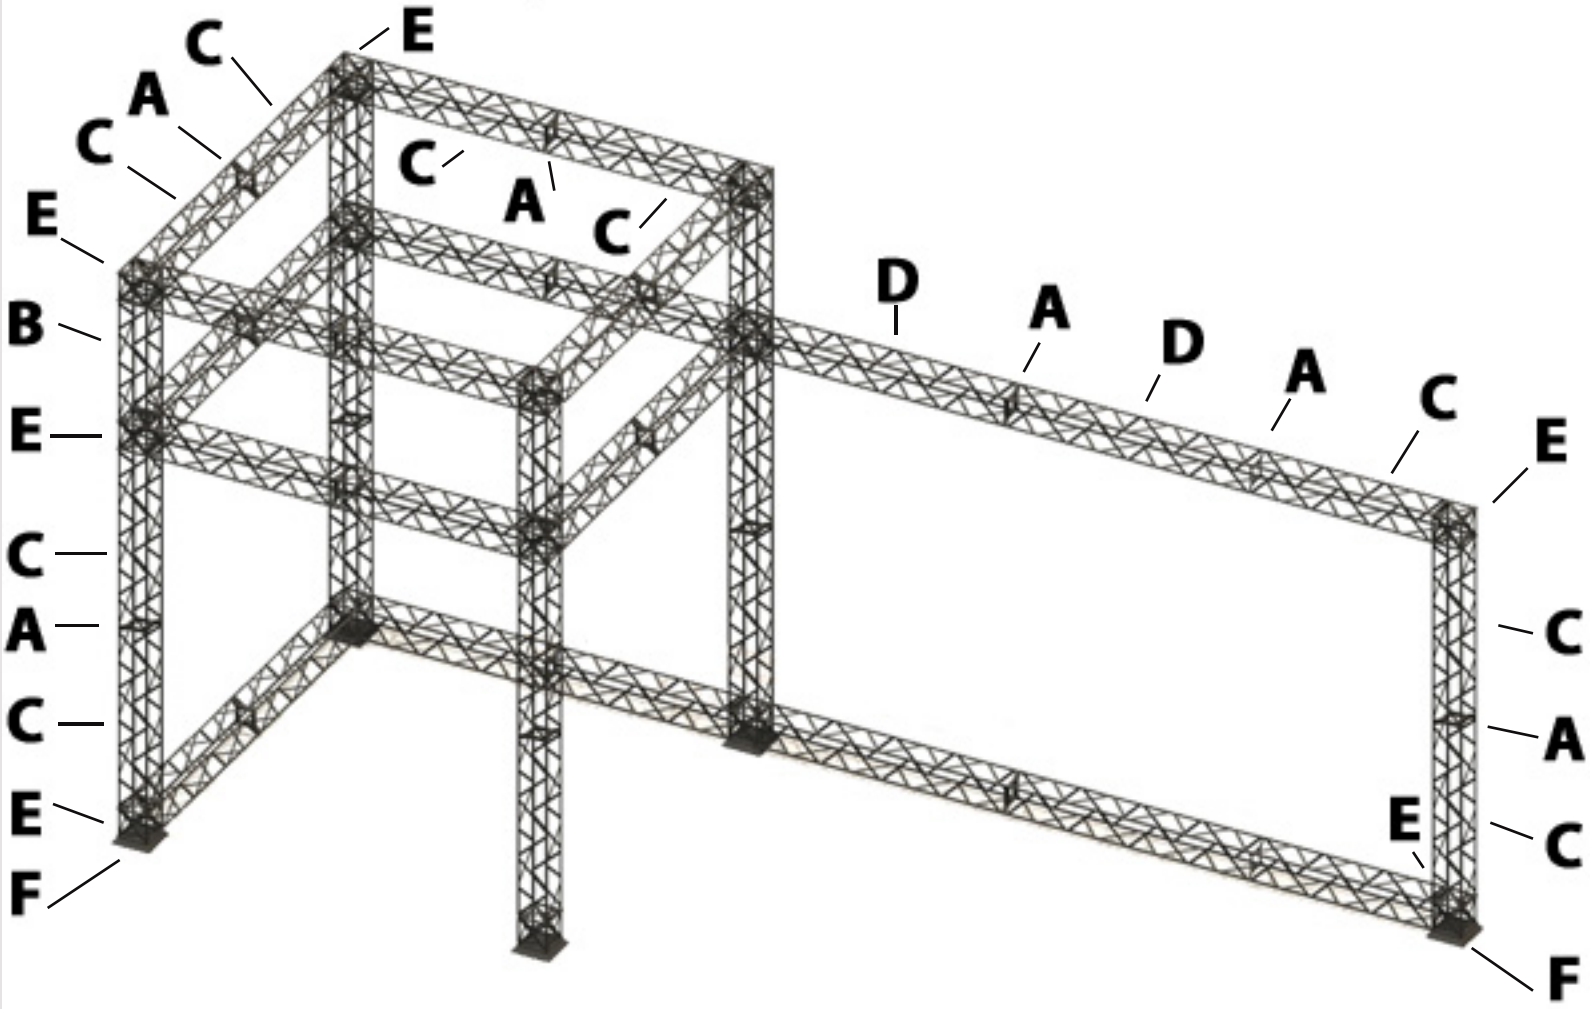


## Parts List

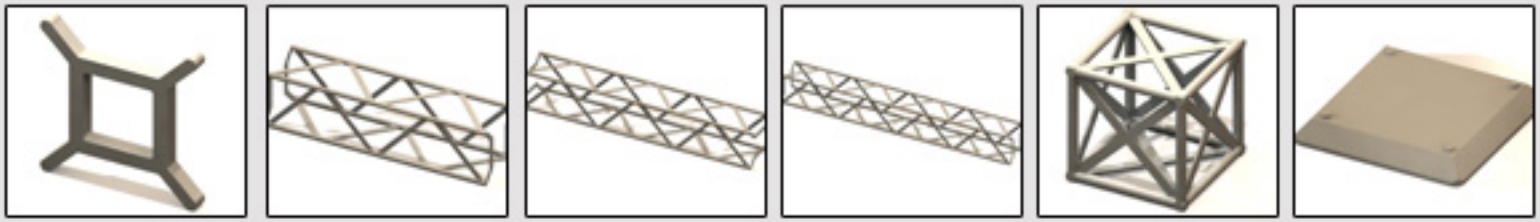

A= Connector Cross (SKU: CTCONCRS5)

B= 60cm Truss Module (SKU: CTMOD460)

C= 90cm Truss Module (SKU: CTMOD940)

D= 120cm Truss Module (SKU: CTMOD4120)

E= Corner Block (SKU: CTCORNER4)

F= Regular Base (SKU: CTBASE4)