


Aura Aware

AURA AWARE PRODUCT NOTICES

This manual contains detailed instructions and notes on the operation and use of Aura Aware products. For your safety and benefit, read this manual carefully before using Aura Aware products.

- Product solely intended for businesses and indoor use (office environment.)
- The product does not prevent spreading of a virus or disease.
- When using the product, basic safety relating to the use of electronic equipment should always be followed.
- The product should never be left unattended when plugged in.
- Always unplug the product from the electric outlet immediately after using and before cleaning (do not use water or detergents.)
- Always unplug before assembling, moving and/or disassembling.
- Do not open or change the product composition in any way.
- Do not allow to be used as a toy. Close attention and supervision is necessary when the product is used near children.
- Never operate the product if it has a damaged cord or plug, if it has been dropped or damaged, dropped into water, or not working properly in any way.
- Do not block the product in any way and keep the product clear from accumulation of lint, dust, and loose cloth.
- Keep fingers away from the sensor and inner workings.
- Do not bend or pull the product in any way.
- Never drop or insert any object or material into openings.
- Do not unplug by pulling the cord.
- Turn off the product by unplugging if the product is not working properly.

**DO NOT TOUCH
THE SENSOR**

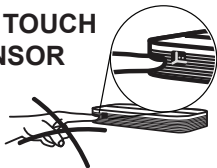

Warranty Summary

The full terms of Aura Aware's Limited Warranty and detailed information on obtaining service are available at warranty.aura-aware.com

Regulatory Compliance Information

EU Compliance Statement



Aura Aware B.V. hereby declares that this wireless device is in compliance with the essential requirements and other relevant provisions of the R&TTE Directive.

A copy of the EU Declaration of Conformity is available at compliance.aura-aware.com

Aura Aware and the Environment

At Aura Aware, we recognize our responsibility to minimize the environmental impacts of our operations and products.

For more information go to environment.aura-aware.com



Regional Disposal and Recycling Information

The symbol above indicates that this product and/or battery should not be disposed of with household waste. When you decide to dispose of this product and/or its battery, do so in accordance with local environmental laws and guidelines.

For more information about Aura Aware's recycling program, recycling collection points, restricted substances and other environmental initiatives, go to environment.aura-aware.com

Class 1 Laser Safety





© 2020 Aura Aware B.V. All rights reserved. Aura Aware and the Aura Aware logo are trademarks of Aura Aware Holding B.V. registered in the E.U. and other countries.


The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Aura Aware is under license.

Setup guide


1. Peel off the protective film from both the sign and the baseplate.

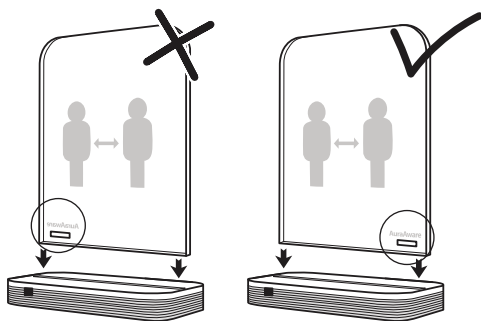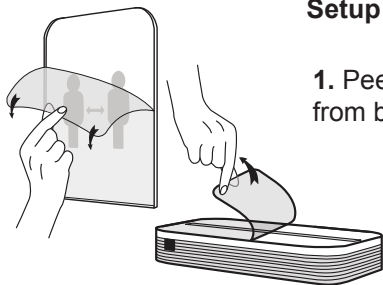

2. Place the sign in the baseplate. Ensure that the hole in the sign is on the right side when facing the front of the baseplate.

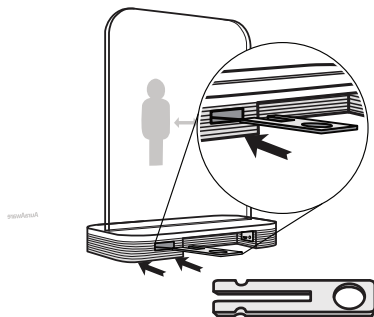


3. Lock the sign with the locking key.

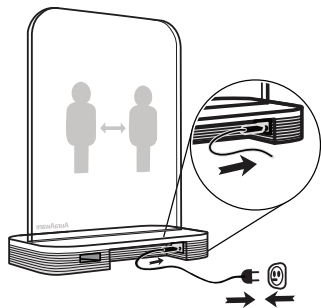

4. Connect the device with the micro USB adapter. Please note that the USB connector fits only in one way. *(USB adapter requirements: 5VDC - 1A)*

5. Connect the USB adapter to a standard power outlet.

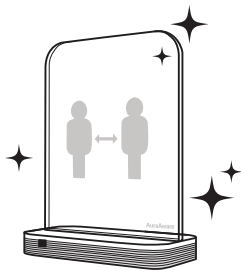

6. The Aura Aware sign is ready for use.


Sound


Press the button to switch the sound on / off.

Reset

Hold 10 seconds for reset.

(sign will flash blue multiple times when done.)

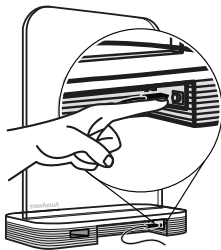

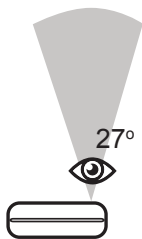

Position

The field of view of the device is 27 degrees. Place the device in such a way that the sensor is facing towards the walking route to the counter or reception.

How to clean?

Take the sign from the baseplate by unlocking the sign. Clean the sign and make sure it is dry before placing it back in the baseplate.

DO NOT clean with a wet towel when in use.

Switch on / off

The device should be switched off by unplugging the adapter from the wall.

DO NOT unplug by pulling the cord in any way.

For more information about Aura Aware and to see this manual in other languages go to:

support.aura-aware.com