


UVC Disinfecting Monitor Stand  
SKU: UVCMONMT



**630mm X 213mm X 94mm**  
**Disinfection Chamber: 534mm X 190mm X 70 mm**  
**Max Weight Loading 10Kg**



Scan QR code to visit product page

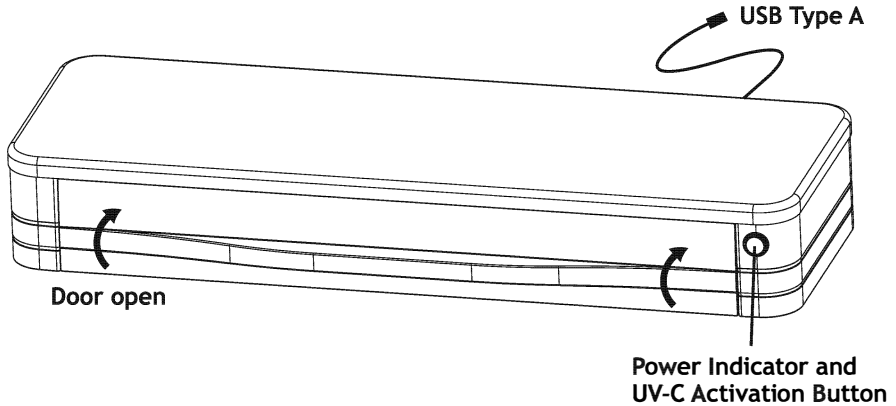

### UV-C Disinfection Operation Instruction

1. Put the product on flat and non-transparent table.
2. Connect the USB connector to power supply (minimum 5V/500 mA).
3. Power Indicator is on with color blue for ready mode.
4. Open the door and put the keyboard/mouse and others in for the UV-C disinfection.
5. Close the door completely and push the UV-C Activation Button to start 900 seconds disinfection process. (Power Indicator is in flashing mode)
6. You may stop the disinfection by pushing the Activation Button or opening the door.
7. Open the door during the process will turn off the disinfection mode automatically to protect your eyes without direct contacting to UV-C light.

**Notice: The effect of UV-C disinfection may vary due to the placement of your device.**

If you have any questions regarding our products, please visit us at [www.displays2go.com](http://www.displays2go.com) or contact D2G customer service at 844-221-3388.