

# Instructions


## Cardboard Floor Standing Hand Sanitizer Dispenser

V 20.12

SKU: FGTRIHSSCP  
FGTRIHSSSG  
FGTRIHSS1CP

1. Fold downward on all creases except the one marked "Fold Up". (Red Lines Below)
2. Fold tabs along the unit and insert in its own slot.
3. Fold tabs on Base board and place the Top Base board on top of the base with the printed side facing up.
4. Attach the base to the bottom of the unit by inserting the tabs into corresponding slots.

Scan QR code to visit  
the product page:

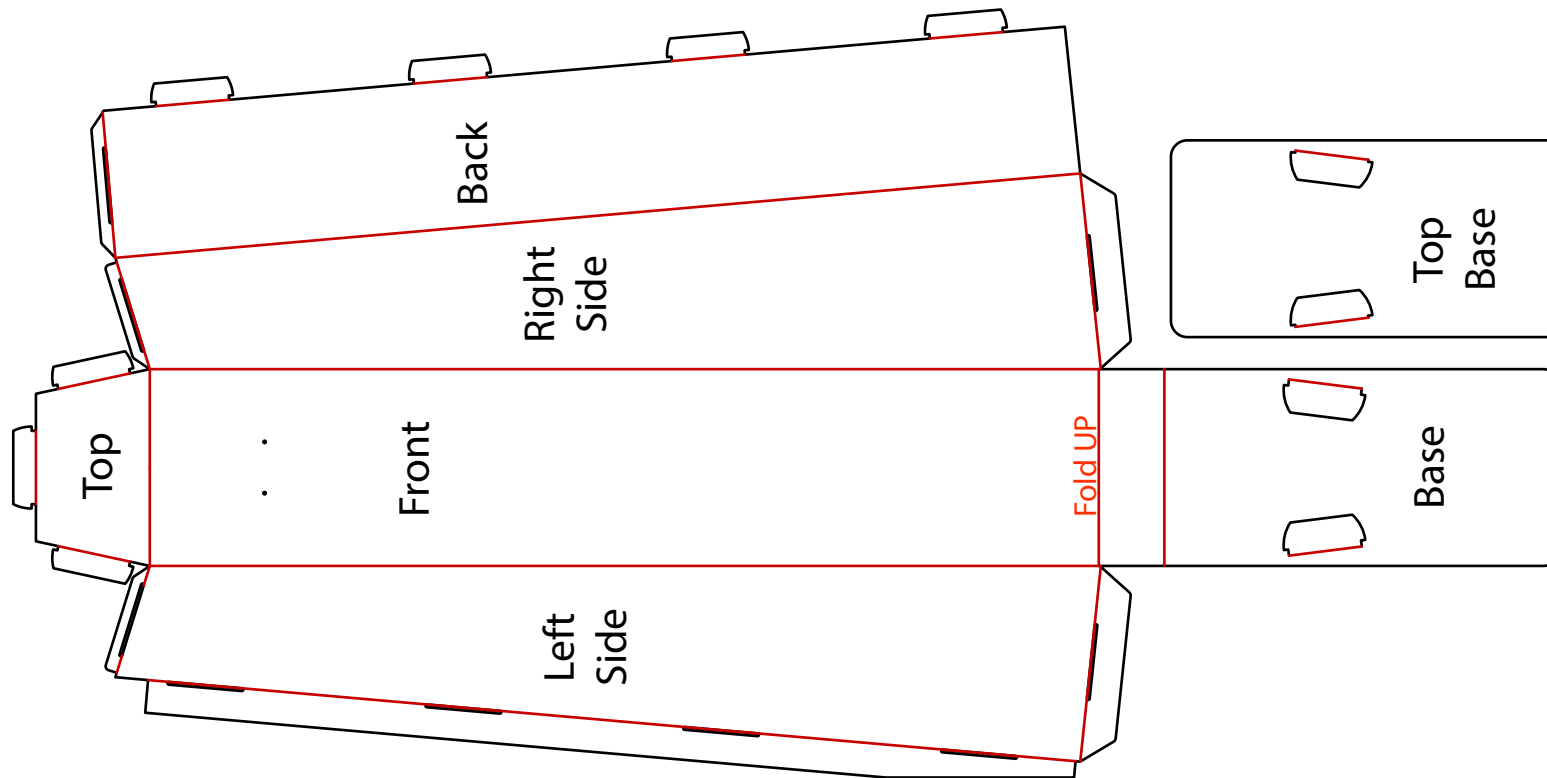

If you have any questions regarding our products, please visit us at [www.displays2go.com](http://www.displays2go.com) or contact D2G customer service 844-221-3388.