


ASSEMBLY INSTRUCTIONS

HSDISP1GS - Rolling Sanitization Station with 5L Refillable Container


PARTS LIST	QTY.
A. Upright	1
B. Base	1
C. Bracket - Left	1
D. Bracket - Right	1
E. M8X12 Screw	6
F. M8 Nut	6
G. M4X8 Screw	4
H. M4 Cap Nut	4
I. Caster	4

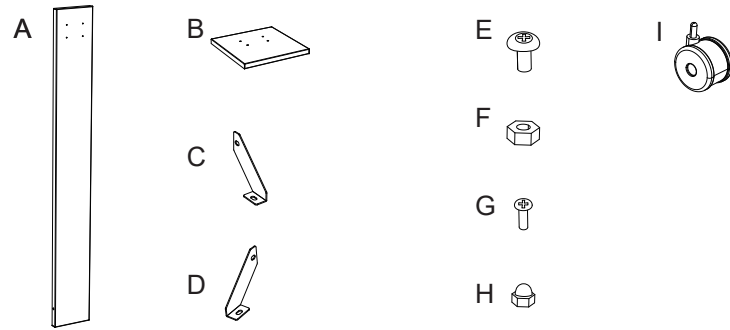


Scan QR code to visit the product page:




STEP 1. Attach the Upright Panel (A) to the Base (B) as shown. Use M8X12 Screws (E) and M8 Nuts (F) to secure the panel on the base.

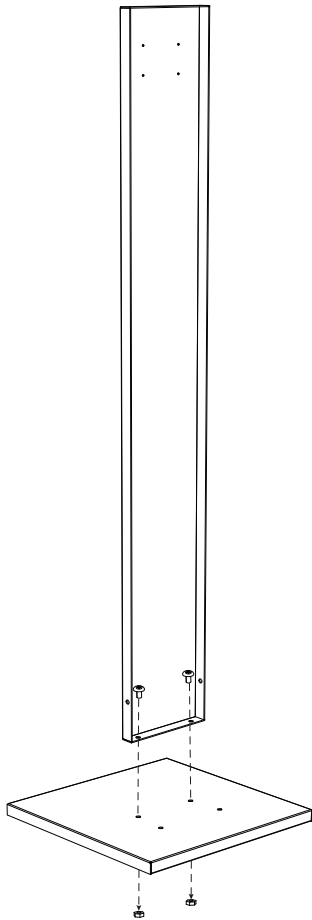

STEP 2. Attach both supporting Brackets (C, D) to the stand and align the pre-drilled holes on the upright and the base. Use the remaining M8x12 Screws (E) and Nuts (F) to fix the brackets on both sides.

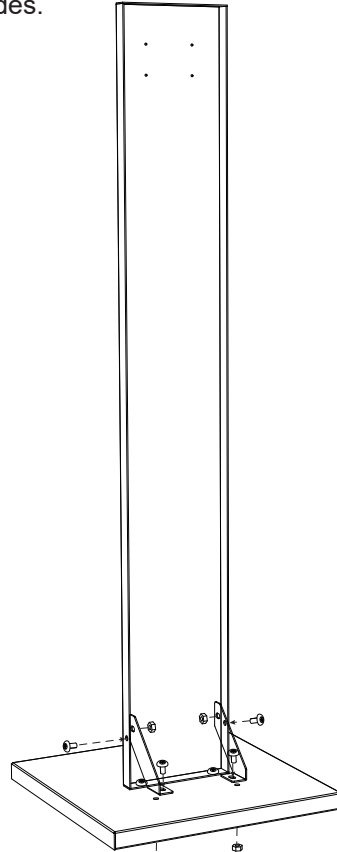

STEP 3. (Optional) Hand screw 4 Casters (I) to the base at the corner and secure with the hex wrench.

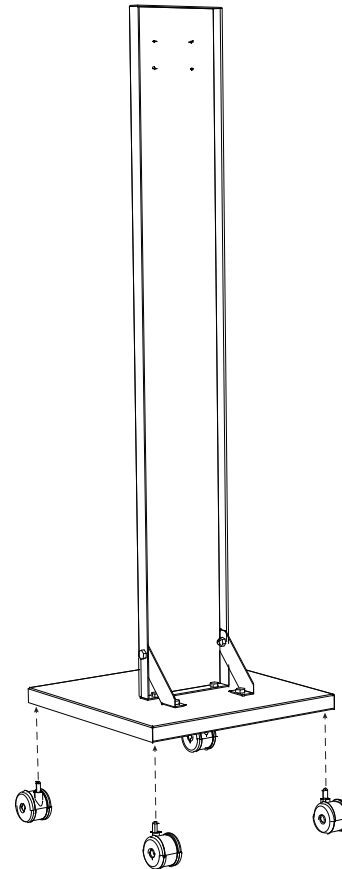

STEP 4. Follow the instructions in the hand sanitizer dispenser (HSDISP1G) to attach the bracket and the dispenser with M4 Screws (G) and M4 Nuts (H)

