medifor

USER MANUAL

Rev. 07/20



Description: Hand Sanitizing Station with 21.5" Digital Signage

Note: Before using the product, please read the instructions carefully! Do not attempt to disassemble this product. If the product does not work properly, please call our Customer Service Department at 1-888-632-3077.

Model:

ssembly and Connection	6
Packing List	6
Steps for Assembly	7
nstructions on How to Use	
emote Control	
Description of Basic Operations	
Power on/Standby	
Interface and Home Screen	13
Description of Wallpaper Switch	13
File Manager	14
Local Settings	14
Status of Menu bar	15
iViEx APP Introduction	16
System requirements	16
How to upload media files	16
Settings	
Edit picture	
Music	20
Factory Reset	21
Choose System Language	21
chnical Specifications	22
oubleshooting	24

Contents

Features

• Embedded with Android 7.1 smart operating system and unique UI design, bringing you a more convenient operation and better visual experience.

• High-quality LCD screen as the display, no flicker, low radiation, greatly reducing eye fatigue, eye protection, high brightness, high contrast, and wide viewing angle; ultra-fast response time greatly reduces ghosting of fast moving images.

• Progressive image processing and industry-leading motion compensation technology improve the flickering and blurring in the edges of motion picture.

- Dynamic contrast technology can significantly improve the clarity and contrast of various screens.
- Multi-channel USB interfaces, supporting HD media streaming.
- Platform and configurations:

Hardware platform: ARM Cortex-A17, 1.8GHz Quad core processor;

Chip: Mali-T76x series GPU;

High capacity memory: DDR3 2GB, inter FLASH/8GB NAND.

- ◆ Support 1080 Full HD videos and pictures; 1080p output;
- Support Full HD video format:

Video: H.264, MKV, WMV9, MPEG1/2/4, HD DIVX, XDIV, RM/RMVB.

Audio: MP3, WMA, WAV, EAAC+, MP2, dec, Vorbis (Ogg), AC3, FLAC (Lossless audio), APE (Lossless audio), BSAC;

Pictures: BMP/PNG/GIF/JPEG (4088*4088);

- Support webpage/Flash playback;
- Input function:

1) Support remote control;

2) Support USB mouse/keyboard. Using a mouse for set up is recommended;

- Landscape or portrait orientation;
- Support USB flash drive and SD card (can extend TF card);
- Multi languages;
- Support TTF vector font, distortionless display;

• Clock display: Built-in clock IC, it could update time information after networking, correct system time automatically.

- Support LAN, WIFI and Bluetooth;
- Combined with CMS Software. Import video, Television images, pictures, animation, text, documents, web pages, streaming media, database data into one wonderful section program, which also

could be launched to terminals in different places through network, show the great graphics and real-time information to people at different places.

Safety Warnings and Precautions

Thank you for purchasing the high-performance multi-functional Digital Hand Sanitizing Station. We have considered the factors to ensure personal safety in product design and have tested rigorously at the factory. However, improper installation and use may result in electric shock and fire. In order to safely use, maximize performance of the unit and extend the life of the product, please

read and follow all instructions carefully before using the product.

Keep the instructions for future reference.

We strongly recommend using a surge protector, or a power strip with internal circuit breaker to prevent damages to the digital signage.

Symbol Legends:

- ⚠ Warning: May cause personal injury or death
- \bigcirc The operation is prohibited
- ▲ Caution: May cause damage or property loss
- The operation must be executed

If any of the following occurs:

- Power outage or instable voltage.
- Abnormal sound or smell from the unit.
- AC power cord is damaged.
- Digital Signage is damaged due to drop, knock or impact.
- Any liquid or foreign matters fall into the enclosure.

Turn off the Digital Signage immediately, pull out the plug from the power outlet, and ask the authorized personnel for maintenance timely.

S If coal gas or other flammable gas leaks, do not pull out the plug of the LCD Digital Signage or other electrical appliances; instead, turn off the gas valve immediately, and open the doors and windows quickly.

- \bigcirc Do not use power supply other than AC 110V, 60Hz.
 - Cut off the power supply before connecting or disconnecting any cables.
 - Do not place the Digital Signage at any instable positions, or else it may be damaged or cause fire.
 - Do not place the Digital Signage in the positions such as:
 - 1. The environment subject to direct strong sunlight, moisture, extreme temperature or too much dust;
 - 2. The environment with flammable or explosive materials;
 - 3. The environment with flammable or corrosive gases;
 - Do not use damaged or inappropriate power outlets and ensure that the plugs and outlets contact properly.
 - Do not let dust or metal deposits adhere to the plugs and outlets.
 - Do not damage the power cords:
 - 1. Do not modify the power cords;
 - 2. Do not place heavy objects on the power cords;
 - 3. Keep the power cords away from heat source;
 - 4. Do not pull the cord to remove the plug.
 - Do not connect too many plugs to one outlet in parallel, or else it may cause fire due to excessive power consumption.
 - Do not approach the Digital Signage with open flame (e.g. a lighted candle), or else it may cause electric shock or fire.
 - Do not put any sharp objects, metal or liquid into the vents or let them touch the signal terminals to avoid short circuit, product damage, and electric shock.

🛞 Do not touch the plugs with wet fingers, or else it will cause electric shock.

A Do not use the Digital Signage in stormy weather, especially when there is lightning; instead, please disconnect the power and antenna plugs to avoid lightning strike.

O Do not disassemble the Digital Signage without permission, or else it may cause electric shock or fire. Please ask qualified technician for repair.

Note:

Contact local dealer if you have questions about the operation, debugging and connection of the unit; if the unit doesn't work normally, please cut off the power immediately and consult the dealer. The unit is class-A product, which may cause radio interference in living environment. In this case, please take feasible measures, and use power plug as the disconnection device.

- Do not let children climb onto the Digital Signage.
- Keep the small parts away from children to prevent them from swallowing.
- If the Digital Signage won't be used for a long time, please turn it off and pull out the power plug.
- To adjust the position of the Digital Signage, please disconnect all power cords and move slowly to avoid tip over.
- Do not scratch or knock the LCD with hard object, or twist and squeeze the LCD.
- Do not turn on the unit immediately when it is moved from a place with low temperature to high temperature, or else it will cause condensation and malfunction.
- Before cleaning the Digital Signage, please pull out the power plug; wipe with soft cloth; do not use industrial chemicals; prevent foreign matters from entering the machine. Improper cleaning (such as cleaning solution, water) may damage the product, erase the printed information, and even cause damage of the components if fluid flows in, resulting in machine failure.
- If the unit displays the same screen for a long time or the moving picture has fixed text or icon, it will leave ghosting on the screen and won't disappear when the unit is turned off; it is normal and isn't covered by the warranty.
- The power of the Digital Signage can be cut off by pulling out the plug.
- If the LCD screen ruptures and the liquid splashes on the skin, please rinse for 15 minutes with clean water immediately, and consult your doctor.
- Do not apply pressure on the panel.
- Use the Digital Signage properly: Use in proper lighting conditions; insufficient lighting or long time watching will impair your eyesight.
- When the plug or coupler is used as disconnection device, it should be easy to operate the device.
- Insert the plug into the outlet properly, or else it may cause sparks and fire.
- The technical specifications printed herein and on the packaging are subject to change without prior notice. The Manual may be slightly different from actual operation, and the latter is applicable.

Assembly and Connection

Packing List

WALL MOUNT

Name	Qty
Power Cord	1
Кеуѕ	3
6mm Allen Wrench	1
User Manual	1
Warranty card, certification	1
M4x30 screw	2

FLOORSTAND


Name	Qty
Name	QLy
Power Cord	1
Keys	4
6mm Allen Wrench	1
User Manual	1
Warranty card, certification	1
Foot	4
M8x25 screw	6

Steps for Assembly (2 people are required)

1. Wall mounting:

- 1.1. Unscrew the security screw on the side of the bracket and remove the wall mounting plate.
- 1.2. Mount the included Wall Plate to the desired location on your wall **(hardware not included)**. **Tips**: Use wall plate as template and make sure it is level.




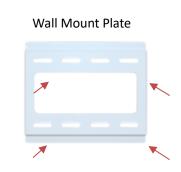

1.3. Use the key provided to open the back door. Connect the power cord and ethernet cable (as needed) to the ports inside and wire them out through the cutouts on the door.



1.4. Hook the pre-assembled brackets on the back of the hand sanitizing unit onto the mounted wall plate and make sure it's stable on the wall.

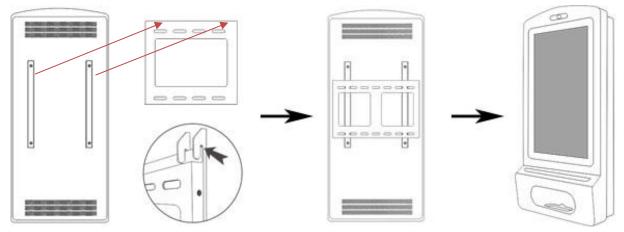

1.5. Replace the security screw to the side of the bracket at the back to secure the hand sanitizing unit to the wall.



2. Floorstanding:

- 2.1. Screw (4) feet into the base from the bottom.
- 2.2. Place the hand sanitizing unit on top of the stand and route the cables through the square cutouts at the bottom of the sanitizing unit.
- 2.3. Unlock the unit with provided key and plug in the power cord and ethernet cable to the ports respectively.





2.4. Assemble the sanitizer unit and the stand with (6) M8 screws. Tighten screws using the enclosed Allen Wrench.




M8x25 screw

2.5. **(OPTIONAL)** Mount the stand to the ground.

Unlock the mounting bracket at the bottom of the stand. Remove the mounting bracket and use it as a template to mark the desired location. Securely mount the bracket to the ground. **NOTE:** Mounting hardware not included. Select the suitable hardware for the surface.



Place the base on top of the mounted bracket and slide the base onto the bracket. Secure the unit by locking the base from the side with the key provided.

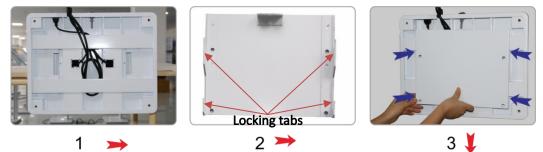

6





🧲 5

4

2.6. Plug the power cable from the base into the outlet.



ON/OFF Switch: Unlock the unit with the key and open the unit. Find the switch and turn it on.





To add/refill sanitizer:

1. Open the door on the back to reveal the hand sanitizer dispensing container inside the unit.





2. Remove the cap on top and carefully fill the same formulation into the container. Replace the cap and tighten it by turning clockwise.





LED Indicator Light



Supply (Green)



Empty (Red)

The sensor and lights



- 1. The LED lights are blue when not in use
- 2. Place hand underneath dispenser. The LED lights will blink green and dispense hand sanitizer.
- 3. When rubbing your hands outside the dispenser, the LED lights will turn back to blue.

How to replace the dispense Nozzle

Replace the Liquid Dosing Head with Gel Dosing Head: Unscrew the Liquid Dosing Nozzle by hand to remove it from the dispenser. Screw the Gel Dosing Nozzle clockwise to secure it onto the dispenser.



Replace the Gel Dosing Head with Liquid Dosing Head: Unscrew the Gel Dosing Nozzle by hand to remove it from the dispenser. Screw the Liquid Dosing Nozzle clockwise to secure it onto the dispenser.




NOTE: After replacing the nozzle, test the dispenser to make sure it works properly.

Adjust the dosing volume of the dispenser:

Turn the nob to the desired dispensing dosage. See the manufacturer suggested dosage below.




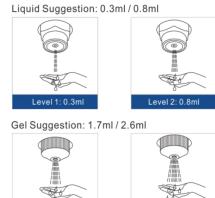



Remote Control



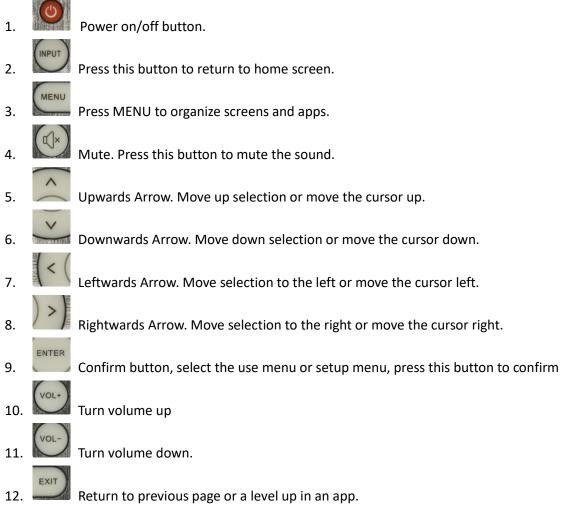

NOTE: Only buttons shown above have functions.

Description of Basic Operation

Power on/Standby

Insert the power plug into the outlet. If the Digital Signage has the switch button "I", turn it on. In power on state, press the " \bigcirc " button on the remote control, and the Digital Signage enters standby state.

Interface and Home Screen

After power on, the machine will launch home screen, as shown below:

lcon	Function
	App Drawer
\triangleleft	Back
0	Home page
	Background applications
⊅	Sound -
	Sound +



Description of Wallpaper Switch

We suggest using a mouse to change the wallpaper.

Connect a mouse with the digital panel through USB port, then follow the steps below:

- 1. click "Setting"
- 2. At the setting menu, click "Display"
- 3. At the Display setting menu, click "Wallpaper", then choose a folder.
- 4. Then select an image you would like to set up as background.
- 5. Confirm the selection by clicking "Set wallpaper".

File Manager

- 1. Click the Main Apps button "()" in the Home screen to enter the "APPS" menu interface (Fig. 2);
- 2. Click the "Explorer" icon in the "APPS" menu interface (Fig. 2) and enter "Explorer" menu (Fig. 3);
- 3. Choose storage in the "Explorer" menu to read the files from different devices.

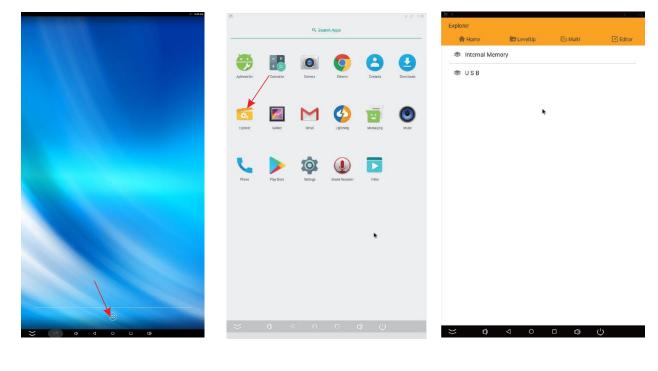






Fig.3

Local Settings

- 1. Click the "Settings" icon (Fig. 1) and enter "Settings" menu (Fig. 2);
- 2. Click "Wi-Fi" and choose options then set up the WIFI connection.





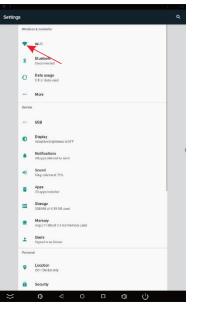


Fig. 2


Description of Settings Interface (shown on the right)

lcon	Function
(•	WIFI switch
0	Data usage
*	Bluetooth
ф.	USB
	Sound & notification
4	Battery saver
-Ò-	Display
	Storage
	Apps
្ស	Screenshot Setting
•	Location
8	Accounts
	Backup & reset
	Security
	Language & input
0	Date & time
4	Printing
Ť	Accessibility
()	About device

Setting	s		م
	Wirele	ss & networks	
	•	Wi-Fi	
	*	Bluetooth Disconnected	
	0	Data usage O B of data used	
		More	
	Device	•	
		USB	
	0	Display Adaptive brightness is OFF	
	٠	Notifications All apps allowed to send	1
		Sound Ring volume at 71%	
		Apps 20 apps installed	
		Storage 338 MB of 4.39 GB used	
		Memory Avg 371 MB of 2.0 GB memory used	
	•	Users Signed in as Owner	
	Person	nal	
	•	Location ON / Device only	
	ê	Security	
}>)

Status of Menu Bar

- 1. Click the setting
- 2. At the setting menu click the display menu
- 3. At the display setting menu unselect the display navigation check box

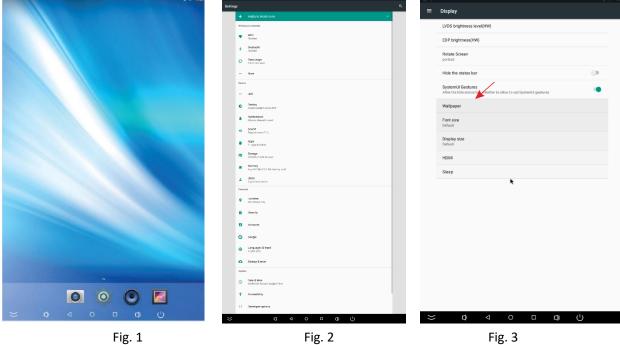



DiViEx APP Introduction

System requirements:

Step 1: Before using the APP, make sure your device meets or exceeds the following system requirements:

CPU	RK3288
RAM	16GB
Operating system	Android 7.1

How to upload media files :

Step 2: Plug in your USB drive to the computer. Open the drive in Windows Explorer and create a new folder, rename it "MediaFolder". As shown below:

Open "MediaFolder", create 3 subfolders, and change their names to "Images", "Videos", "Music".


Copy the media files to be displayed in the slideshow and paste to the appropriate new folder "Images" or "Videos". Copy and paste music files to "Music" folder.

· · · · · ·		_
Name	Dete modified	Туре
Images	2020/3/13 16:48	File folder
Music	2020/3/13 16:51	File folder
Videos	2020/3/13 16:51	File folder


Supported Media Format:

Image	JPG/JPEG/BMP/PNG
Video	MPEG1/MPEG2/MPEG4/H.264/H.265/WMV/MKV/TS/flv
Music	AAC/MP3/AMR/OGG/PCM

Step 3: Plug the USB drive into the device and click the DiViEx APP.

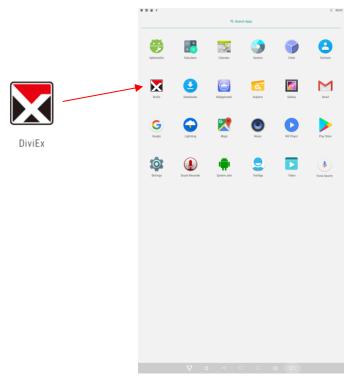

Step 4: When the screen shows "Copy finished" after "Usb Disk:", the media files are ready to be displayed.

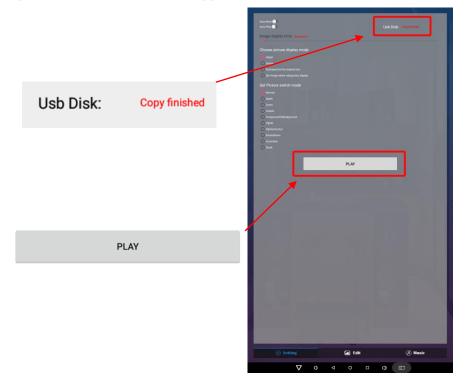

Settings:

- 1. Set the time each picture is to be shown on the screen by dragging the bar to the desired time.
- 2. Select how you would like the images to display. Select the desired transition effect between pictures:

• Auto Boot

DiViEX APP will automatic open when the digital signage is turned on.

• Auto Play

DiViEX APP will automatic play the slidshow when it is opened.

• Choose Picture display mode Check a fit option how you want the pictures to be displayed.

• Set Picture switch mode

Choose an animation option to set the fade in and fade out effects.



Edit picture:

This function shows all pictures, you can edit all pictures, and remove it.

• Crop

There are four corner handles and four border handles to crop the picture. Click and drag a handle to reshape the image to any size you need.

• Filter

You can browse and try different filters in the filter gallery below the image. The APP support the following filter: AUTO_FIX, BLACK_WHITE, BRIGHTNESS, CONTRAST, CROSS_PROCESS, DOCUMENTARY, DUE_TONE, FILL_LIGHT, FISH_EYE, FLIP_HORIZONTAL, FILP_VERTICAL, GRAIN, GRAY_SCALE, LOMISH, NEGATIVE, PSTERIZE, ROTATE, SATURATE, SEPIA, SHARPEN, TEMPERATURE, TINT, VIGNETTE.

Reset

Click "Reset" to remove all the editing you applied to the image.


• Save "

Click the icon to save the edited image as a new image.



• Image deletion

Click "S" to delete unwanted pictures

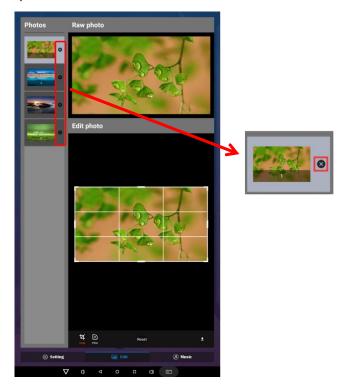


Music:

List all music files in the Playlist library

• Add music to "Playing List Music" (Background music) from "Playlist Library". Click "right arrow", music title will show in the "Playlist Music" on the right.

Playlist library		Playing list music	
	•		
	•		
	•		

• To remove background music from the playlist, click the left arrow in the playlist

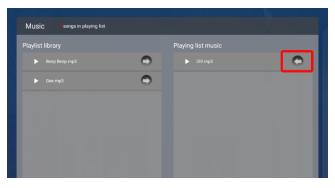

Factory Reset:

- 1. Get into Settings, then click "Backup & reset" (Fig. 1)
- 2. Click "Factory data reset" (Fig. 2)
- 3. Choose "Erase SD card", then click "RESET DEVICE" to get the unit to Factory Reset (Fig. 3)

tings		Q. ← Backup & re			
		Q. ← Backup&re	set	۹	← Factory data reset
Wroless & retworks		Backup & resto	•		This will erase all data from your device's Internal storage, including:
Wi-Fi	Bluetosth	Back up my d Back up app da	ata Ia, Wi-Pi passwords, and other settings to Google servers	(a.	 Your Google account System and app data and settings Downloaded apps
		Backup accos	et		Downloaded apps
Data usage	More		abug only private cache		To clear music, pictures, and other user data, the SD card needs to be erased.
íce		Automatic res When reinstalling	tone g an app, restore backed up nettings and data	-0	Ensee SD card Ensee all the data on the SD card, such as music or photos
US8	Display	Personal data Factory data r			
Sound & notification	Storage	Factory data i Eraces all data i	n device		
Battery saver	Aops				
HDMI	ScreenshotSetting	-	N		
rsonal					
Location	a Security				
Accounts	Language & input				
Backup & reset					
ten b		-			
Date & time	Accessibility				
- Sale a single	Recession				
Printing	About device				
Protog	About devise				
Poorg	Aloci divise				
Protog	Aod dma				
n Transg	Aload divide	-			
Princip	Aload divide				
2 Protog	Aod drive				
¢ 4	• Koot device 9. 0 9. 1		e e o c Fig. 2	9	© ⊂ ⊂ ⊂ ⊂ Fig. 3

Choose System Language:

- 1. Get into Settings, then click "Language & input" (Fig. 1)
- 2. Click "Language", then you can choose the system language accordingly (Fig. 2)

	∎ 1650 ₽ Q. ← Language & input	e∎tnast ≌ete a Q, –	2 1 16 C
Settings Weekes & hetworks			¢
Writing & other that	Language English (United States)	Mrkaans	
W-Fi Bluetooth	Spell checker Android Spall Checker (4/05 ¹)	Azərbaycan	
O Data usage ···· More	Personal dictionary	Bahasa Indonesia	
Dentce	Keybeard & input methods	Bahasa Melayu	
🔮 USB 🔹 Display	Current Kingboard English (JVD - Android Kingboard (ADSP)	Curata	
🌲 Sound & notification 🗰 Storage	Android Keyboard (AOSP) English (JR)	Čeština	
🔒 Battery saver 🖉 Apps	Google Pleyin hout Chesse Prysi	Dansk	
📢 HDMI 🔛 ScreenshotSetting	Google vision typing Automatic	Deutsch (Deutschland)	
Personal	Japanese ME Japanese	Deutsch (Liechtenstein)	
Location B Security	Physical keyboard	Deutsch (Österneich)	
😫 Accounts 😨 Language & input	RAPOD Rapod 2.4G Wireless Device Default	Deutach (Bohweia)	
Backup & reset	Speech Voice input	Eest	
Epsten	Tent-to-speech output	English (Australia)	
Date & time Accessibility	Musse/trackpad	English (Canada)	
Printing O About device	Pointer speed	English (India)	
• Printing • About towney		English (New Zealand)	
		English (Singapore)	
		English (United Kingdorri)	
		English (United States)	
		Español (España)	
		Expañol (Estados Unidos)	
		Euskara	
		Filpino	
		Français (Belgique)	
		Français (Canada)	
		Français (France)	
		François (Duisse)	
0 0 0 0 Ø	© ⊐ O Þ ¢ Ģ	© □ ○ ▷ 0	
F i= 1	51- 2	51- 2	
Fig. 1	Fig. 2	Fig. 3	

Technical Specifications

	ITEM SPECIFICATIONS				
	LCD size	21.5″			
	Light source	WLED			
	Resolution	1920*1080 (pixels)			
	Brightness (typ.)/(min)	250cd/m² (typ.)			
	Contrast (typ.)	3000:1 (typ.)			
Danal	Response (ms)	18ms (typ.)			
Panel	Pixel pitch	0.24825x0.24825mm			
	Refresh rate	60Hz			
	Viewing angle	89°/89°/89°/89°			
	Color saturation	68%			
	Viewable area	476.64x268.11mm			
	Chromaticness	16.7M			
Power supply	Voltage	AC100-240V			
	Power Consumption	60W			
	Operating temperature	32~104 °F (0~40 °C)			
	Storage temperature	-4~140 °F (-20~60 °C)			
Environment	Storage humidity	10~90% RH Non-condensing			
	Operating humidity	10~90% RH Non-condensing			
	Maximum operating time (hrs/day)	18 hours			
	Operating system	Android 7.1			
	Processor	Quad-core ARM Cortex-A17, 1.8GHz			
	RAM	2G			
	Built-in memory	8G			
Functions	Decoding resolution	1080P FHD compatible			
	Playback mode	Yes			
	Supported Video Files	H.264, MKV, WMV9, MPEG1/2/4, HD DIVX, XDIV, RM/RMVB			
	Supported Photo Files	BMP/PNG/GIF/JPEG			

	Supported Audio files	MP3, WMA, WAV, EAAC+, MP2 dec, Vorbis (Ogg), AC3, FLAC, APE, BSAC;		
Functions	RTC (real-time clock)	Yes		
	Schedule power on/off	Yes		
	System update	Yes		
	App installation	Support download and installation		
	Ethernet (RJ45)	N/A		
	HDMI	N/A		
1/O interferen	VGA	N/A		
I/O interfaces	Headset	N/A		
	USB2.0	2		
	SIM	N/A		
	Machine Weight	26kg		
	Carton Weight	32kg		
Structure	Machine Size	799.4x171.2x384.5mm		
	Carton Size	940x320x620mm		
	Shell material	Metal		
	Shell color	Silver/black		
Language	OSD	English		

Troubleshooting the Digital Signage				
Issue	Probable Cause	Solutions		
• No picture or sound	 Unit not plugged into wall outlet Power cord not properly connected to the terminal on the back of the unit. Unit not powered on Wall outlet not working 	 Check that the unit is plugged into wall outlet. Confirm that the power cord is connected to the terminal on the back of the unit. Turn the on/off toggle switch located on the back of the unit, lower center, to the "on" position. Unplug unit, wait 20 seconds, plug unit back into outlet and try again. Make sure that outlet is working by plugging in a different electrical device. If all of the above have been checked and the issue is not resolved, contact a customer service representative. 		
 No sound (but picture is working) 	 Volume not adjusted on the remote control. Content/Video does not have sound. Content format is not compatible. Speakers do not work. 	 Adjust volume using the remote control Confirm content is one of the following compatible formats: AVI, MPEG4, WMV, MKV, flv, MP3, MP4, MOV. If unit is connected to Wi-Fi, go to YouTube and play video that has sound Unplug unit, wait 20 seconds, plug unit back into outlet and try again. Try playing the content on a different device (smart phone, computer or tablet) If all of the above have been checked and the issue is not resolved, contact a customer service representative. 		
 No picture (but sound is working) 	 Content file damaged. Content format is not compatible. Screen damaged or defective. 	 Confirm content is one of the following compatible formats: AVI, MPEG4, WMV, MKV, flv, MP3, MP4, MOV. Try playing the content on a different device (smart phone, computer or tablet) Unplug unit, wait 20 seconds, plug unit back into outlet and try again. If all of the above have been checked and the issue is not resolved, contact a customer service representative. 		
 Remote control not working 	 Batteries not inserted properly. Batteries are dead. Standing too close or too far from the unit. 	 Check that battery is inserted properly with positive and negative orientation. Insert new batteries. Stand within 1 foot of the front of the unit and point the remote directly at the sensor (green dot) If all of the above have been checked and the issue is not resolved, contact a customer service representative. 		

		1
 No Wi-Fi signal Parts missing or Damaged 	 Wi-Fi is not turned on in product settings. Wi-Fi is not connected to a network Low or no signal from the router Antenna is missing or not pointed upward. Damaged PC board 	 Check that Wi-Fi is turned on in settings Click the settings icon from the Android home screen. Click "Wi-Fi". Click the on/off icon in the upper right hand corner to turn on Wi-Fi. Click the on/off icon in the upper left hand side. Then select your Wi-Fi network Confirm that the antenna is in place and pointed upward. Check that other devices are receiving the signal. If other devices are not receiving the Wi-Fi signal, please contact your internet service provider. Unplug or reset the router and wait for 20 seconds. Restart the router and check. If all of the above have been checked and the issue is not resolved, contact a customer service representative.
 Having problems with installing software or getting content to play Cannot upload content 	 replacements) Did you purchase the DisplayIt!Xpress software from Displays2go? Did the customer purchase or downloaded another 3rd party software onto the product? Content format is not compatible. Content files are too large. Port being used is defective App being used to play content is defective. Android board is defective. 	 If you purchased DisplayIt!Xpress software from Displays2go or from Best Wave directly, please contact Best Wave at support@bestwave. com or (480)368-8900 ext. 2 If you purchased or downloaded another 3rd party software onto the product, please contact the 3rd party software company's customer support for assistance. Confirm content is one of the following compatible formats: AVI, MPEG4, WMV, MKV, flv, MP3, MP4, MOV. Confirm file size is less than available space. If all of the above have been checked and the issue is not resolved, contact a customer service representative.
 Issues using pre-installed apps 	 Mistake in storing content to NAND Flash (shown on pg. 11) 	 SlideShow App steps Explorer > Select USB > Select Multi > highlight files > Editor > Select

	1	
	App is defective	Copy > Home > NAND > MediaFolder >
	Android board is defective.	Images> Editor > Paste
		 Open SlideShow app and select
		desired transitions, slide time and
		looping > Play
		MX Player steps > Follow same steps as
		SlideShow App > MediaFolder > Video >
		Editor > Paste.
		 Open MX Player and select video to
		play.
		 Loop video: While the video is
		playing, click on the video and there
		should be 3 dots in the top right
		corner. Click on the 3 dots > play >
		check desired Loop option
		If all of the above have been checked and
		the issue is not resolved, contact a customer
		service representative.
• If Keypad doesn't	Batteries need to be replaced	Replace batteries
work.	Batteries incorrectly inserted	 Check if batteries are inserted correctly
		Need to replace the keypad locker
• If battery booster	Batteries need to be replaced	Contact customer service representative
doesn't work		
Locker not	 Cable malfunction 	Contact customer service for replacement
charging		cable
2		

Cleaning and Maintenance

1. Avoid strong vibration or impact on the product.

2. Keep the product dry to avoid possible damage by moisture.

3. Don't place the product under direct sunlight which may shorten the service life of the screen.

4. Clean screen and product by using a glass cleaner.

5. If the product will not be used for a long time, pull out the power cord to prevent the internal short circuit or other potential dangers.

Names and Contents of Toxic and Hazardous Substances or Elements in the Product

Part name		Toxic and hazardous substances or elements				
	Pb	Hg	Cd	Cr ⁶⁺	PBB	PBDE
Display		0	0	0	0	0
Shell	0	0	0	0	×	×
Circuit board assembly *		0	0	0	0	0
Wires	0	0	0	0	0	0
Metal parts	0	0	0	0	0	0
Packaging materials*	0	0	0	0	0	0
Remote control		0	0	0	0	0
Speaker		0	0	0	0	0
Accessories*	0	0	0	0	0	0

*: Circuit board assembly includes PCB and the electronic elements thereof;

Packaging materials include packaging box, styrofoam, etc.;

Other accessories include instruction manual.

O: the content of the toxic and hazardous substances or elements in the part is lower than the limit specified in GB/T 26572-2011 standard.

X: the content of the toxic and hazardous substances or elements in the part is higher than the limit specified in GB/T 26572-2011 standard.

The table shows that the machine contains harmful substances inside. The data is provided by material suppliers and verified by the company according to the material type. Some materials contain harmful substances that can't be replaced in present technology. We are dedicated to improving this.

The EFUP of the product is ten years. The pollution control label is shown on the right.

The EFUP is valid only when the user operates in the normal conditions specified in the manual herein.

Waste Electrical and Electronic Products Recycling and Disposal Regulations

To protect the earth, if you do not need this product or its service life expires, please abide by your local Waste Electrical and Electronic Products Recycling and Disposal Regulations or send it to qualified local manufacture for recycling.

This Manual is for reference only and is subject to change without prior notice.

Visit medifor.com for the latest product information and User Manual updates.